



Position of Parts in Instrument Panel

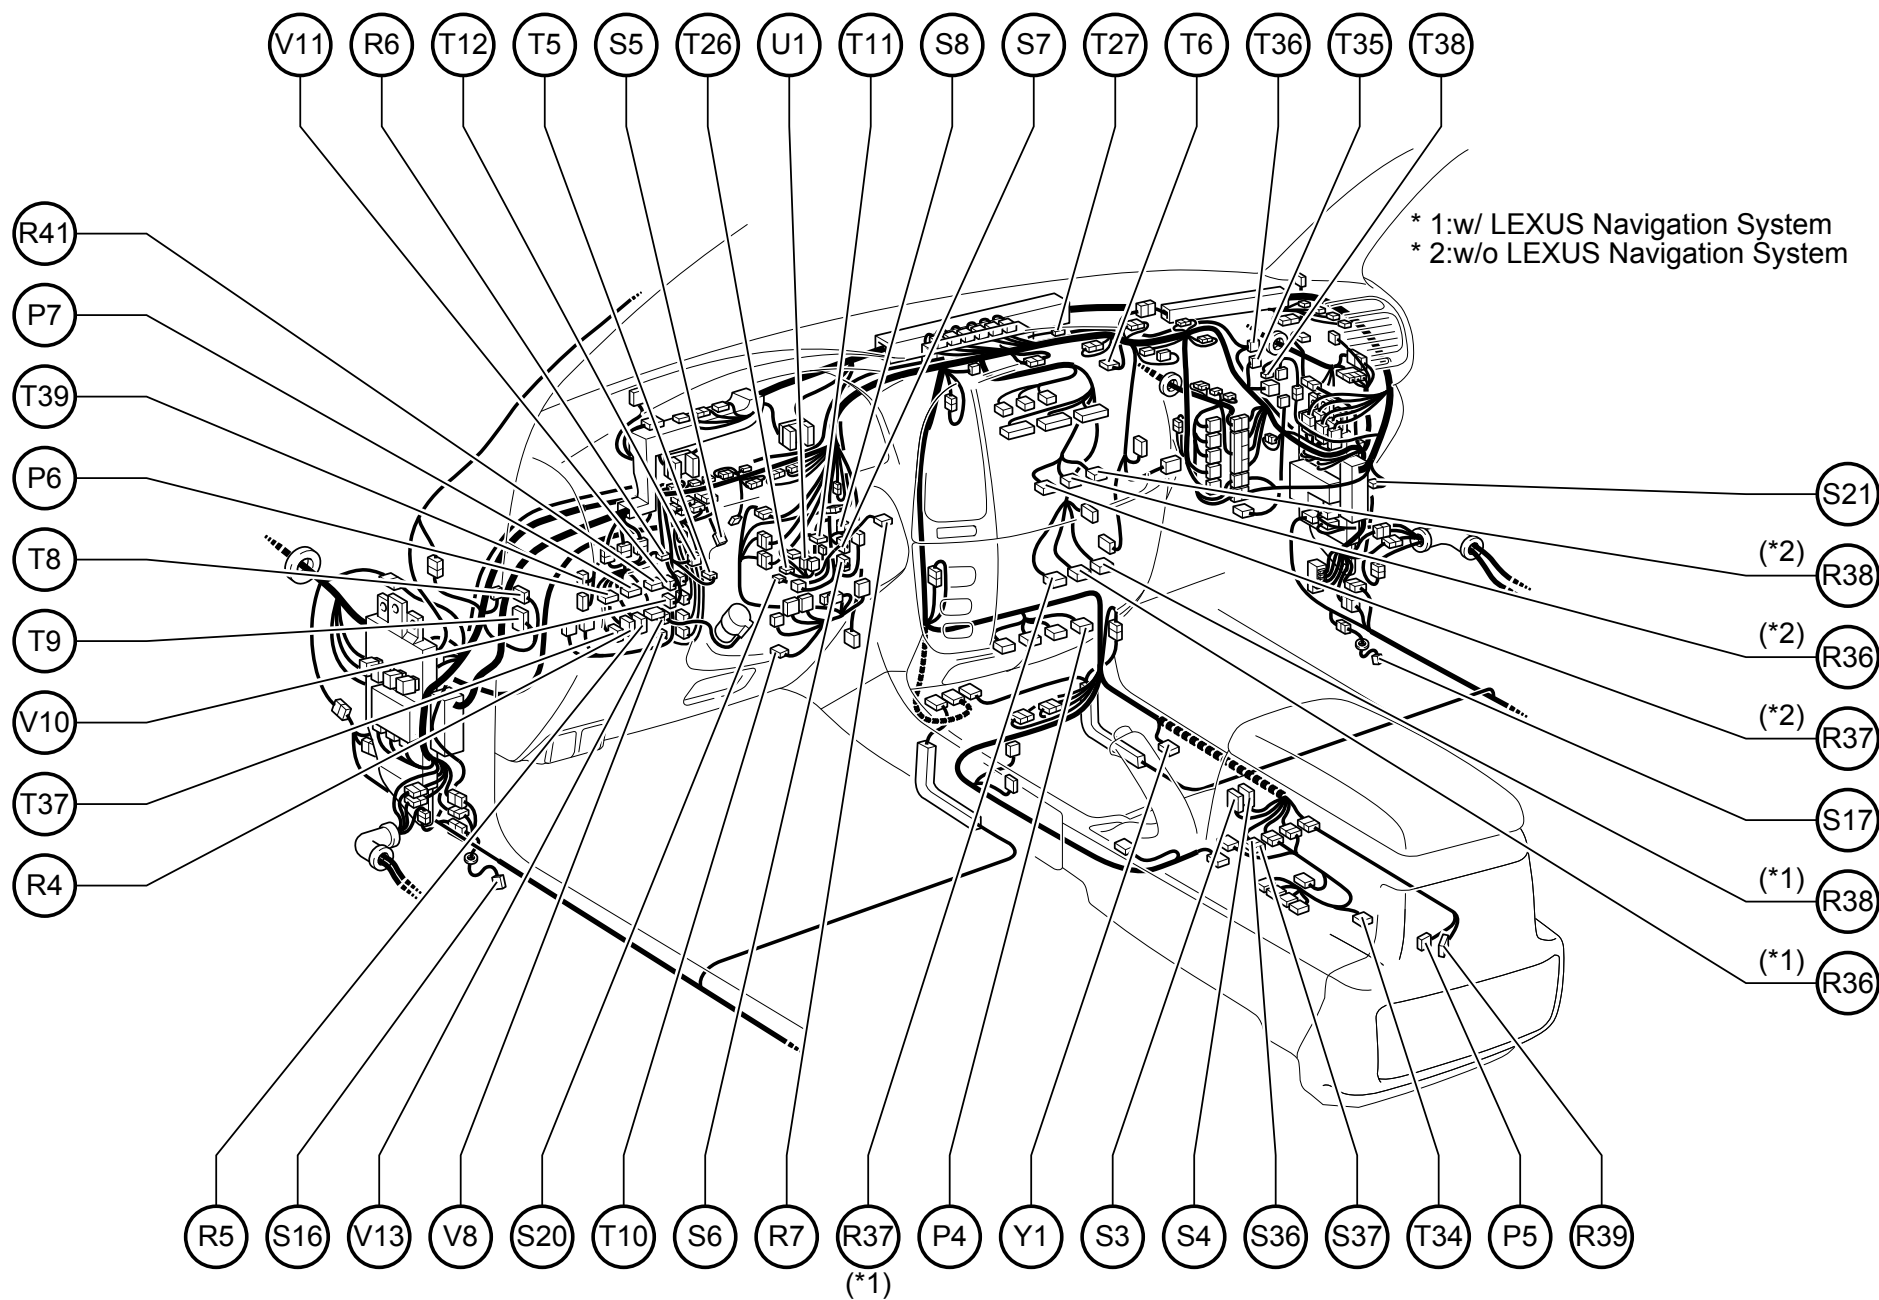

P	4	Power Outlet (Front)
P	5	Power Outlet (Rear Console Box)
P	6	Power Quarter Window SW LH
P	7	Power Quarter Window SW RH
R	4	Remote Control Mirror SW
R	5	Remote Control Mirror SW
R	6	Rheostat
R	7	Room Temp. Sensor (Front)
R	36	Radio and Player
R	37	Radio and Player
R	38	Radio and Player
R	39	Rear Seat Audio Controller
R	41	Roll Sensing of Curtain Shield Airbags Cutoff SW
S	3	Seat Heater SW (Driver's Seat)
S	4	Seat Heater SW (Front Passenger's Seat)
S	5	Stop Light SW
S	6	Suspension Control ECU
S	7	Suspension Control ECU
S	8	Suspension Control ECU
S	16	Side Step Light LH and Outer Foot Light LH
S	17	Side Step Light RH and Outer Foot Light RH
S	20	Spot Light Illumination LH
S	21	Spot Light Illumination RH
S	36	Short Connector (Mayday ECU)
S	37	Short Connector (Mayday ECU)
T	5	Telescopic Motor
T	6	Theft Deterrent ECU
T	8	Tilt and Telescopic ECU
T	9	Tilt and Telescopic ECU
T	10	Tilt Motor
T	11	Ignition Key Cylinder Light , Transponder Key Amplifier
T	12	Turn Signal Flasher
T	26	Towing Brake Controller
T	27	Transponder Key Computer
T	34	Telephone Antenna
T	35	Tire Pressure Warning ECU and Receiver
T	36	Tire Pressure Warning ECU and Receiver
T	37	Tire Pressure Warning Reset SW
T	38	Tire Pressure Warning Select SW
T	39	Translate ECU
U	1	Unlock Warning SW
V	8	VSC Warning Buzzer
V	10	VGRS ECU
V	11	VGRS ECU
V	13	VGRS Actuator , VGRS ECU
Y	1	Yaw Rate Sensor

Position of Parts in Instrument Panel

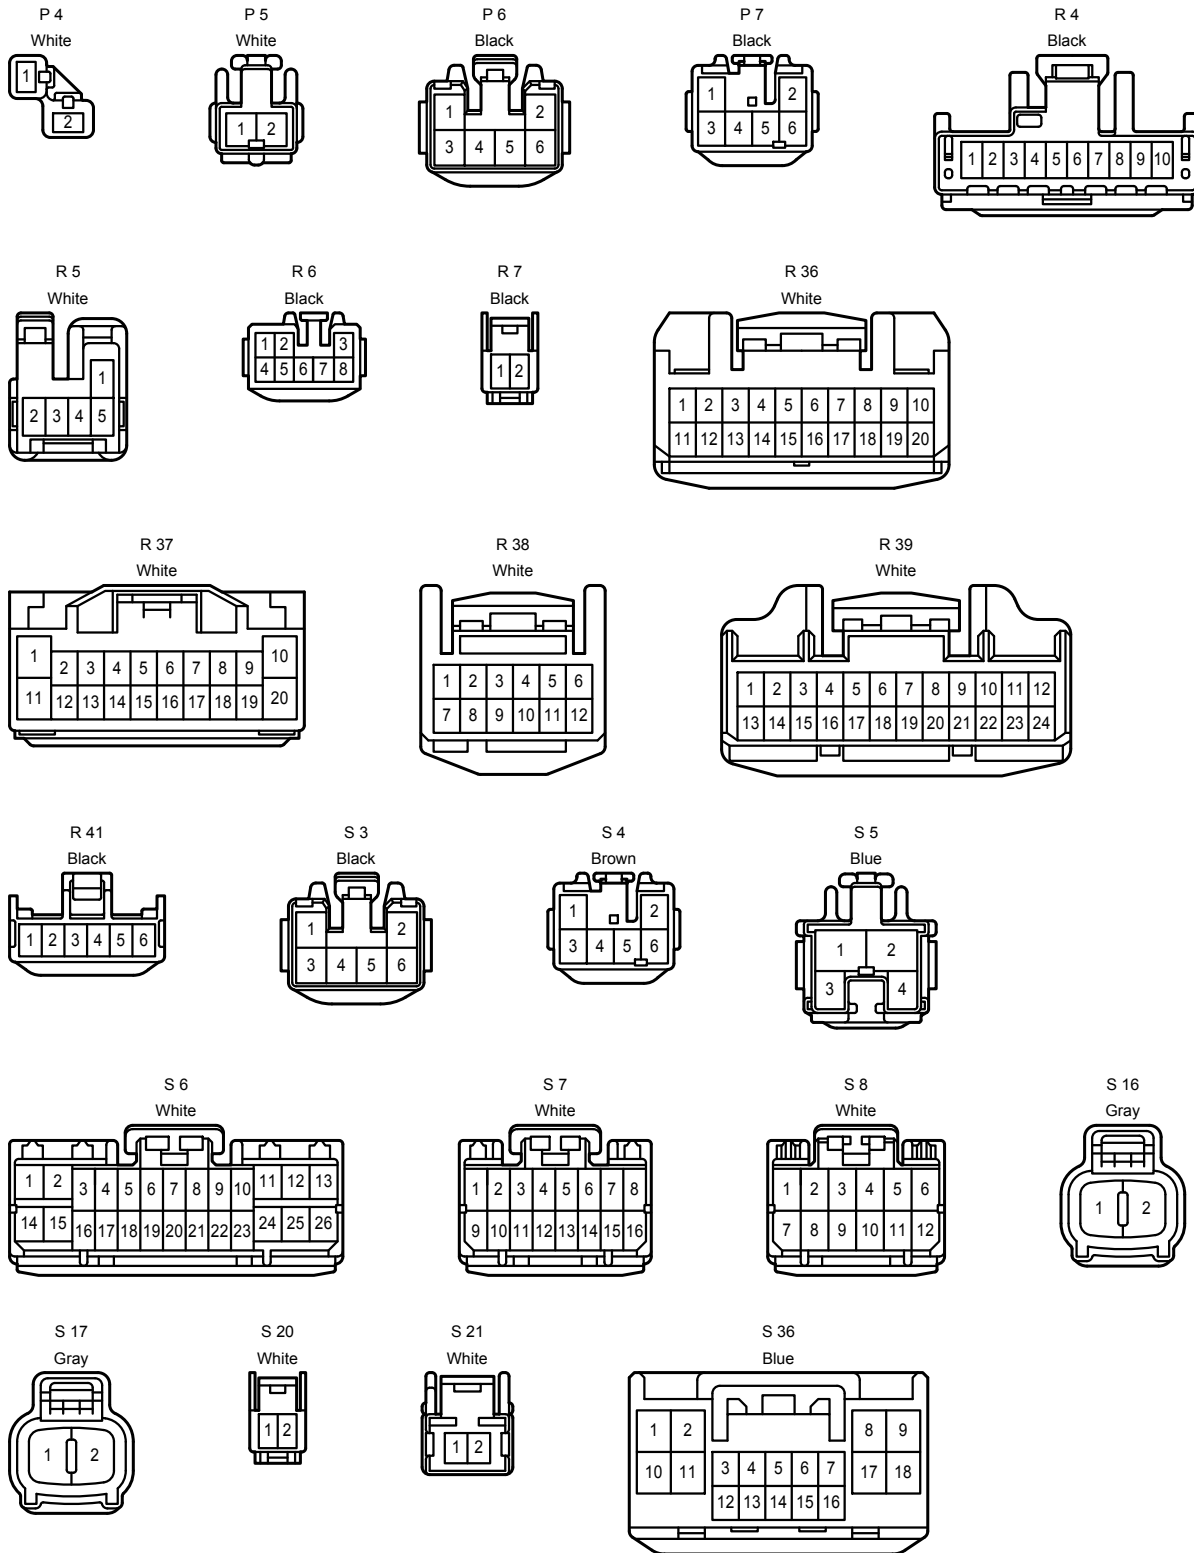

Position of Parts in Instrument Panel

