


Position of Parts in Engine Compartment

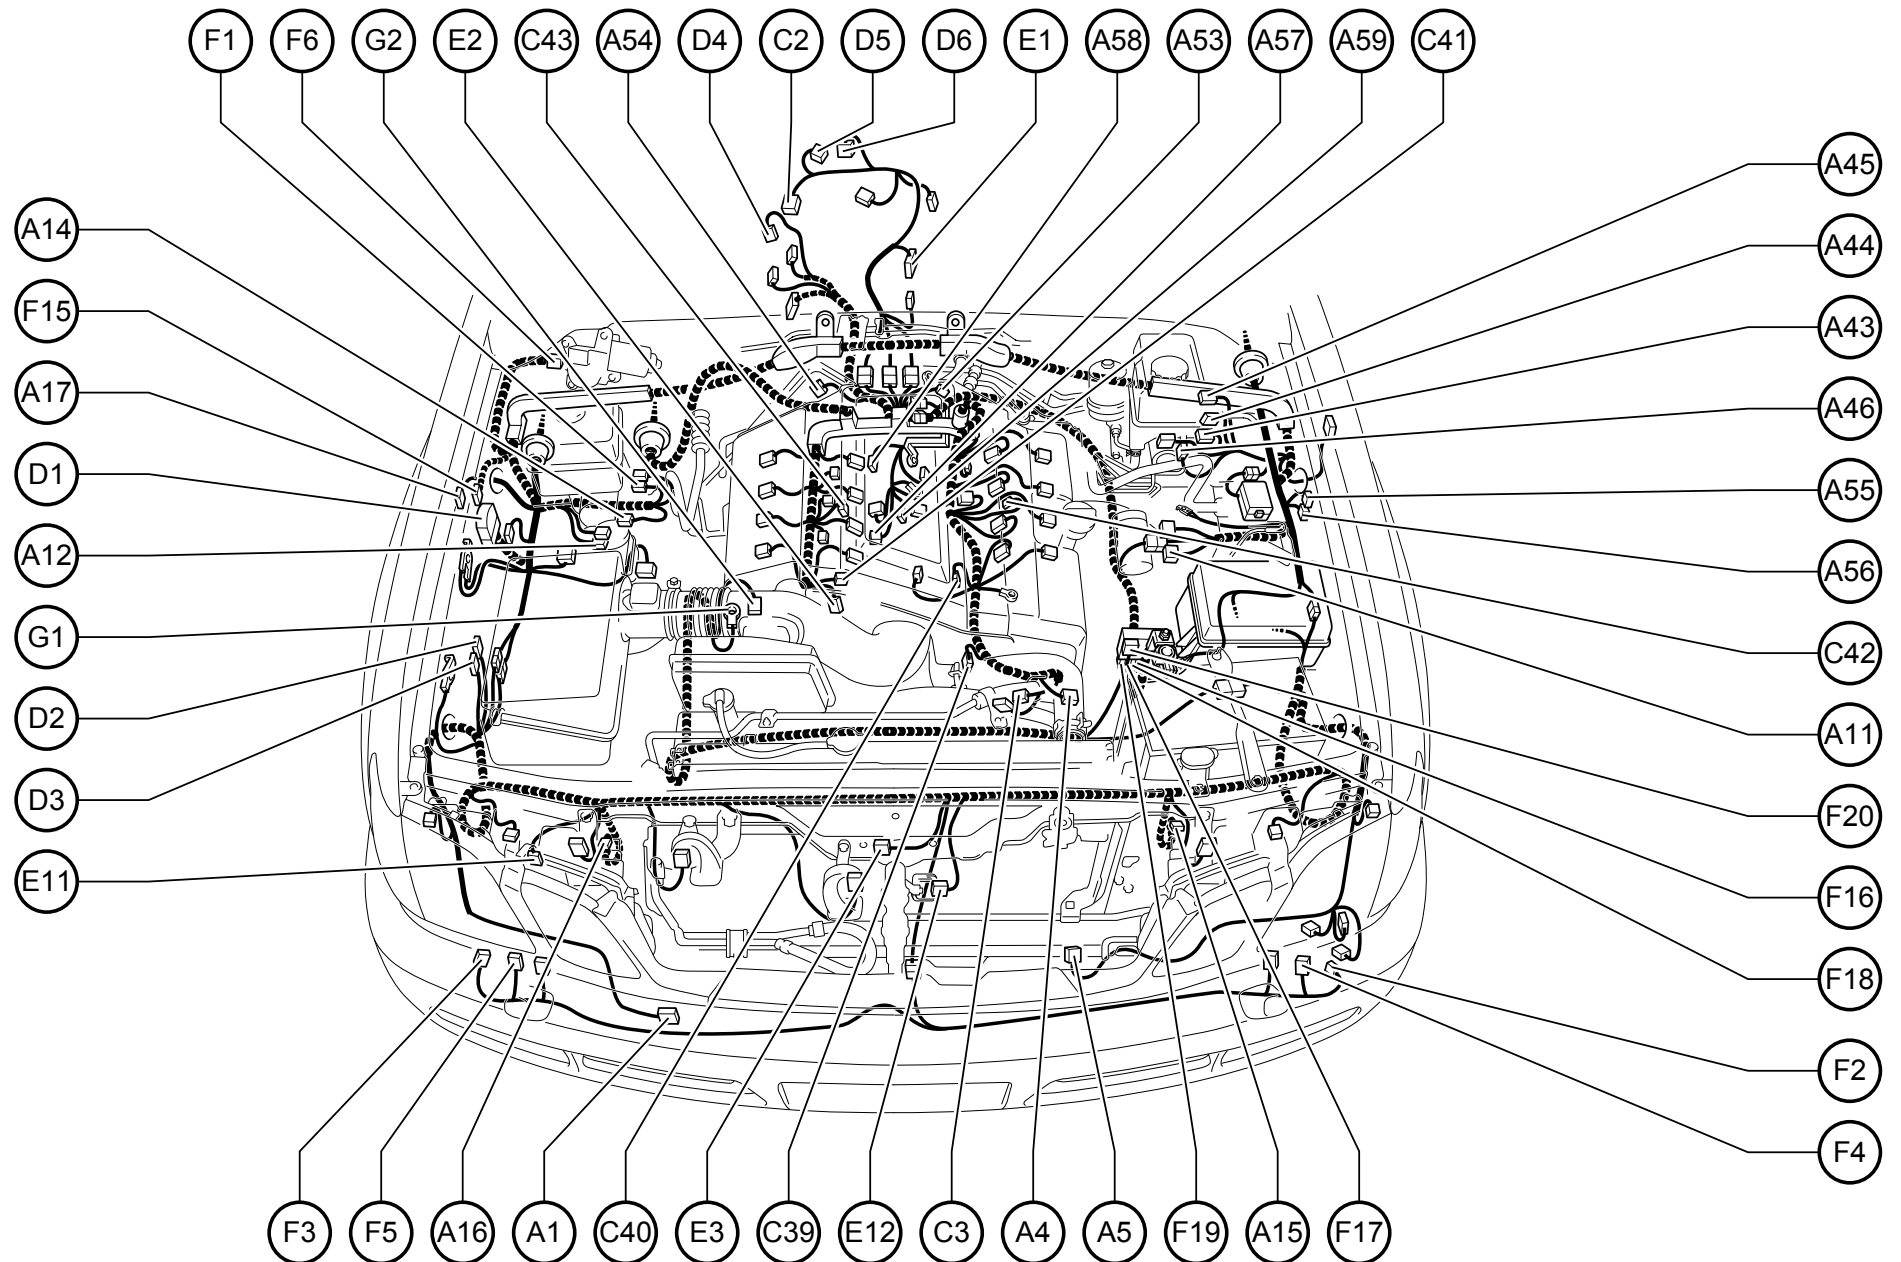

- A 1 A/C Ambient Temp. Sensor
- A 4 A/C Magnetic Clutch , A/C Lock Sensor
- A 5 Pressure SW
- A 11 ABS Speed Sensor Front LH
- A 12 ABS Speed Sensor Front RH
- A 14 AHC Pump Motor
- A 15 Airbag Sensor Front LH
- A 16 Airbag Sensor Front RH
- A 17 Auto Antenna Motor
- A 43 ABS & BA & TRAC & VSC Actuator
- A 44 ABS & BA & TRAC & VSC Actuator
- A 45 ABS & BA & TRAC & VSC Actuator
- A 46 ABS & BA & TRAC & VSC Actuator
- A 53 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- A 54 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- A 55 Air Injection Control Driver
- A 56 Air Injection Control Driver
- A 57 Air Pressure Sensor
- A 58 Air Pump
- A 59 Air Switching Valve

- C 2 Center Diff. Lock Control Motor
- C 3 Crankshaft Position Sensor
- C 39 Camshaft Position Sensor
- C 40 Camshaft Timing Oil Control Valve (LH)
- C 41 Camshaft Timing Oil Control Valve (RH)
- C 42 VVT Sensor (Bank 1)
- C 43 VVT Sensor (Bank 2)


- D 1 Data Link Connector 1
- D 2 Daytime Running Light Relay No.3
- D 3 Daytime Running Light Relay No.3
- D 4 Detection SW (Center Diff. Lock)
- D 5 Detection SW (Transfer L Position)
- D 6 Detection SW (Transfer Neutral Position)

- E 1 Electronically Controlled Transmission Solenoid
- E 2 Engine Coolant Temp. Sensor
- E 3 Engine Hood Courtesy SW
- E 11 Engine Room Relay Block
- E 12 Exhaust Gas Sensor

- F 1 Fluid Pressure Sensor
- F 2 Front Fog Light LH
- F 3 Front Fog Light RH
- F 4 Front Turn Signal Light LH
- F 5 Front Turn Signal Light RH
- F 6 Front Wiper Motor
- F 15 Fuel Pump Resistor
- F 16 Fusible Link Block
- F 17 Fusible Link Block
- F 18 Fusible Link Block
- F 19 Fusible Link Block
- F 20 Fusible Link Block

- G 1 Generator
- G 2 Generator

Position of Parts in Engine Compartment

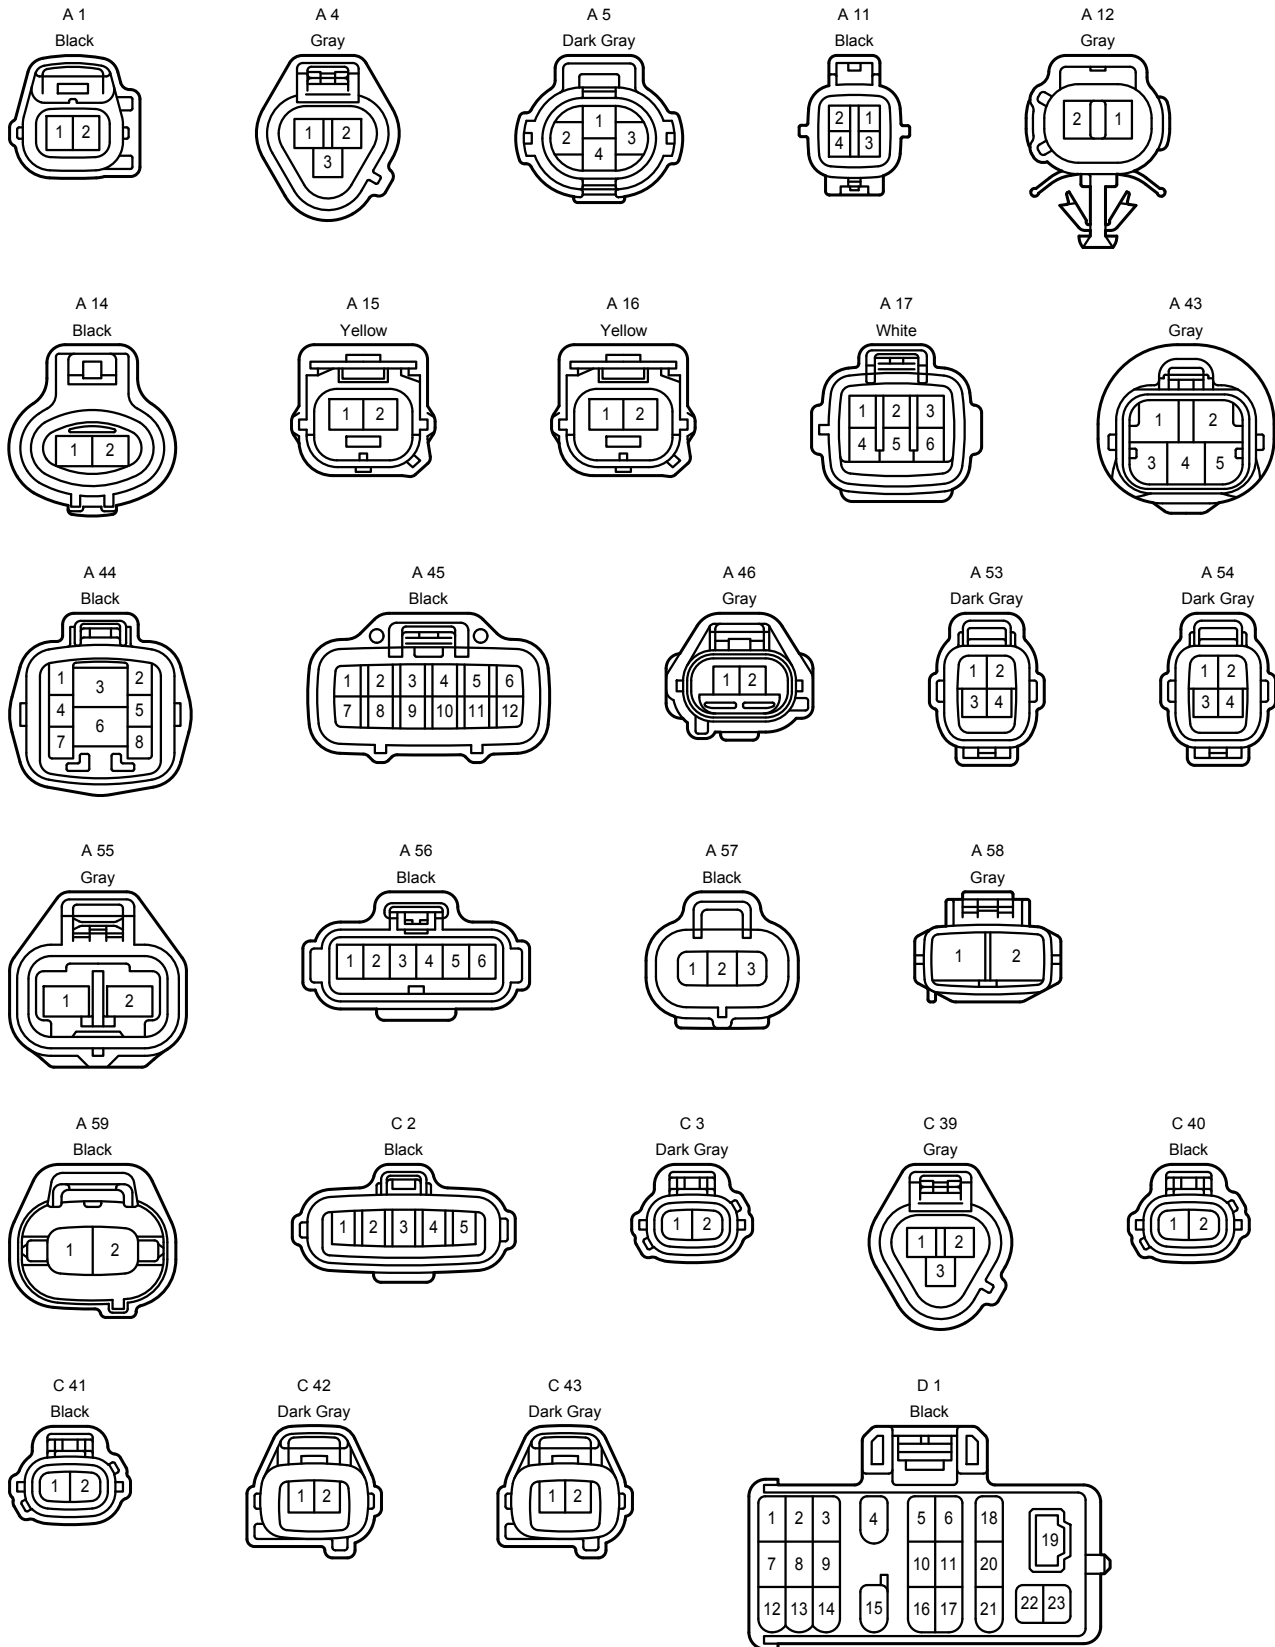

Position of Parts in Engine Compartment

