


Position of Parts in Engine Compartment

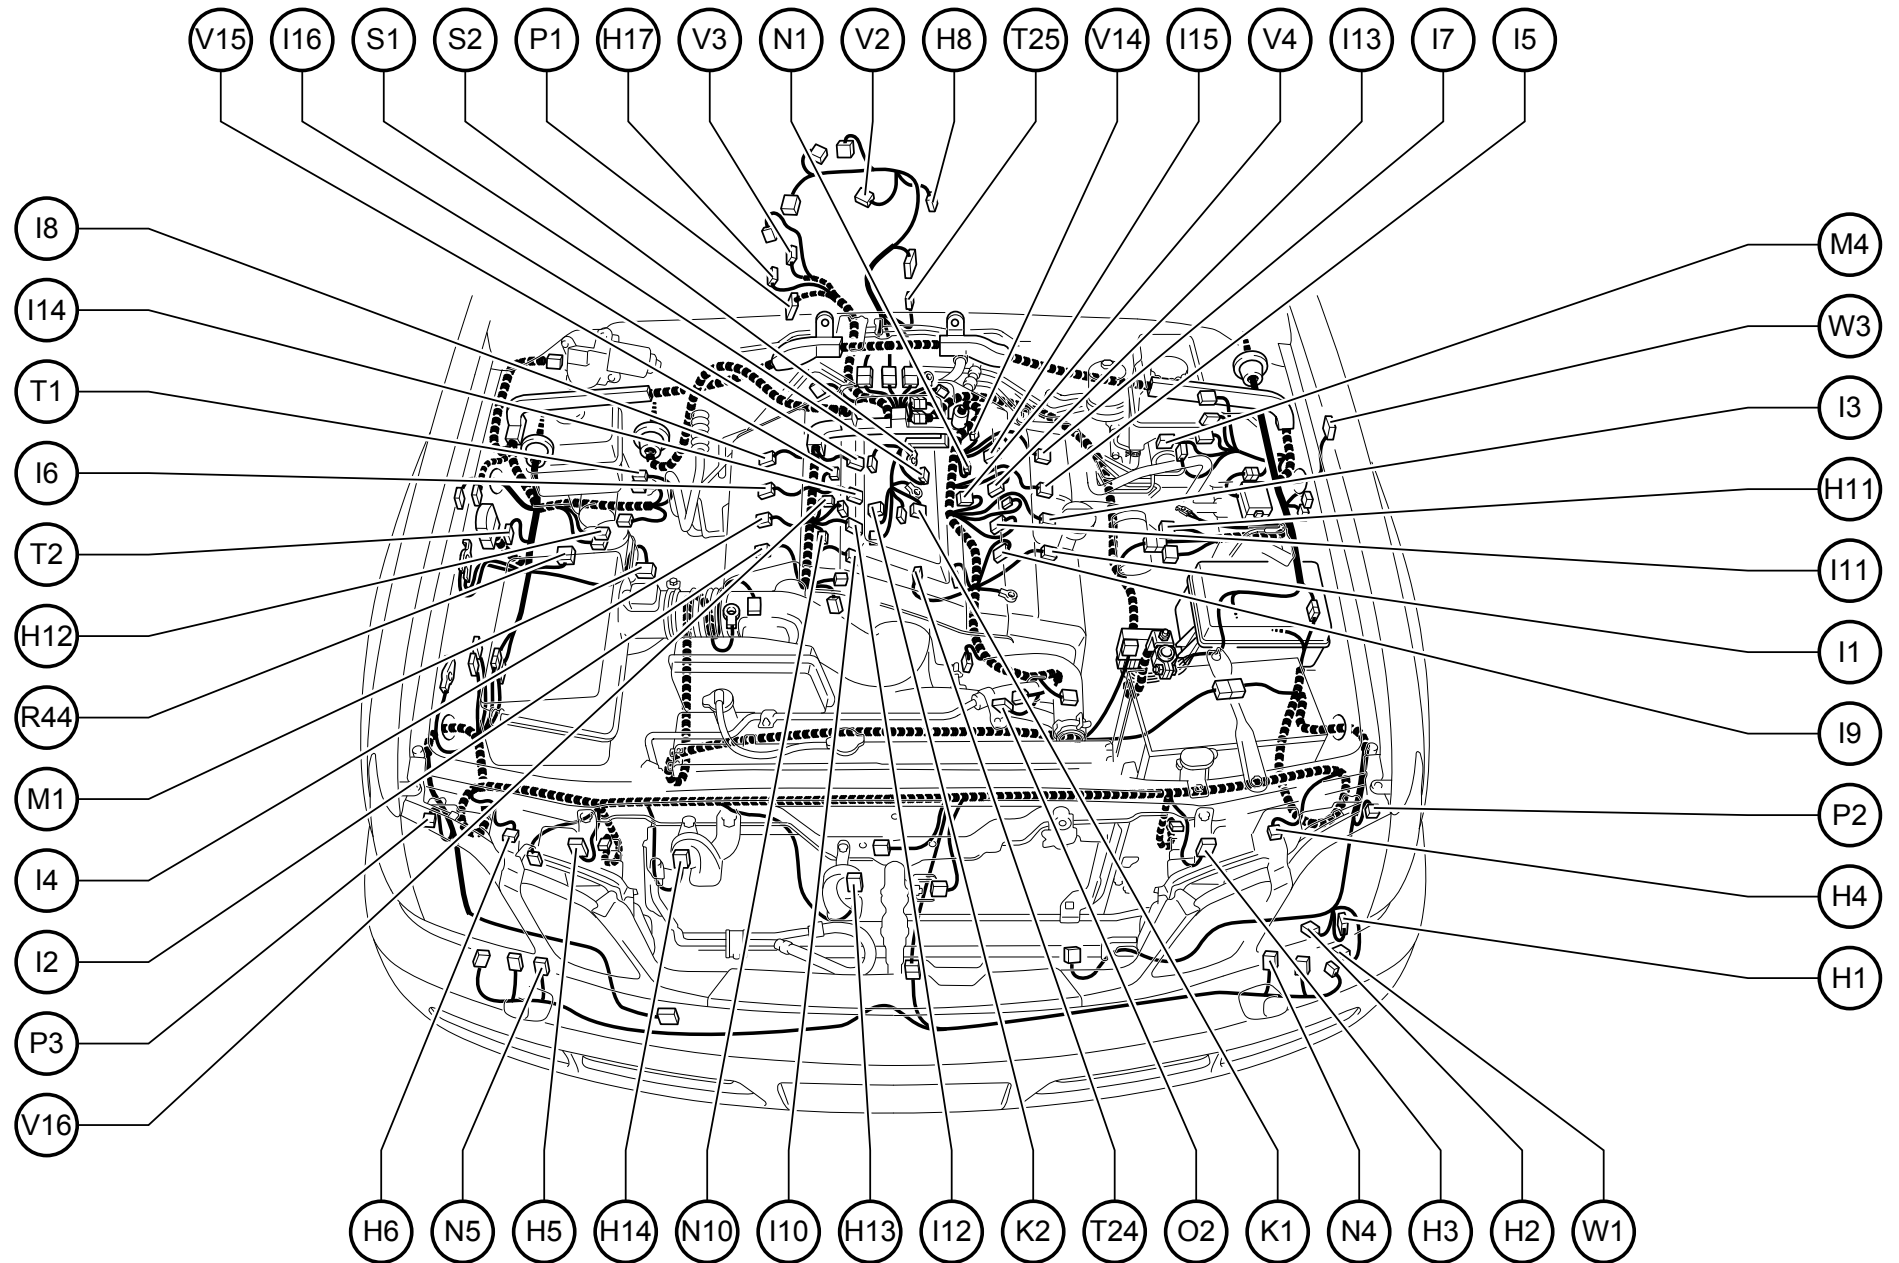

H 1 Headlight Cleaner Control Relay
H 2 Headlight Cleaner Motor
H 3 Headlight LH (High)
H 4 Headlight LH (Low)
H 5 Headlight RH (High)
H 6 Headlight RH (Low)
H 8 Heated Oxygen Sensor (Bank 1 Sensor 2)
H 11 Height Control Sensor Front LH
H 12 Height Control Sensor Front RH
H 13 Horn LH
H 14 Horn RH
H 17 Heated Oxygen Sensor (Bank 2 Sensor 2)

I 1 Ignition Coil and Igniter No.1
I 2 Ignition Coil and Igniter No.2
I 3 Ignition Coil and Igniter No.3
I 4 Ignition Coil and Igniter No.4
I 5 Ignition Coil and Igniter No.5
I 6 Ignition Coil and Igniter No.6
I 7 Ignition Coil and Igniter No.7
I 8 Ignition Coil and Igniter No.8
I 9 Injector No.1
I 10 Injector No.2
I 11 Injector No.3
I 12 Injector No.4
I 13 Injector No.5
I 14 Injector No.6
I 15 Injector No.7
I 16 Injector No.8

K 1 Knock Sensor (Bank 1)
K 2 Knock Sensor (Bank 2)

M 1 Mass Air Flow Meter
M 4 Master Cylinder Pressure Sensor

N 1 Noise Filter (Ignition)
N 4 Night View Projector LH
N 5 Night View Projector RH
N 10 Noise Filter (Ignition)

O 2 Oil Pressure Sender

P 1 Park/Neutral Position SW
P 2 Parking Light LH
P 3 Parking Light RH

R 44 Running Light Resistor

S 1 Starter
S 2 Starter

T 1 Temp. Sensor (AHC)
T 2 Theft Deterrent Horn
T 24 Throttle Control Motor and Sensor
T 25 Turbine Speed Sensor


V 2 Vehicle Speed Sensor (Combination Meter)
V 3 Vehicle Speed Sensor (Electronically Controlled Transmission)

Position of Parts in Engine Compartment

- V 4 VSV (Purge)
- V 14 VSV (ACIS)
- V 15 VSV (Air Switching Valve No.1)
- V 16 VSV (Air Switching Valve No.2)

- W 1 Washer Level Warning SW , Washer Motor
- W 3 Wireless Door Lock Buzzer

Position of Parts in Engine Compartment

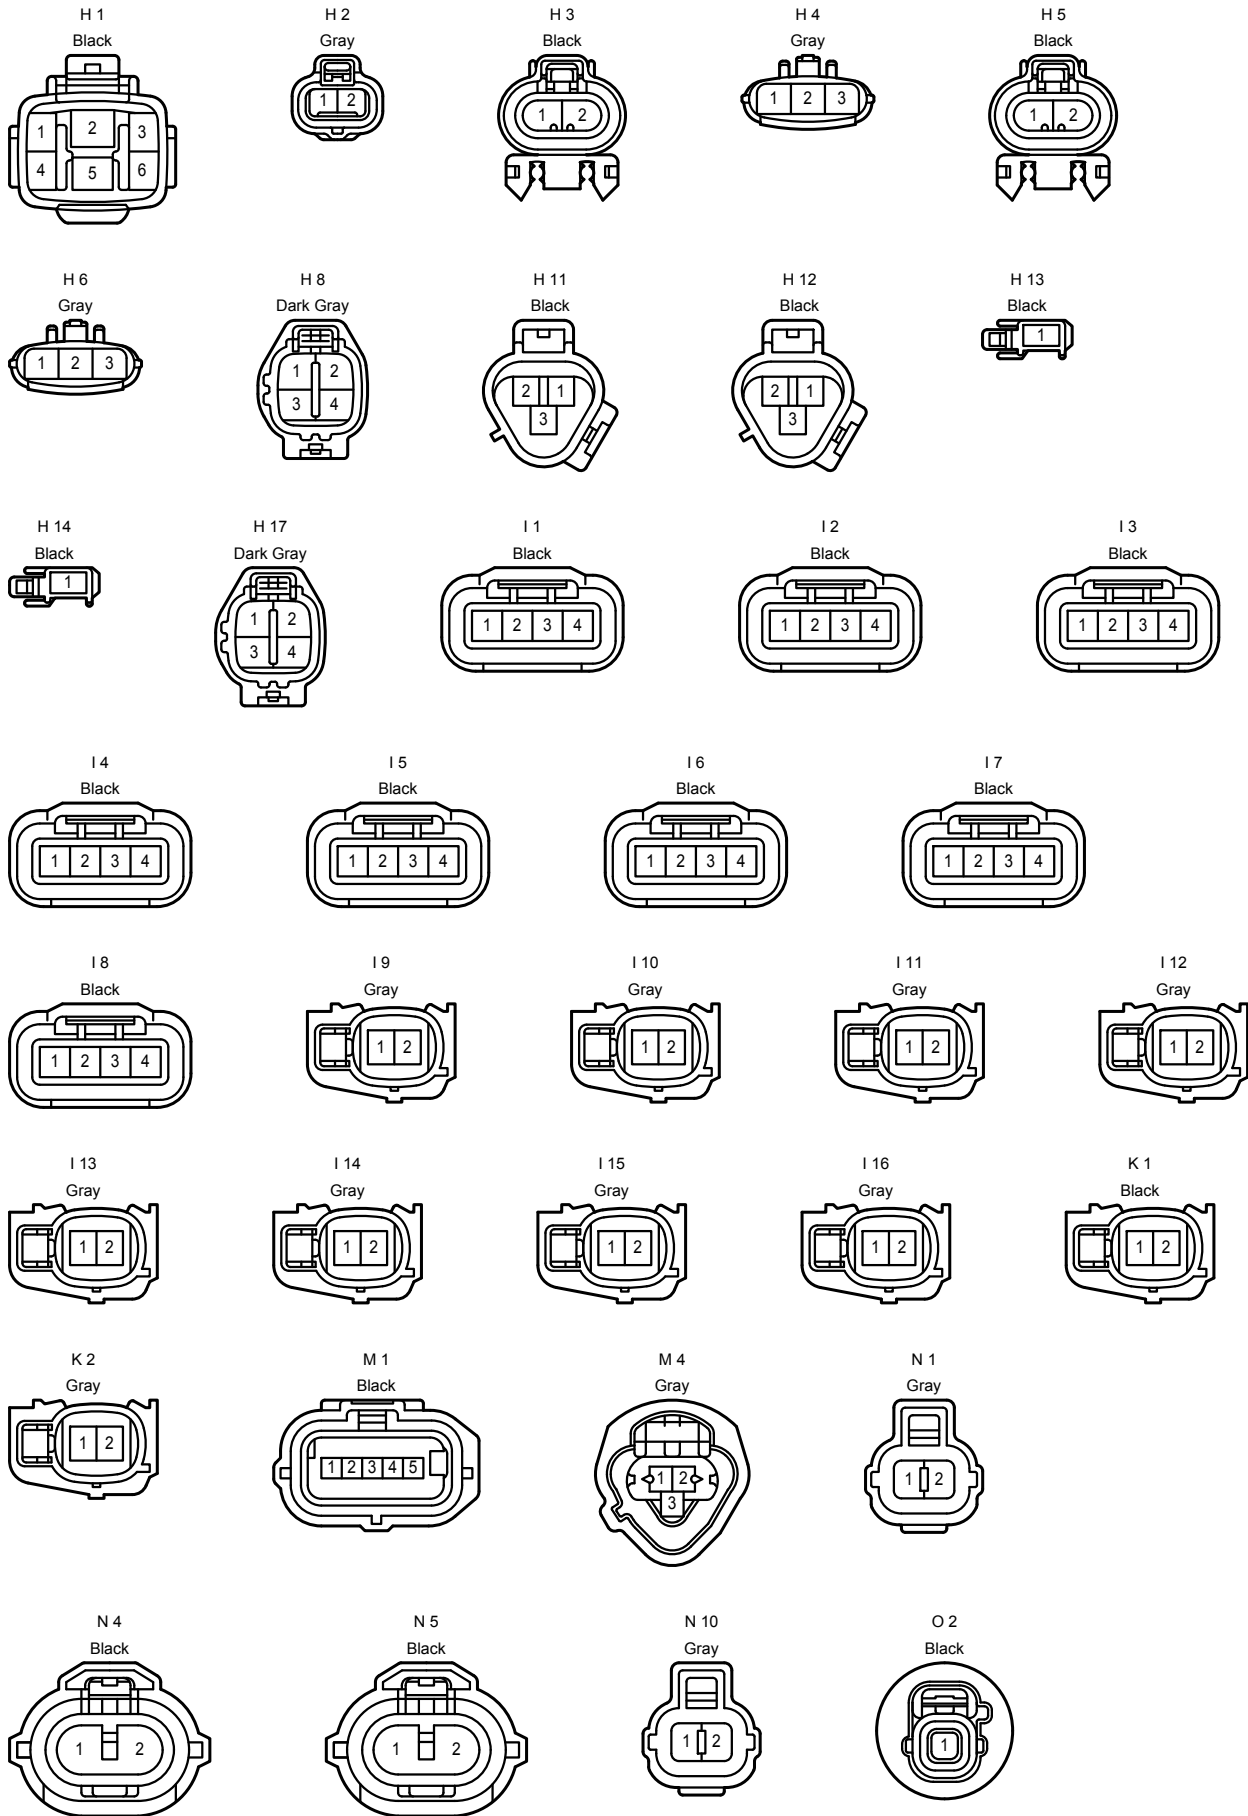

Position of Parts in Engine Compartment

