


Position of Parts in Seat

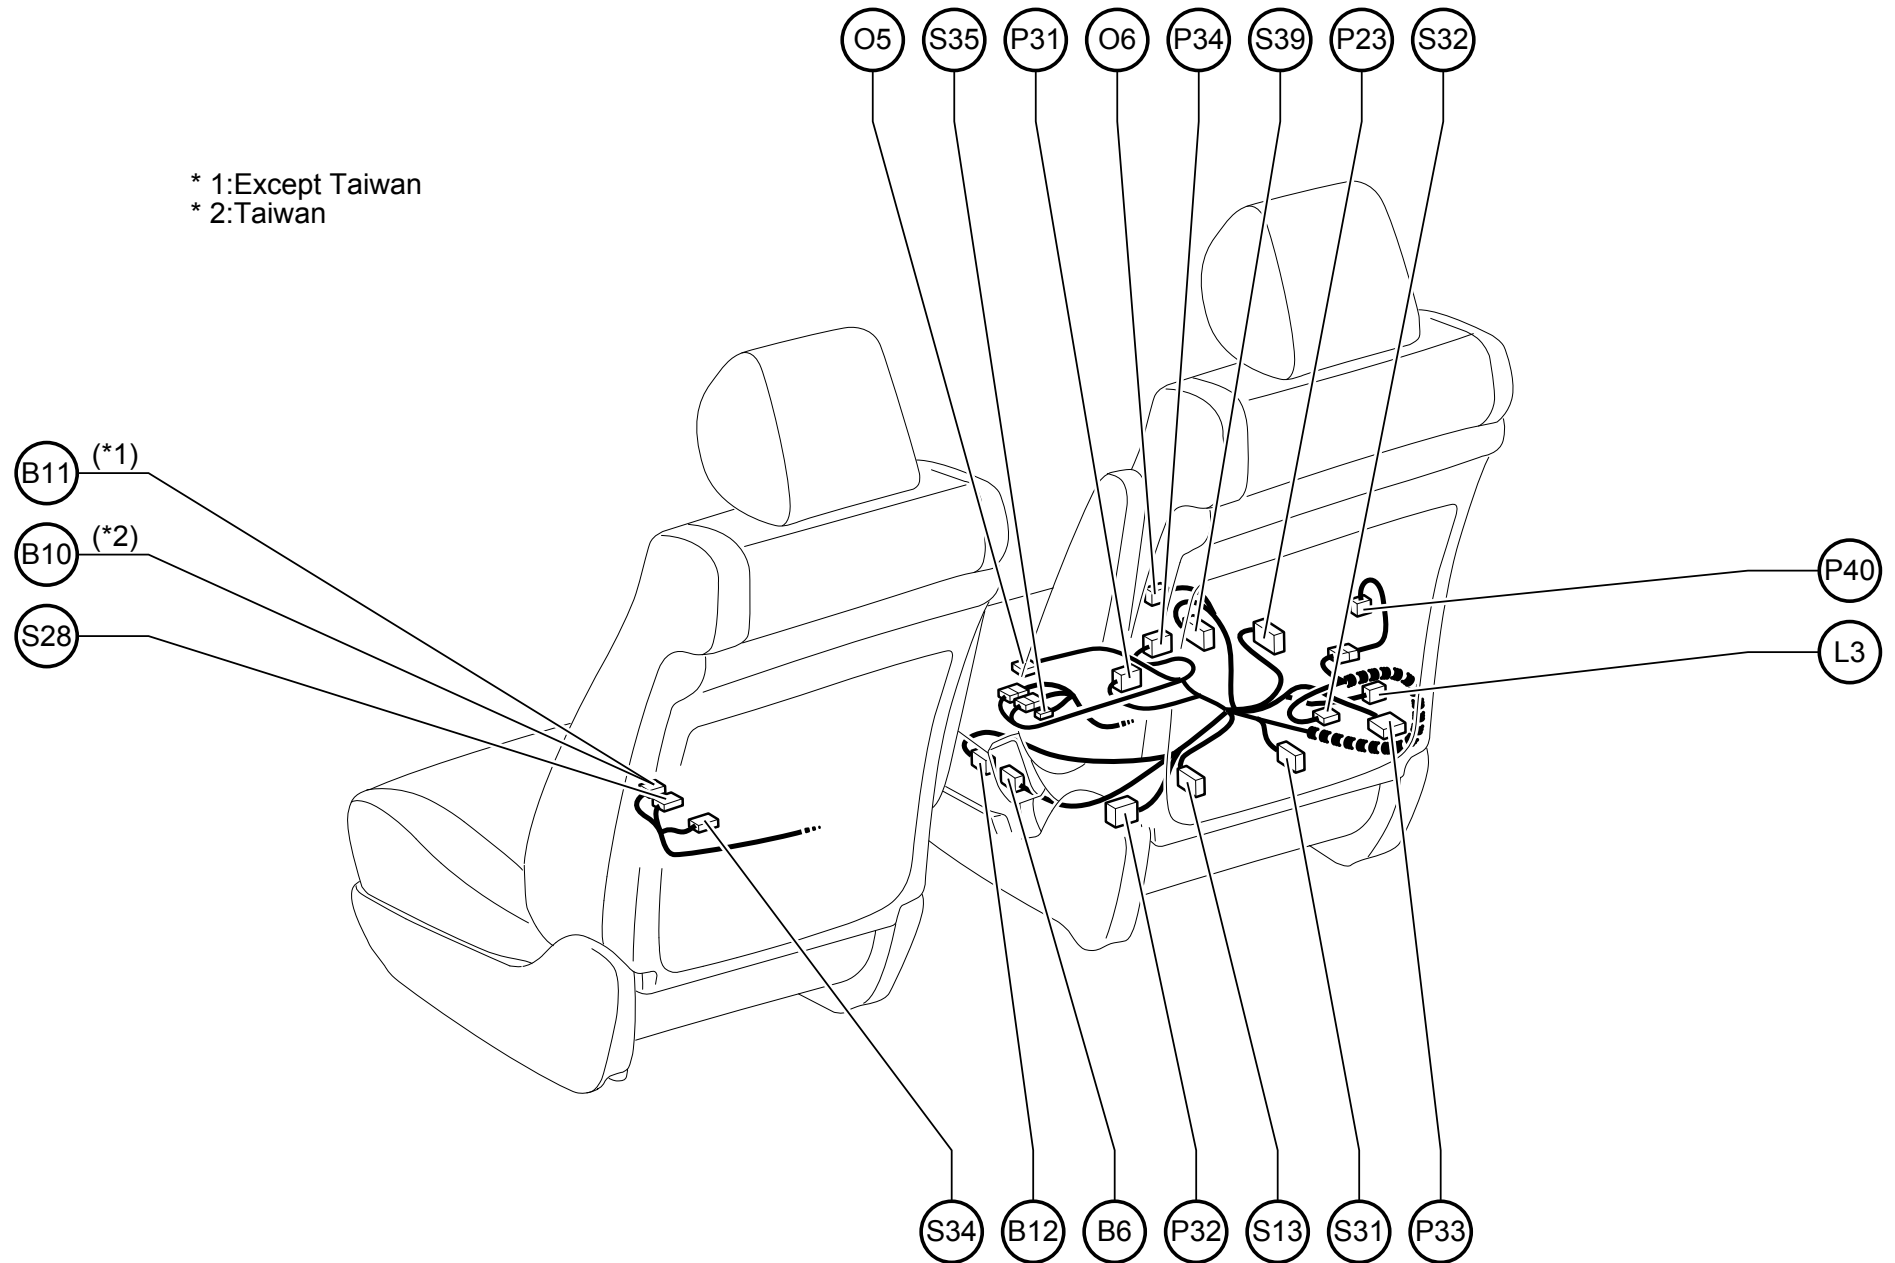

- B 6 Buckle SW RH
- B 10 Buckle SW LH , Seat Position Sensor
- B 11 Buckle SW LH , Seat Position Sensor LH
- B 12 Buckle SW RH

- L 3 Lumbar Support Control SW (Front Passenger's Seat)

- O 5 Occupant Classification ECU
- O 6 Occupant Classification Sensor

- P 23 Power Seat Control SW (Front Passenger's Seat)
- P 31 Power Seat Motor (Front Passenger's Seat Front Vertical Control)
- P 32 Power Seat Motor (Front Passenger's Seat Lifter Control)
- P 33 Power Seat Motor (Front Passenger's Seat Reclining Control)
- P 34 Power Seat Motor (Front Passenger's Seat Slide Control)
- P 40 Power Seat Motor (Front Passenger's Seat Lumbar Support Control)

- S 13 Seat Belt Warning Occupant Detection Sensor
- S 28 Seat ECU
- S 31 Seat Heater (Front Passenger's Seat Cushion)
- S 32 Seat Heater (Front Passenger's Seat)
- S 34 Side Airbag Squib LH
- S 35 Side Airbag Squib RH
- S 39 Seat Position Sensor RH

Position of Parts in Seat

