


F RELAY LOCATIONS

① : Engine Room R/B Assembly


○ : Engine Room J/B Assembly

Engine Compartment Left (See Page 20)

- * 1:DEFOG Relay
- * 2:SUB BATT Relay
- * 3:TOW TAIL Relay
- * 4:IG1 NO.5 Relay
- * 5:EFI NO.2 Relay
- * 6:DRL NO.3 or
RR A/C Relay
- * 7:ST Relay
- * 8:C/OPN Relay
- * 9:SECURITY
HORN Relay
- * 10:FR FOG Relay
- * 11:PTC HTR1 Relay
- * 12:ST CUT Relay
- * 13:CDS FAN Relay
- * 14:PTC HTR2 Relay
- * 15:BRK LP Relay
- * 16:MG CLT Relay
- * 17:DEICER Relay
- * 18:PTC HTR3 Relay
- * 19:DRL NO.4 Relay
- * 20:HEAD HI Relay
- * 21:HEAD LO Relay
- * 23:50A HTR
(for High Current)
- * 25:150A LH-J/B
(for High Current)
- * 26:180A ALT
(for High Current)
- * 27:50A A/PUMP NO.1
(for High Current)
- * 28:50A A/PUMP NO.2
(for High Current)
- * 29:40A MAIN
(for High Current)
- * 30:60A AHC
(for High Current)
- * 31:30A PBD
(for High Current)
- * 32:AHC Relay

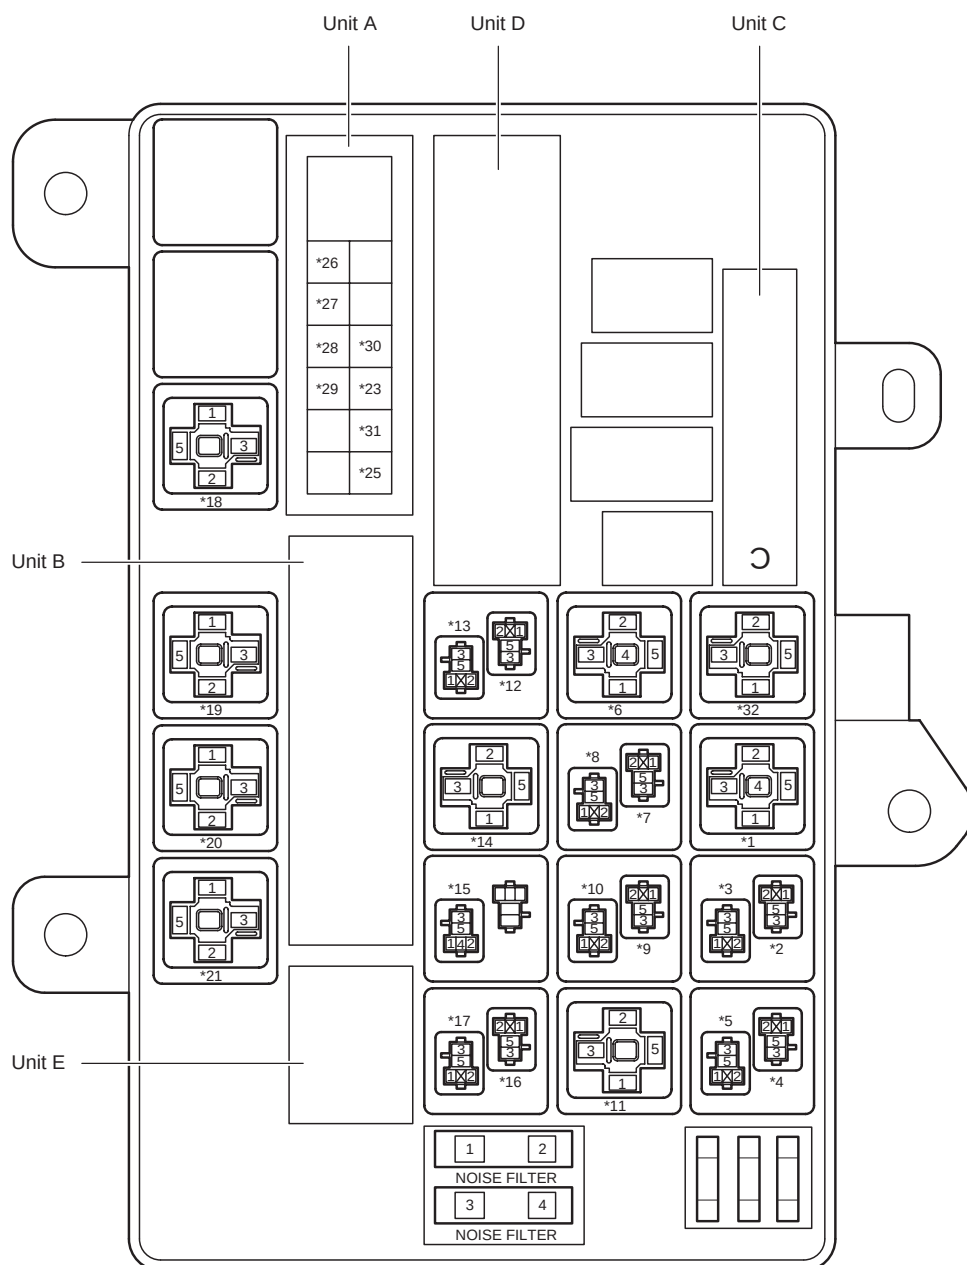

Unit A

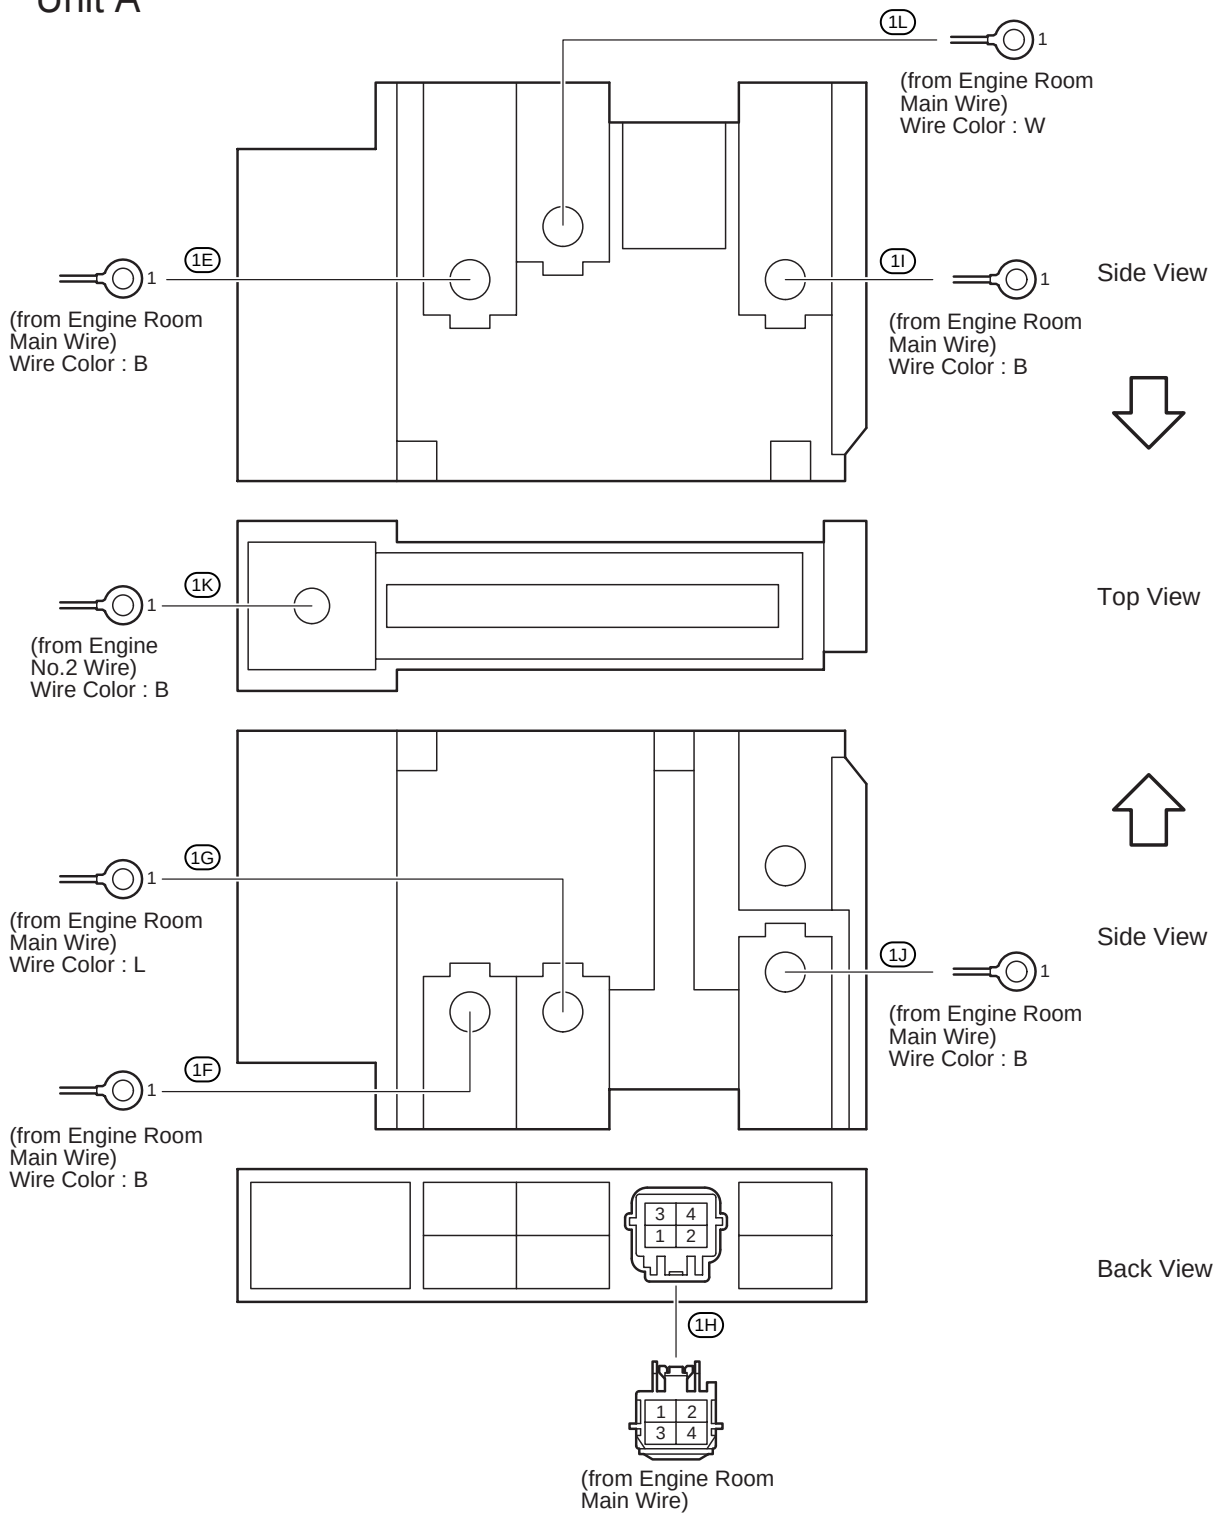


F RELAY LOCATIONS


①	: Engine Room R/B Assembly
○	: Engine Room J/B Assembly

Engine Compartment Left (See Page 20)

Unit B

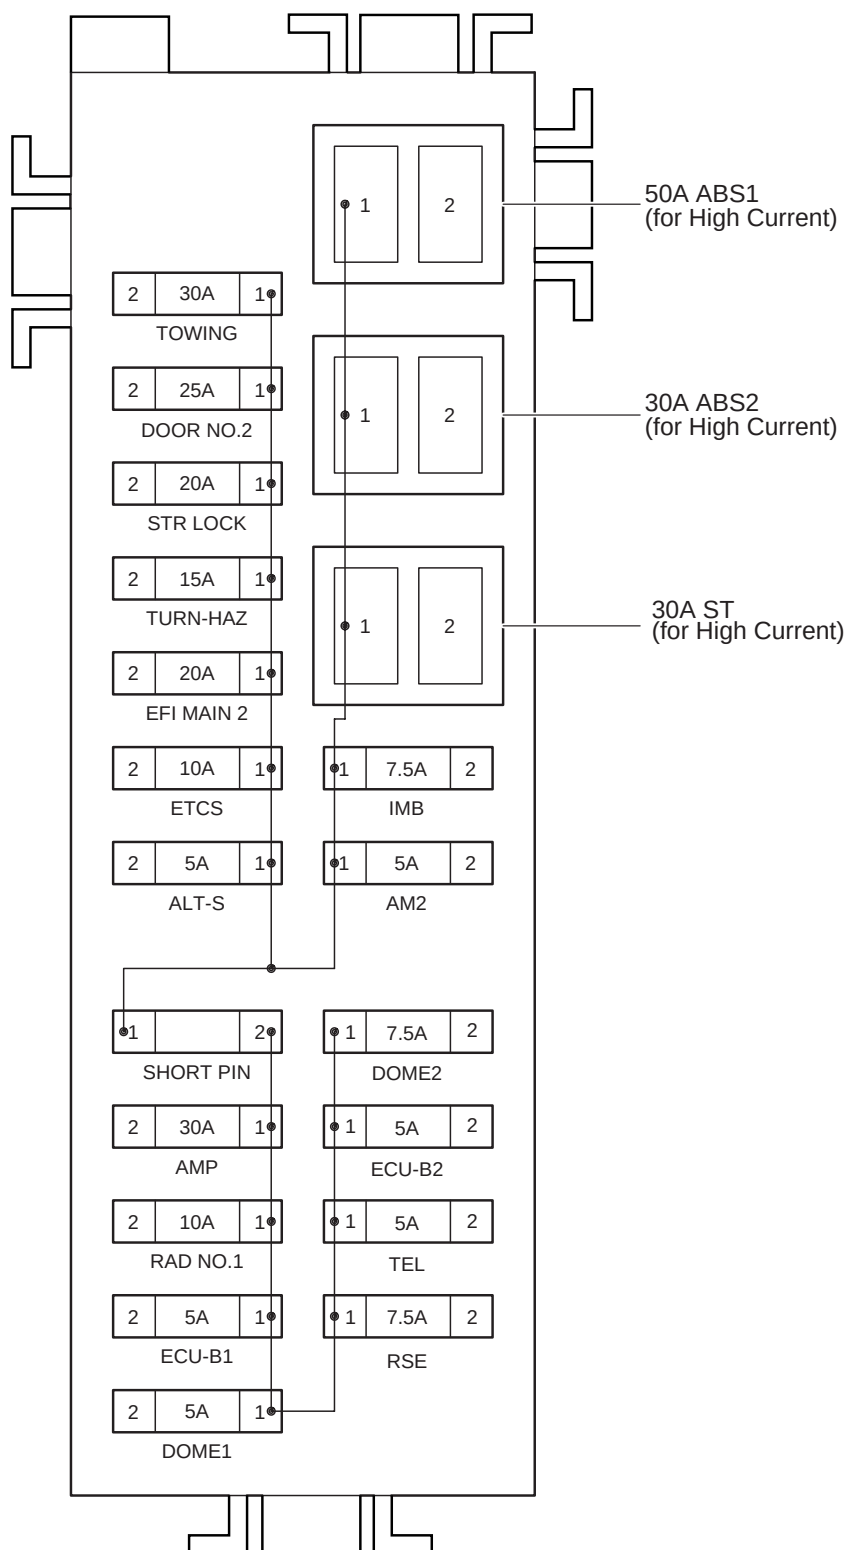


Unit C

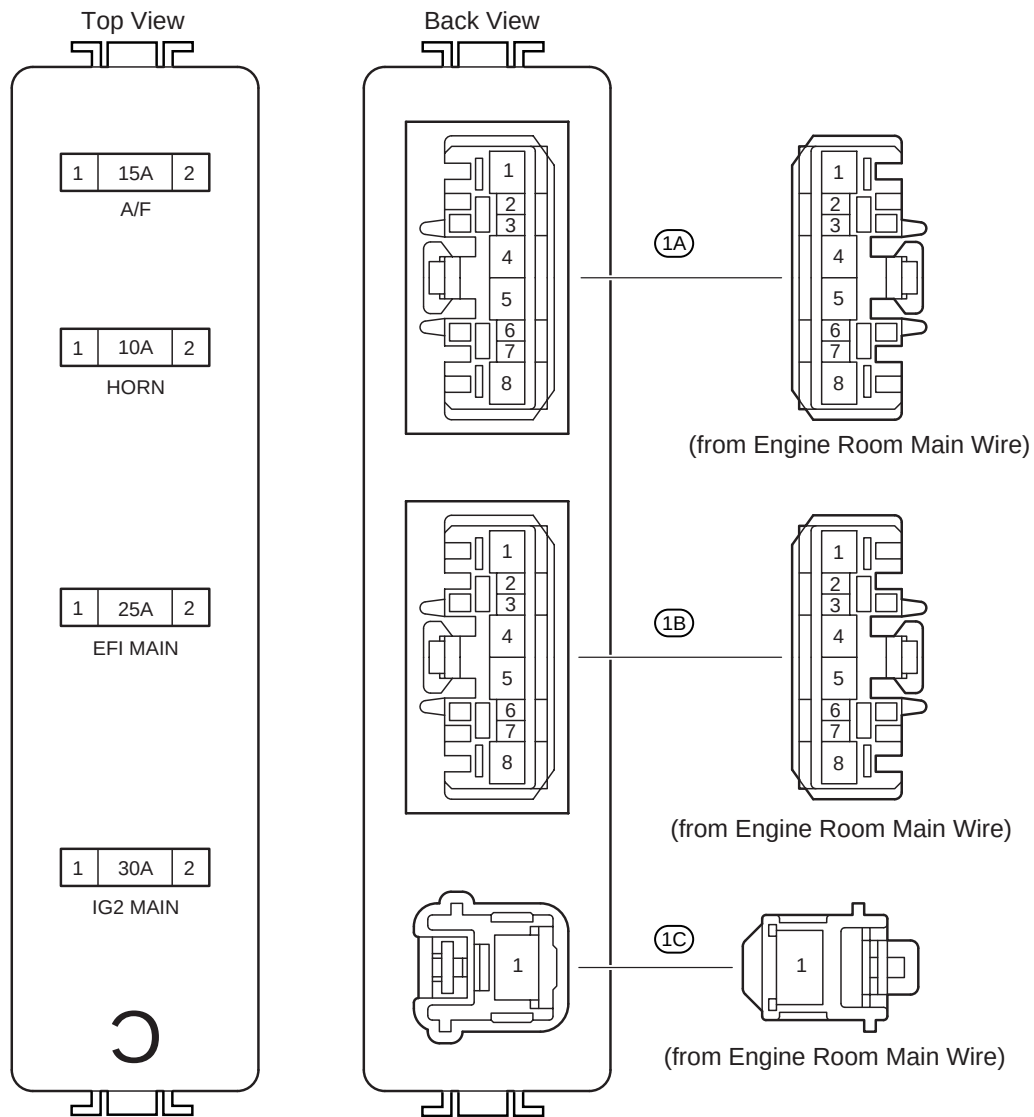

F RELAY LOCATIONS

① : Engine Room R/B Assembly	Engine Compartment Left (See Page 20)
○ : Engine Room J/B Assembly	

Unit D

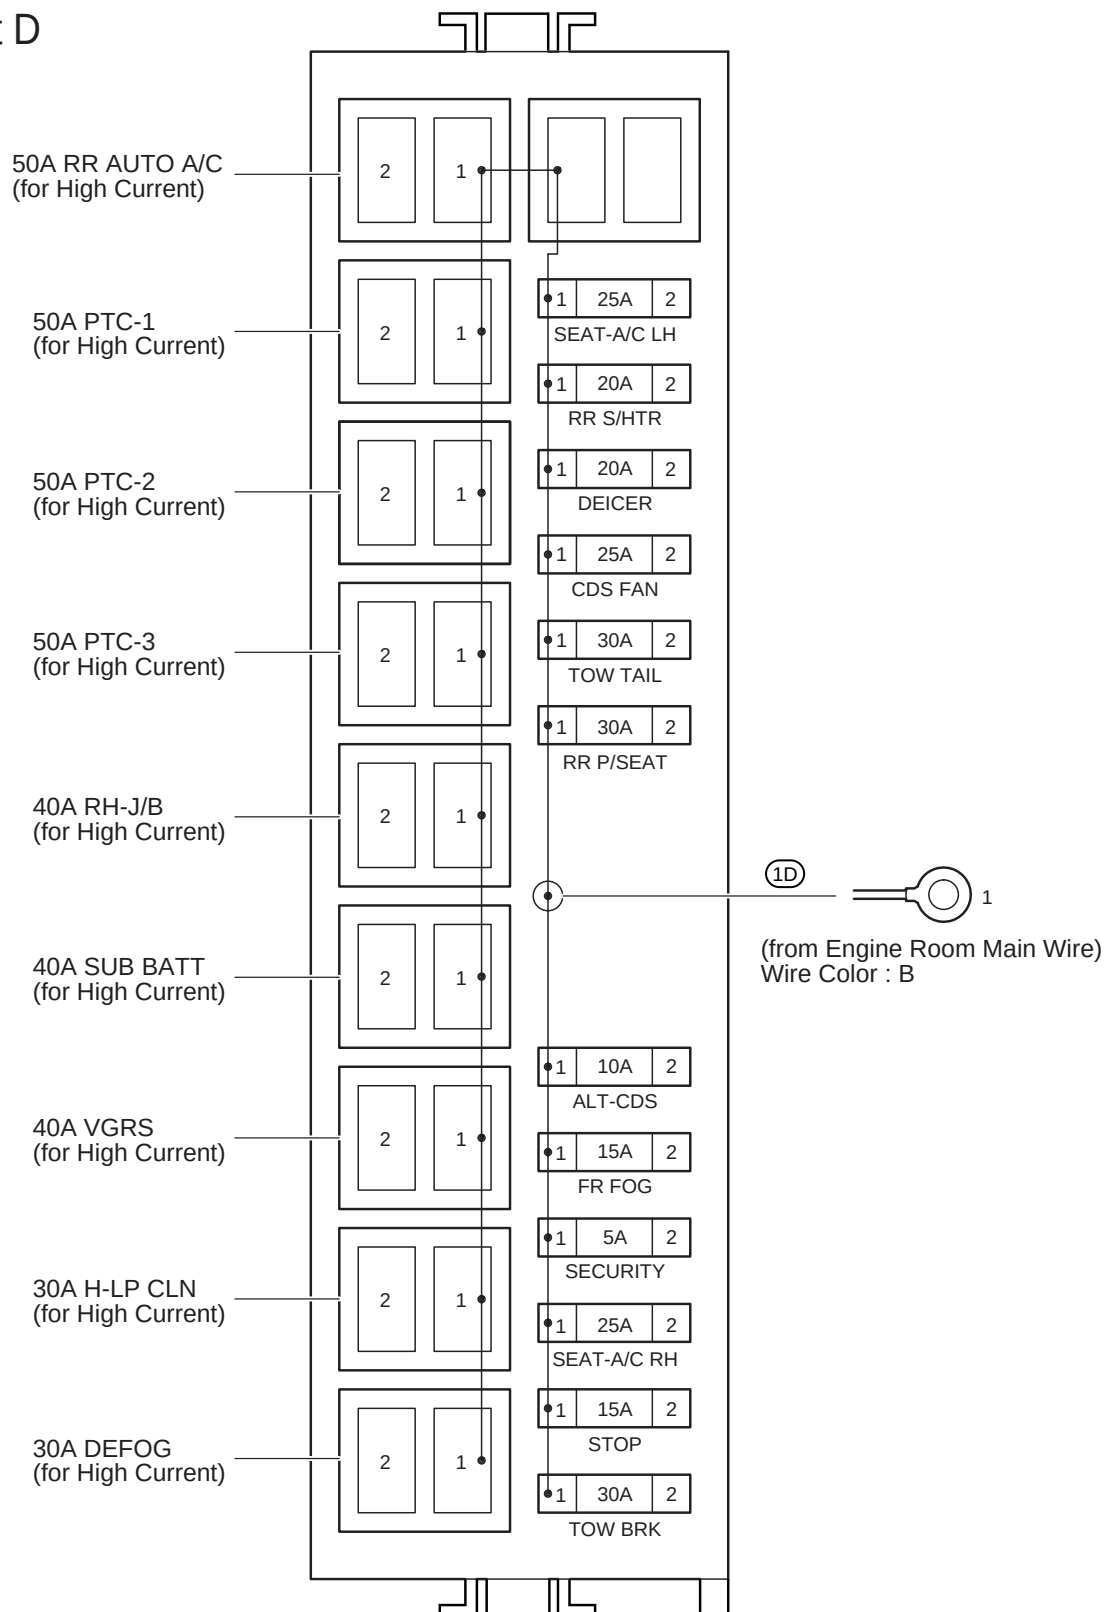

Unit E

