


Position of Parts in Seat <Rear No.2 Seat>

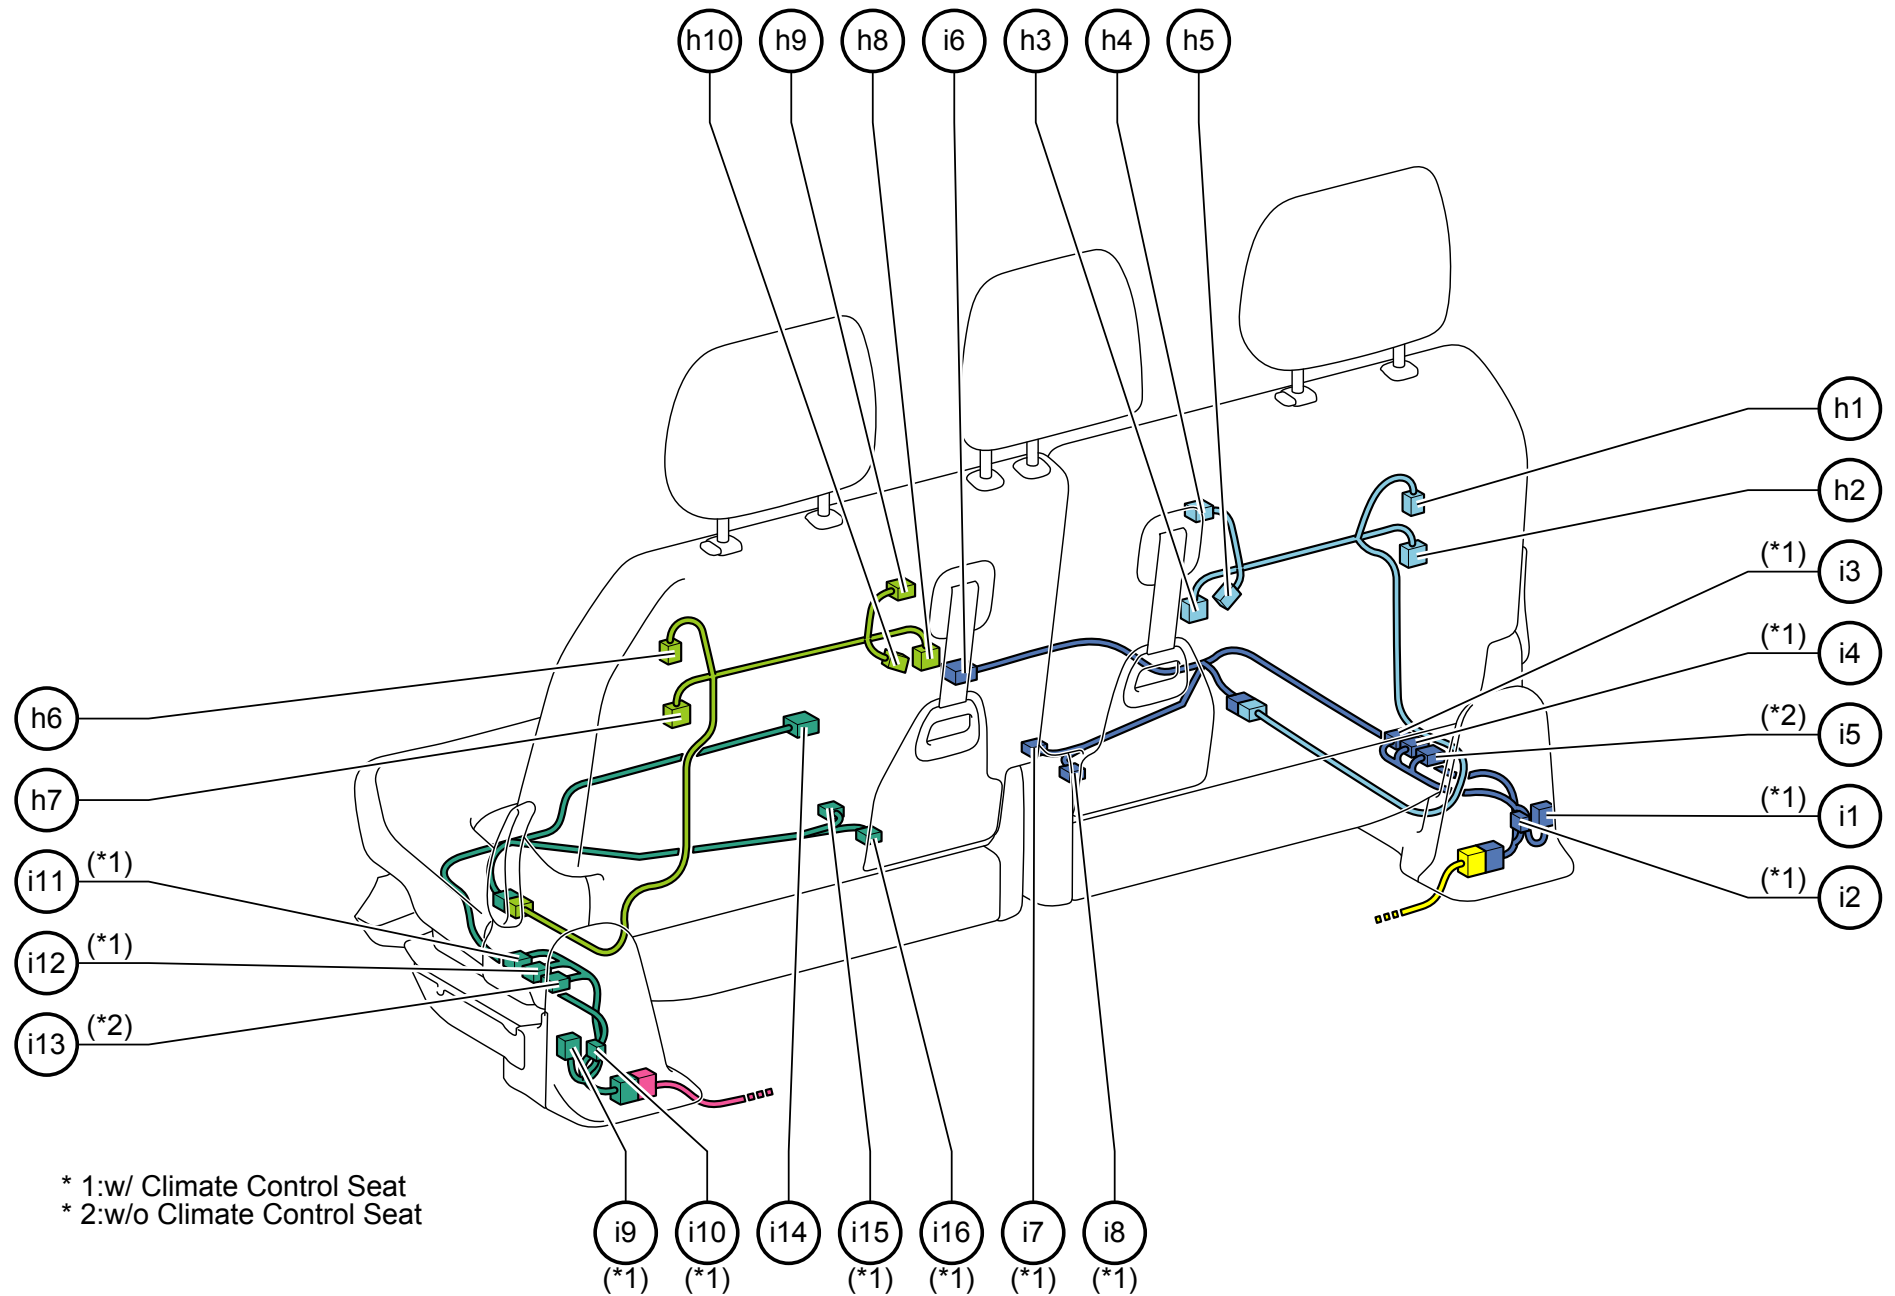

- h 1 Seat Back Lock Switch RH No.1
- h 2 Seat Back Release Motor RH No.1 (Rear Seat Lock Control Lever Sub-Assembly RH)
- h 3 Seat Back Release Motor RH No.2 (Rear Seat Lock Control Lever Sub-Assembly RH)
- h 4 Seat Back Area Switch RH
- h 5 Seat Back Lock Switch RH No.2
- h 6 Seat Back Lock Switch LH No.1
- h 7 Seat Back Release Motor LH No.1 (Rear Seat Lock Control Lever Sub-Assembly LH)
- h 8 Seat Back Release Motor LH No.2 (Rear Seat Lock Control Lever Sub-Assembly LH)
- h 9 Seat Back Area Switch LH
- h 10 Seat Back Lock Switch LH No.2

- i 1 Rear No.2 Seat Retract Motor RH (Power Seat Motor Assembly RH)
- i 2 Rear No.2 Seat Retract Motor RH (Power Seat Motor Assembly RH)
- i 3 Fold Seat Control ECU RH
- i 4 Fold Seat Control ECU RH
- i 5 Fold Seat Control ECU RH
- i 6 Floor Release Motor RH
- i 7 Floor Striker Limit Switch RH No.1
- i 8 Floor Striker Limit Switch RH No.2
- i 9 Rear No.2 Seat Retract Motor LH (Power Seat Motor Assembly LH)
- i 10 Rear No.2 Seat Retract Motor LH (Power Seat Motor Assembly LH)
- i 11 Fold Seat Control ECU LH
- i 12 Fold Seat Control ECU LH
- i 13 Fold Seat Control ECU LH
- i 14 Floor Release Motor LH
- i 15 Floor Striker Limit Switch LH No.1
- i 16 Floor Striker Limit Switch LH No.2

Position of Parts in Seat <Rear No.2 Seat>

