



Position of Parts in Engine Compartment

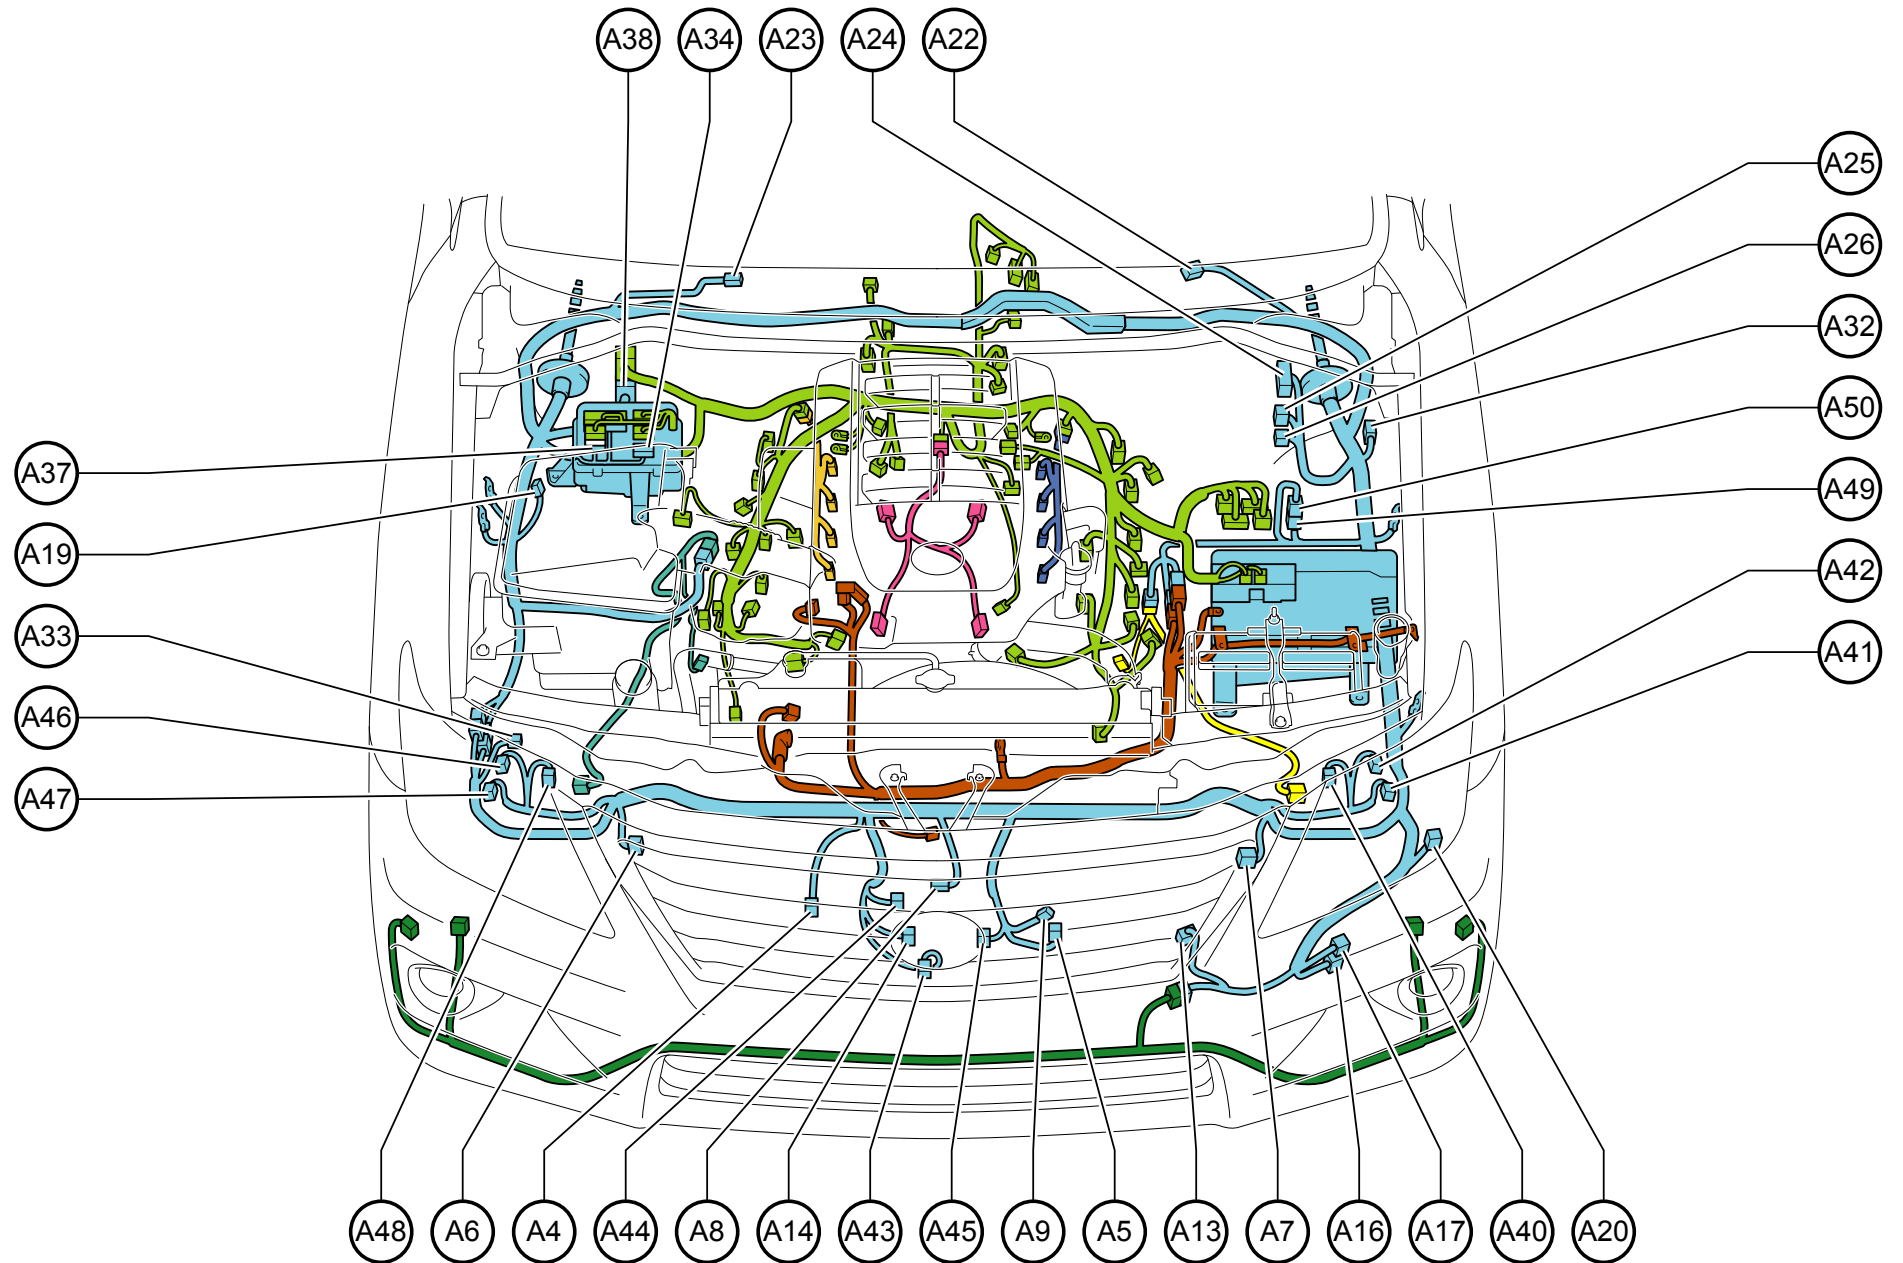


- A 4 High Pitched Horn Assembly
- A 5 Low Pitched Horn Assembly
- A 6 Front Airbag Sensor RH
- A 7 Front Airbag Sensor LH
- A 8 Engine Hood Courtesy Switch
- A 9 Condenser Blower Motor Assembly
- A 13 A/C Pressure Sensor
- A 14 Ambient Temperature Sensor
- A 16 Windshield Washer Motor and Pump Assembly
- A 17 Headlight Cleaner Control Relay and Motor
- A 19 Security Horn Assembly
- A 20 Wireless Door Lock Buzzer
- A 22 Windshield Wiper Motor Assembly
- A 23 Front Wiper Deicer (Windshield Glass)
- A 24 Skid Control ECU with Actuator Assembly
- A 25 Skid Control ECU with Actuator Assembly
- A 26 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
- A 32 Noise Filter (Ghost Buster)
- A 33 Daytime Running Light Resistor
- A 34 Junction Connector
- A 37 Junction Connector
- A 38 ECM
- A 40 Headlight Assembly LH
- A 41 Headlight Assembly LH
- A 42 Headlight Assembly LH
- A 43 Front Television Camera Assembly
- A 44 Millimeter Wave Radar Sensor Assembly
- A 45 Exhaust Gas Sensor
- A 46 Headlight Assembly RH
- A 47 Headlight Assembly RH
- A 48 Headlight Assembly RH
- A 49 Short Connector
- A 50 Short Connector

Position of Parts in Engine Compartment

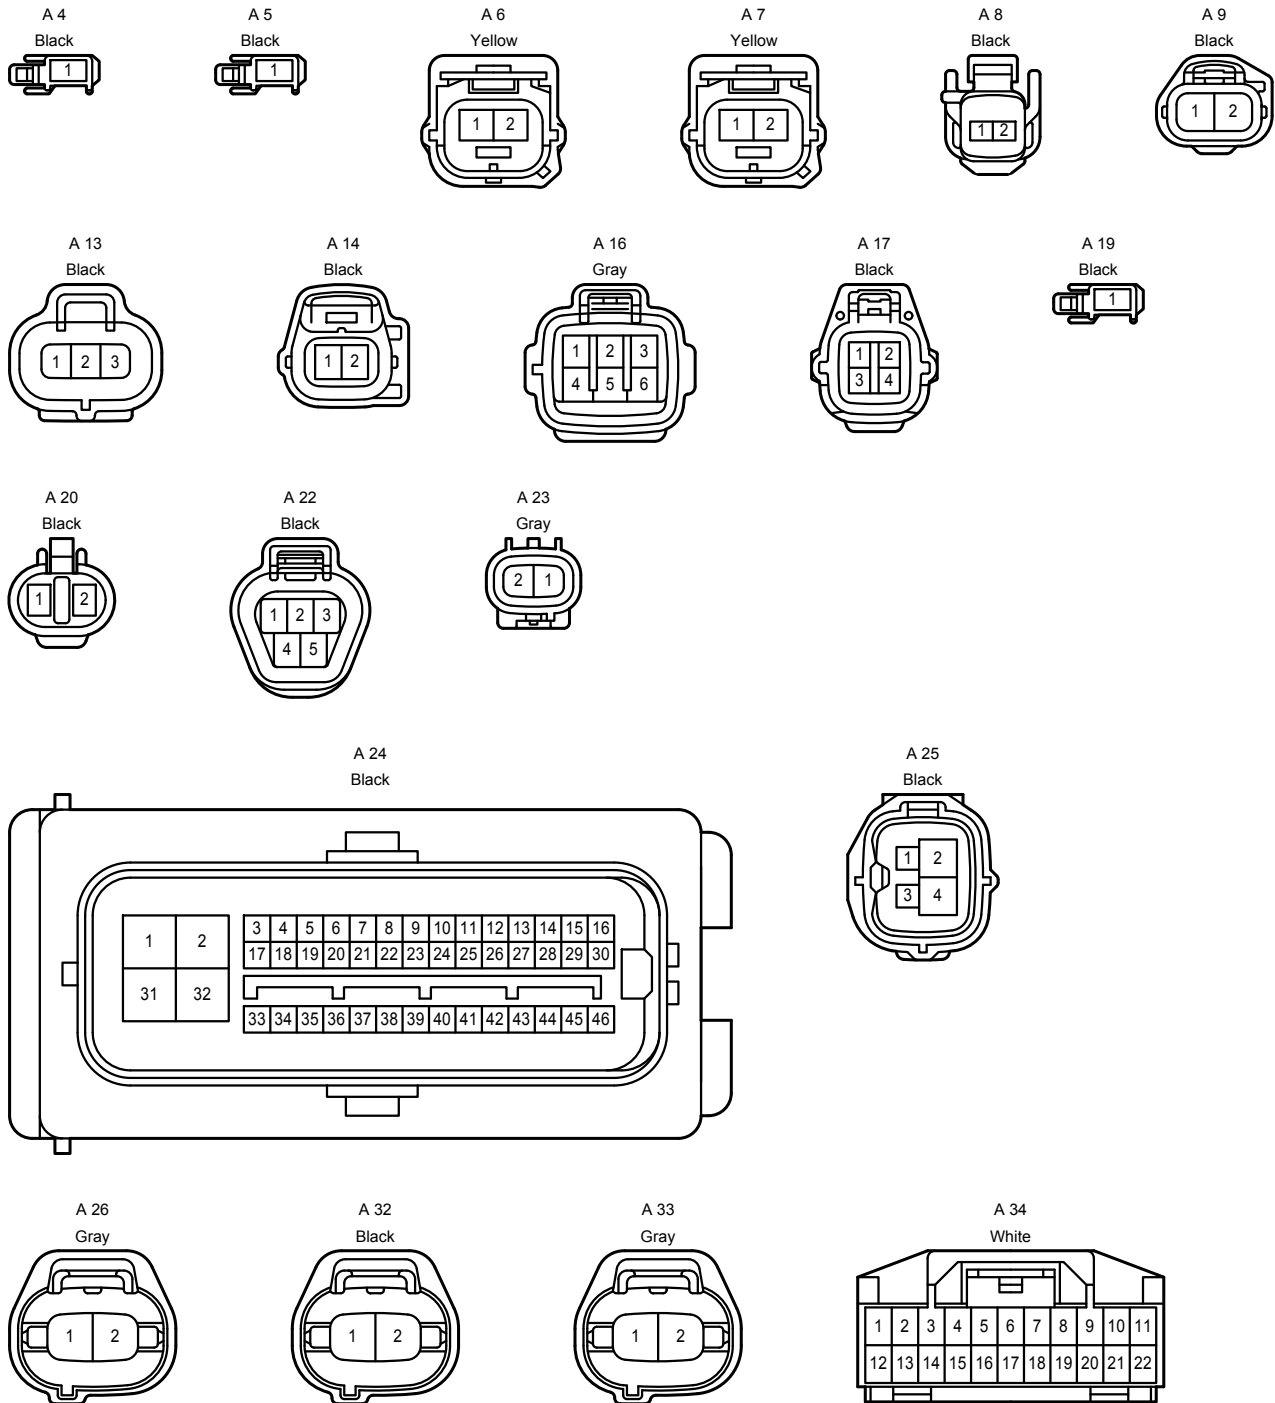


Position of Parts in Engine Compartment


A 37
Blue

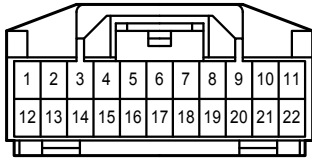


A 38
Black

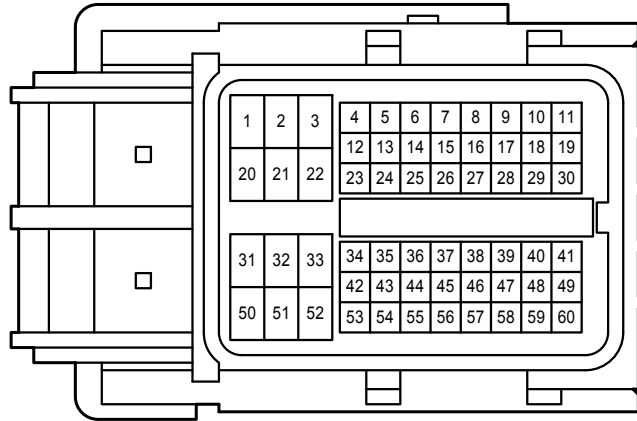


A 40
Black

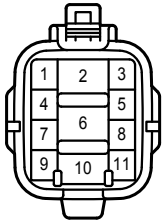


A 41
Black

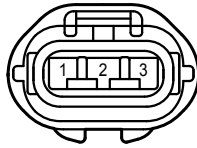

A 42
Black

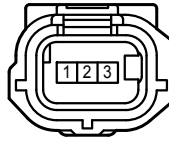

A 43
Black

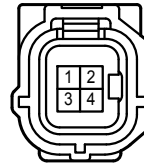

A 44
Black




A 45
Black



A 46
Black



A 47
Black

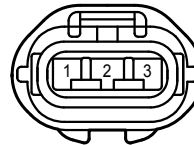

A 48
Black



A 49
Gray



A 50
Gray

