


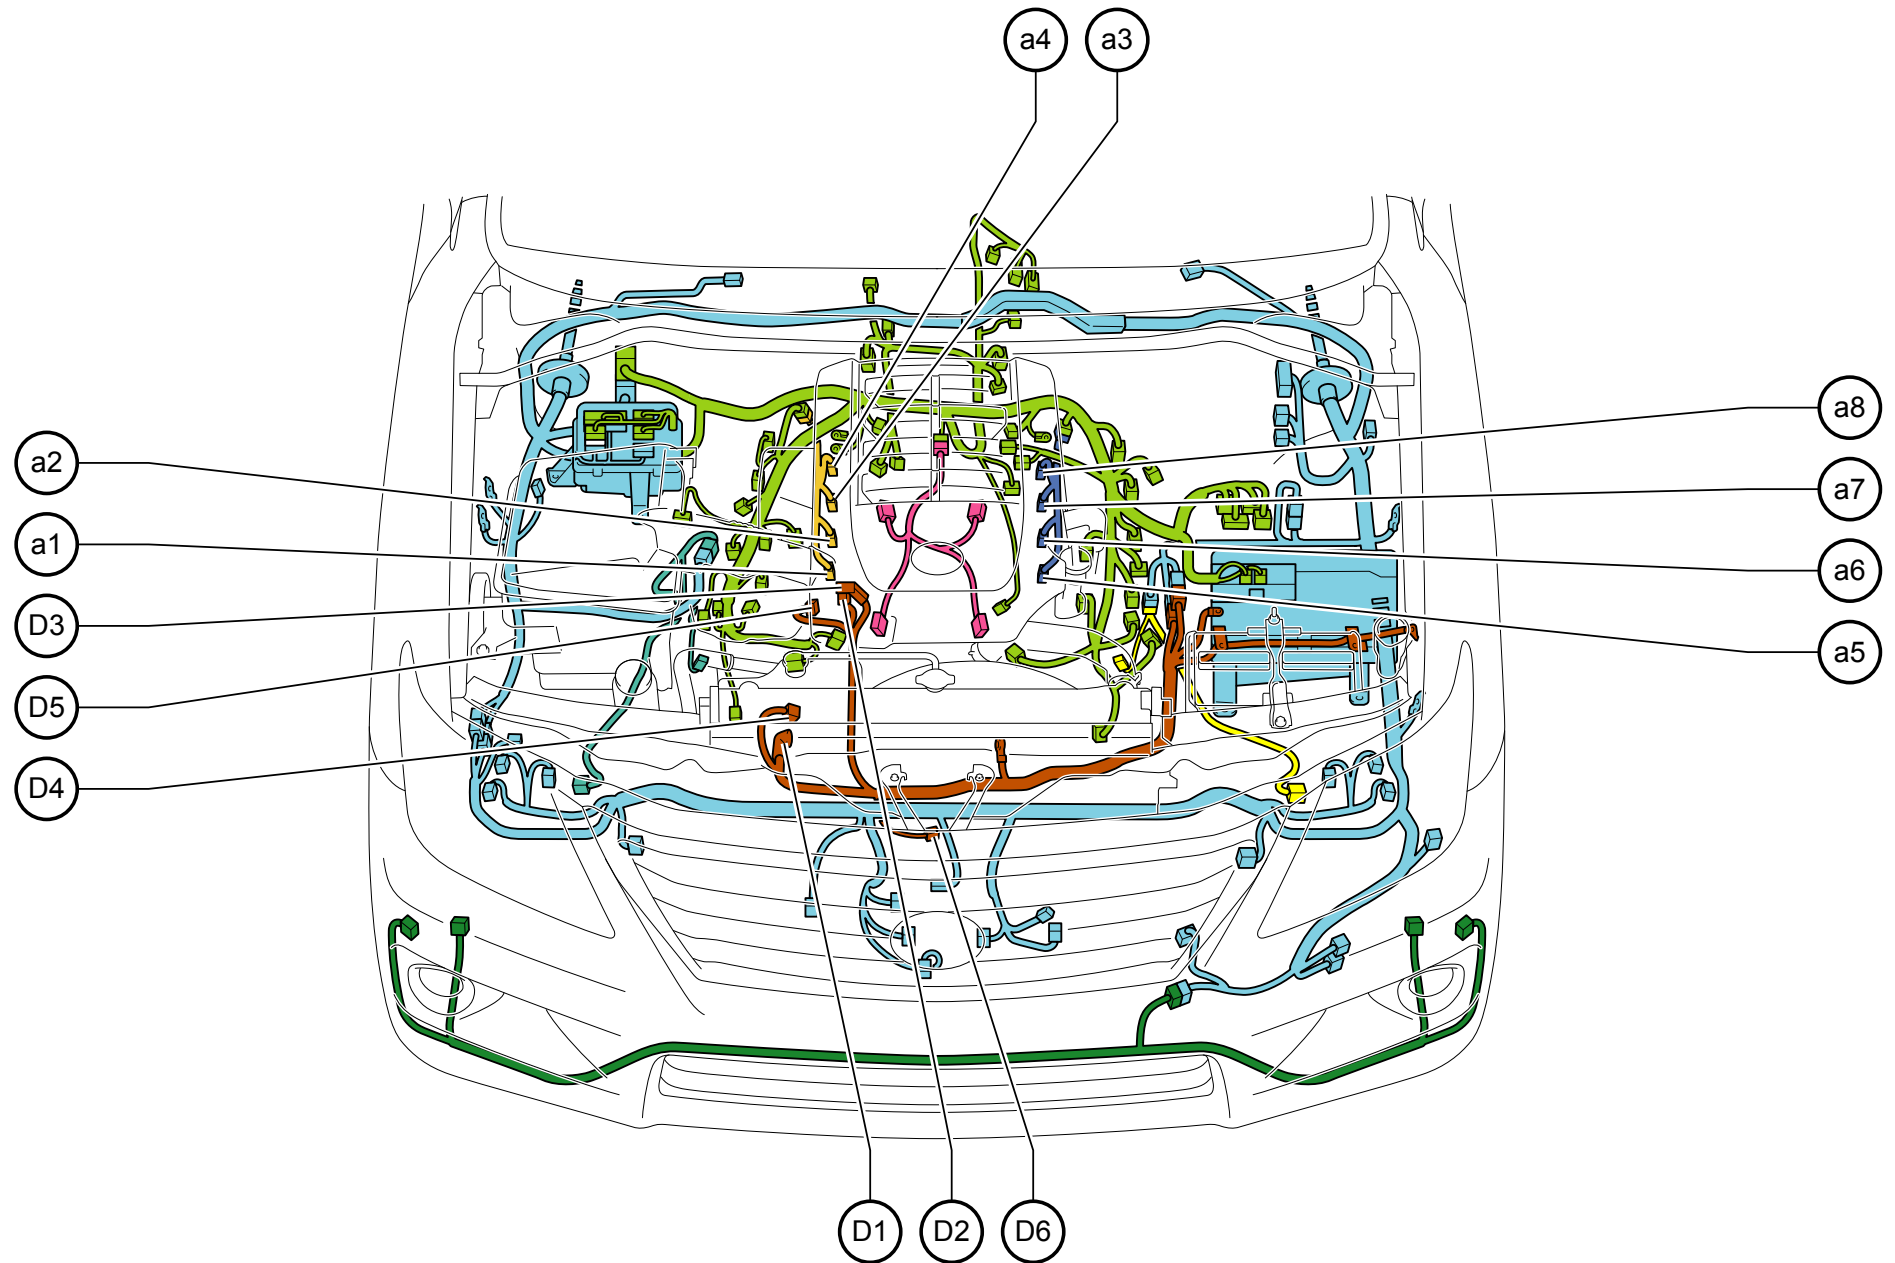

Position of Parts in Engine Compartment

- D 1 Generator Assembly
- D 2 Starter Assembly
- D 3 Starter Assembly
- D 4 Generator Assembly
- D 5 Engine Oil Level Sensor
- D 6 Oil Pressure Sender Gage Assembly

- a 1 Fuel Injector Assembly No.2
- a 2 Fuel Injector Assembly No.4
- a 3 Fuel Injector Assembly No.6
- a 4 Fuel Injector Assembly No.8
- a 5 Fuel Injector Assembly No.1
- a 6 Fuel Injector Assembly No.3
- a 7 Fuel Injector Assembly No.5
- a 8 Fuel Injector Assembly No.7

Position of Parts in Engine Compartment

