


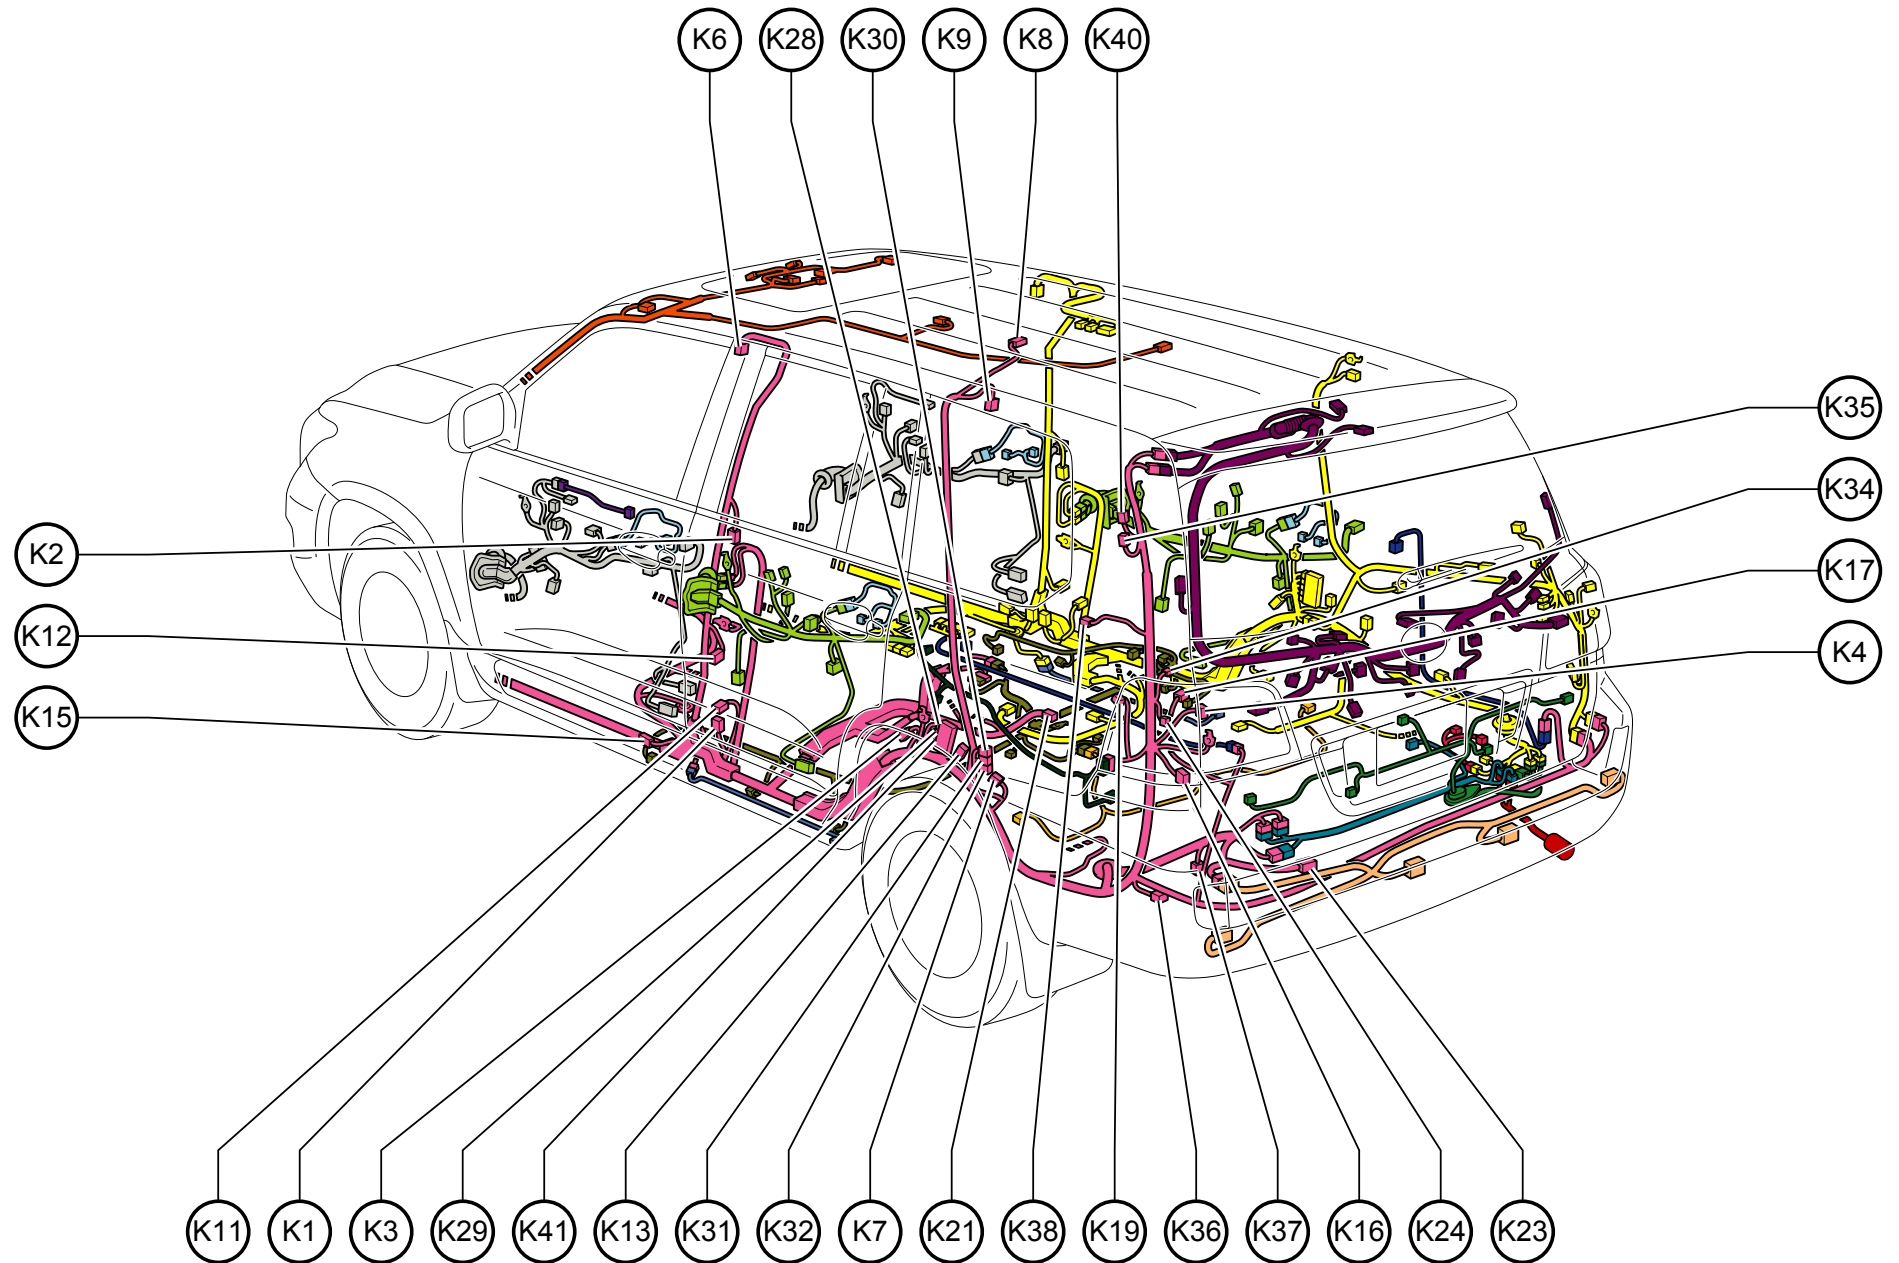

K	1	Front Pretensioner LH
K	2	Front Door Courtesy Light Switch Assembly LH
K	3	Rear Door Courtesy Light Switch Assembly LH
K	4	Rear Combination Light Assembly LH
K	6	Curtain Shield Airbag Assembly LH
K	7	Rear Side Airbag Sensor Assembly LH
K	8	Tire Pressure Warning Antenna and Receiver
K	9	Curtain Shield Airbag Assembly LH
K	11	Front Pre-Collision Seat Belt Motor LH
K	12	Front Tension Reducer LH
K	13	Rear Pretensioner LH
K	15	No.2 Interior Illumination Light Assembly
K	16	Voltage Inverter Assembly
K	17	Power Outlet 115V Socket
K	19	Rear A/C Blower Assembly
K	21	Cooler Thermistor LH
K	23	Outside Luggage Electrical Key Antenna
K	24	Towing Converter
K	28	Junction Connector
K	29	Junction Connector
K	30	Suspension Control ECU
K	31	Suspension Control ECU
K	32	Suspension Control ECU
K	34	Fold Seat Switch Assembly LH
K	35	Diode (Rear No.2 Seat LH)
K	36	Diode (Back Door Courtesy)
K	37	Power Slide Back Door Warning Buzzer
K	38	Rear No.2 Seat Closer Motor LH (Fold Seat Leg Lock Sub-Assembly LH)
K	40	Diode (High Mounted Stop Light)
K	41	Junction Connector

Position of Parts in Body

