


Position of Parts in Seat <Front Seat>








 
 
 








 
 




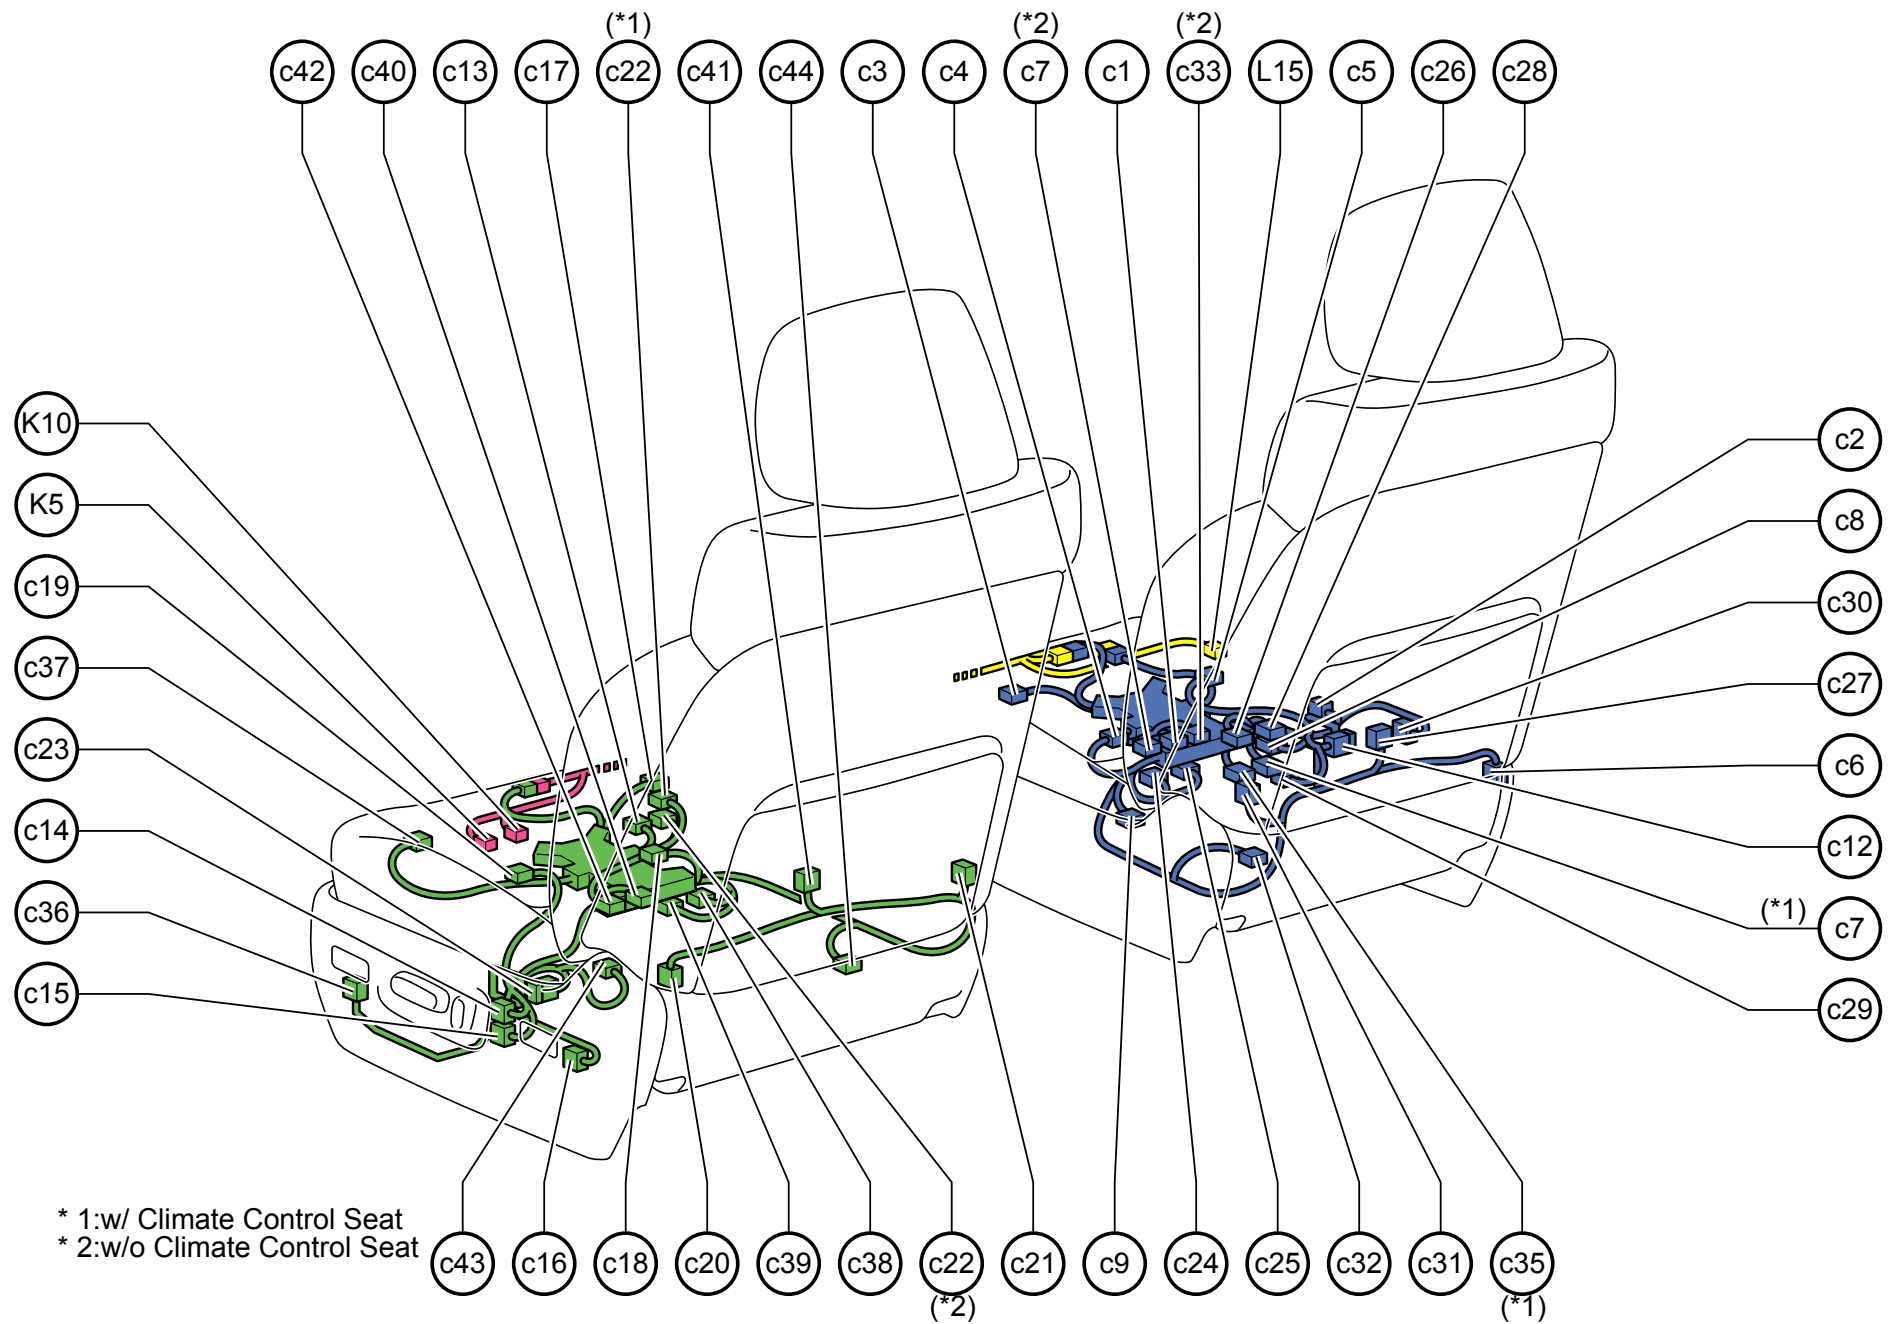


- K 5 Front Side Airbag Squib Circuit LH
- K 10 Front Seat Inner Belt Assembly LH

- L 15 Front Side Airbag Squib Circuit RH

- c 1 Front Seat Heater Assembly RH
- c 2 Front Power Seat Switch Assembly RH
- c 3 Front Power Seat Slide Position Motor Assembly RH
- c 4 Front Power Seat Lift Position Motor Assembly RH
- c 5 Front Power Seat Vertical Position Motor Assembly RH
- c 6 Front Power Seat Reclining Position Motor Assembly RH
- c 7 Front Seat Inner Belt Assembly RH
- c 8 Occupant Detection ECU
- c 9 Occupant Detection Sensor
- c 12 Junction Connector
- c 13 Front Seat Heater Assembly LH
- c 14 Front Power Seat Control ECU and Switch LH
- c 15 Front Power Seat Control ECU and Switch LH
- c 16 Front Power Seat Switch Assembly LH
- c 17 Front Power Seat Slide Position Motor Assembly LH
- c 18 Front Power Seat Lift Position Motor Assembly LH
- c 19 Front Power Seat Vertical Position Motor Assembly LH
- c 20 Front Power Seat Reclining Position Motor Assembly LH
- c 21 Front Lumbar Support Forward and Back Motor Assembly LH
- c 22 Front Seat Inner Belt Assembly LH
- c 23 Junction Connector
- c 24 Front Seat Climate Control ECU RH
- c 25 Front Seat Climate Control ECU RH
- c 26 Front Seat Climate Controller Seat Cushion RH
- c 27 Front Seat Climate Controller Seat Back RH
- c 28 Front Seat Climate Control Blower RH
- c 29 Front Seat Heater Assembly RH
- c 30 Front Power Seat Switch Assembly RH
- c 31 Front Lumbar Support Forward and Back Motor Assembly RH
- c 32 Rear Foot Light LH (No.1 Interior Illumination Light Assembly)
- c 33 Front Seat Inner Belt Assembly RH
- c 35 Front Seat Inner Belt Assembly RH
- c 36 Seat Variable Cushion Switch
- c 37 Front Power Seat Cushion Control Motor Assembly LH
- c 38 Front Seat Climate Control ECU LH
- c 39 Front Seat Climate Control ECU LH
- c 40 Front Seat Climate Controller Seat Cushion LH
- c 41 Front Seat Climate Controller Seat Back LH
- c 42 Front Seat Climate Control Blower LH
- c 43 Front Seat Heater Assembly LH
- c 44 Rear Foot Light RH (No.1 Interior Illumination Light Assembly)

Position of Parts in Seat <Front Seat>

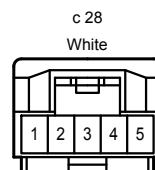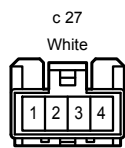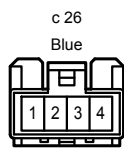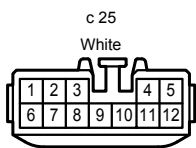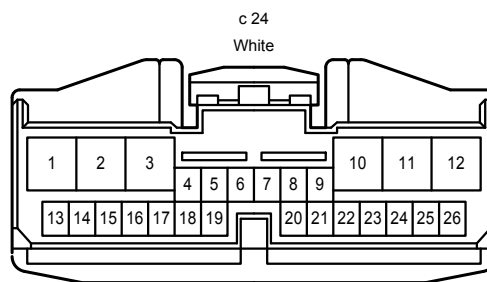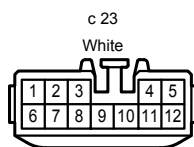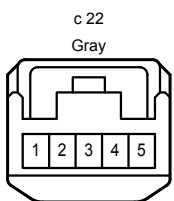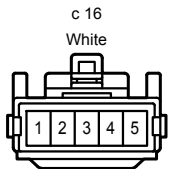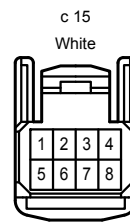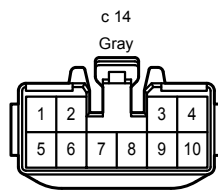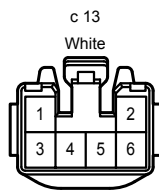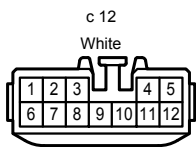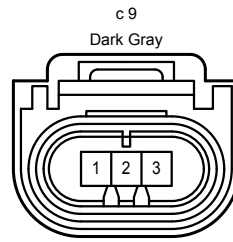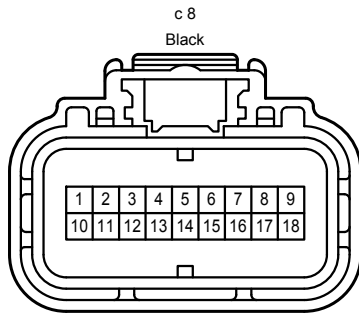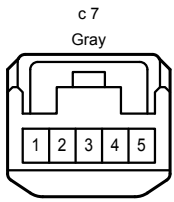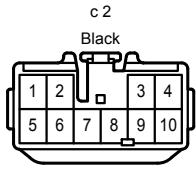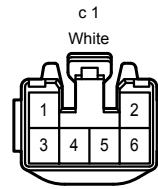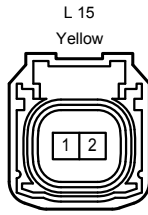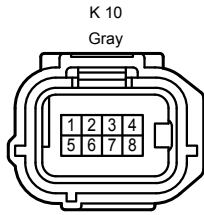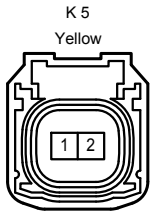

Position of Parts in Seat <Front Seat>

