

 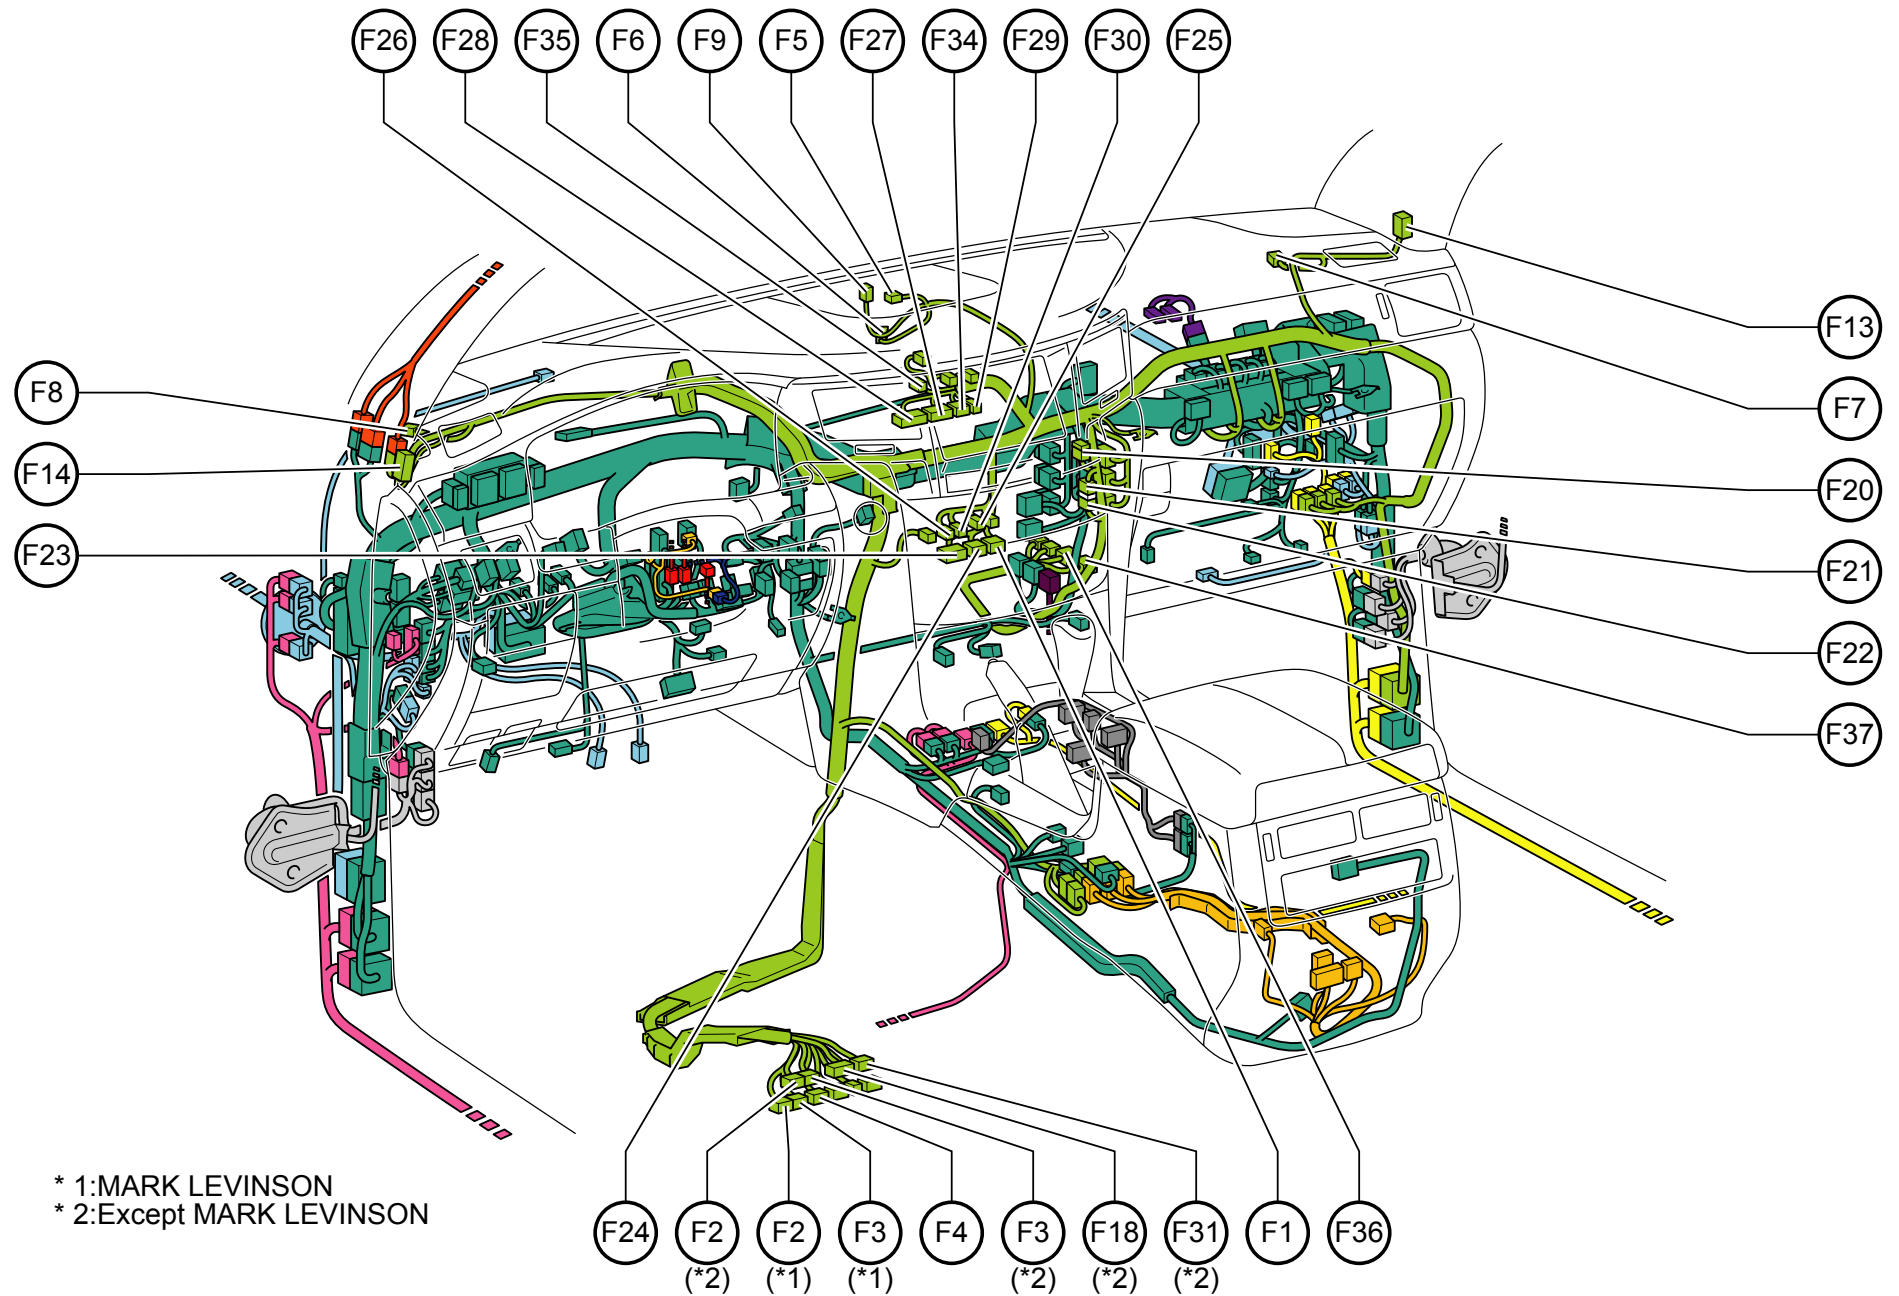
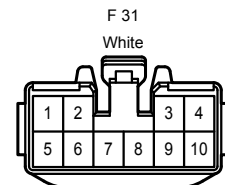

 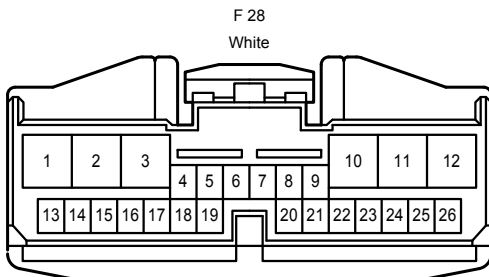
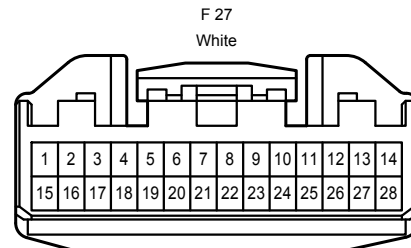

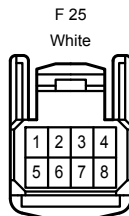
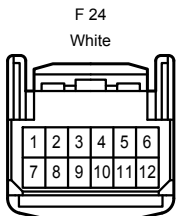
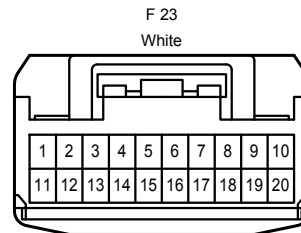
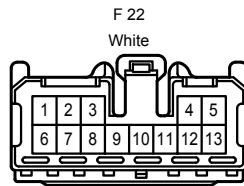
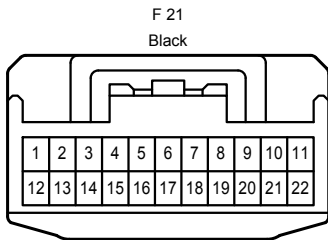
 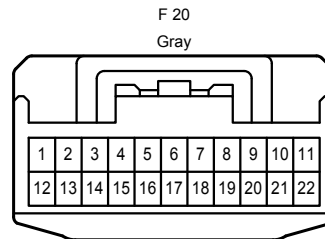
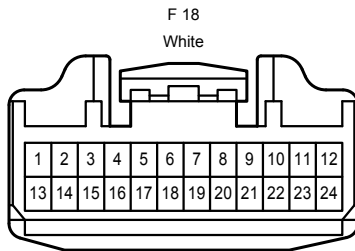
 
 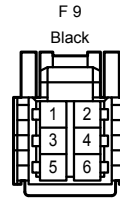
 


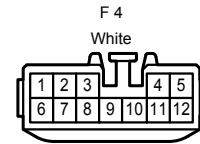
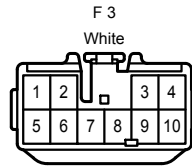


Position of Parts in Instrument Panel

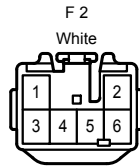

- F 1 Radio Receiver Assembly
- F 2 Stereo Component Amplifier Assembly
- F 3 Stereo Component Amplifier Assembly
- F 4 Stereo Component Amplifier Assembly
- F 5 Amplifier Antenna Assembly
- F 6 Front No.4 Speaker Assembly
- F 7 Front No.2 Speaker Assembly RH
- F 8 Front No.2 Speaker Assembly LH
- F 9 Automatic Light Control Sensor
- F 13 Front No.3 Speaker Assembly RH
- F 14 Front No.3 Speaker Assembly LH
- F 18 Stereo Component Amplifier Assembly
- F 20 Junction Connector
- F 21 Junction Connector
- F 22 Junction Connector
- F 23 Radio Receiver Assembly
- F 24 Radio Receiver Assembly
- F 25 Radio Receiver Assembly
- F 26 Radio Receiver Assembly
- F 27 Multi-Display
- F 28 Multi-Display
- F 29 Multi-Display
- F 30 Radio Receiver Assembly
- F 31 Stereo Component Amplifier Assembly
- F 34 Multi-Display
- F 35 Multi-Display
- F 36 Parking Assist ECU
- F 37 Parking Assist ECU

Position of Parts in Instrument Panel

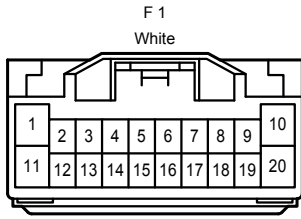

Position of Parts in Instrument Panel

