


Position of Parts in Instrument Panel

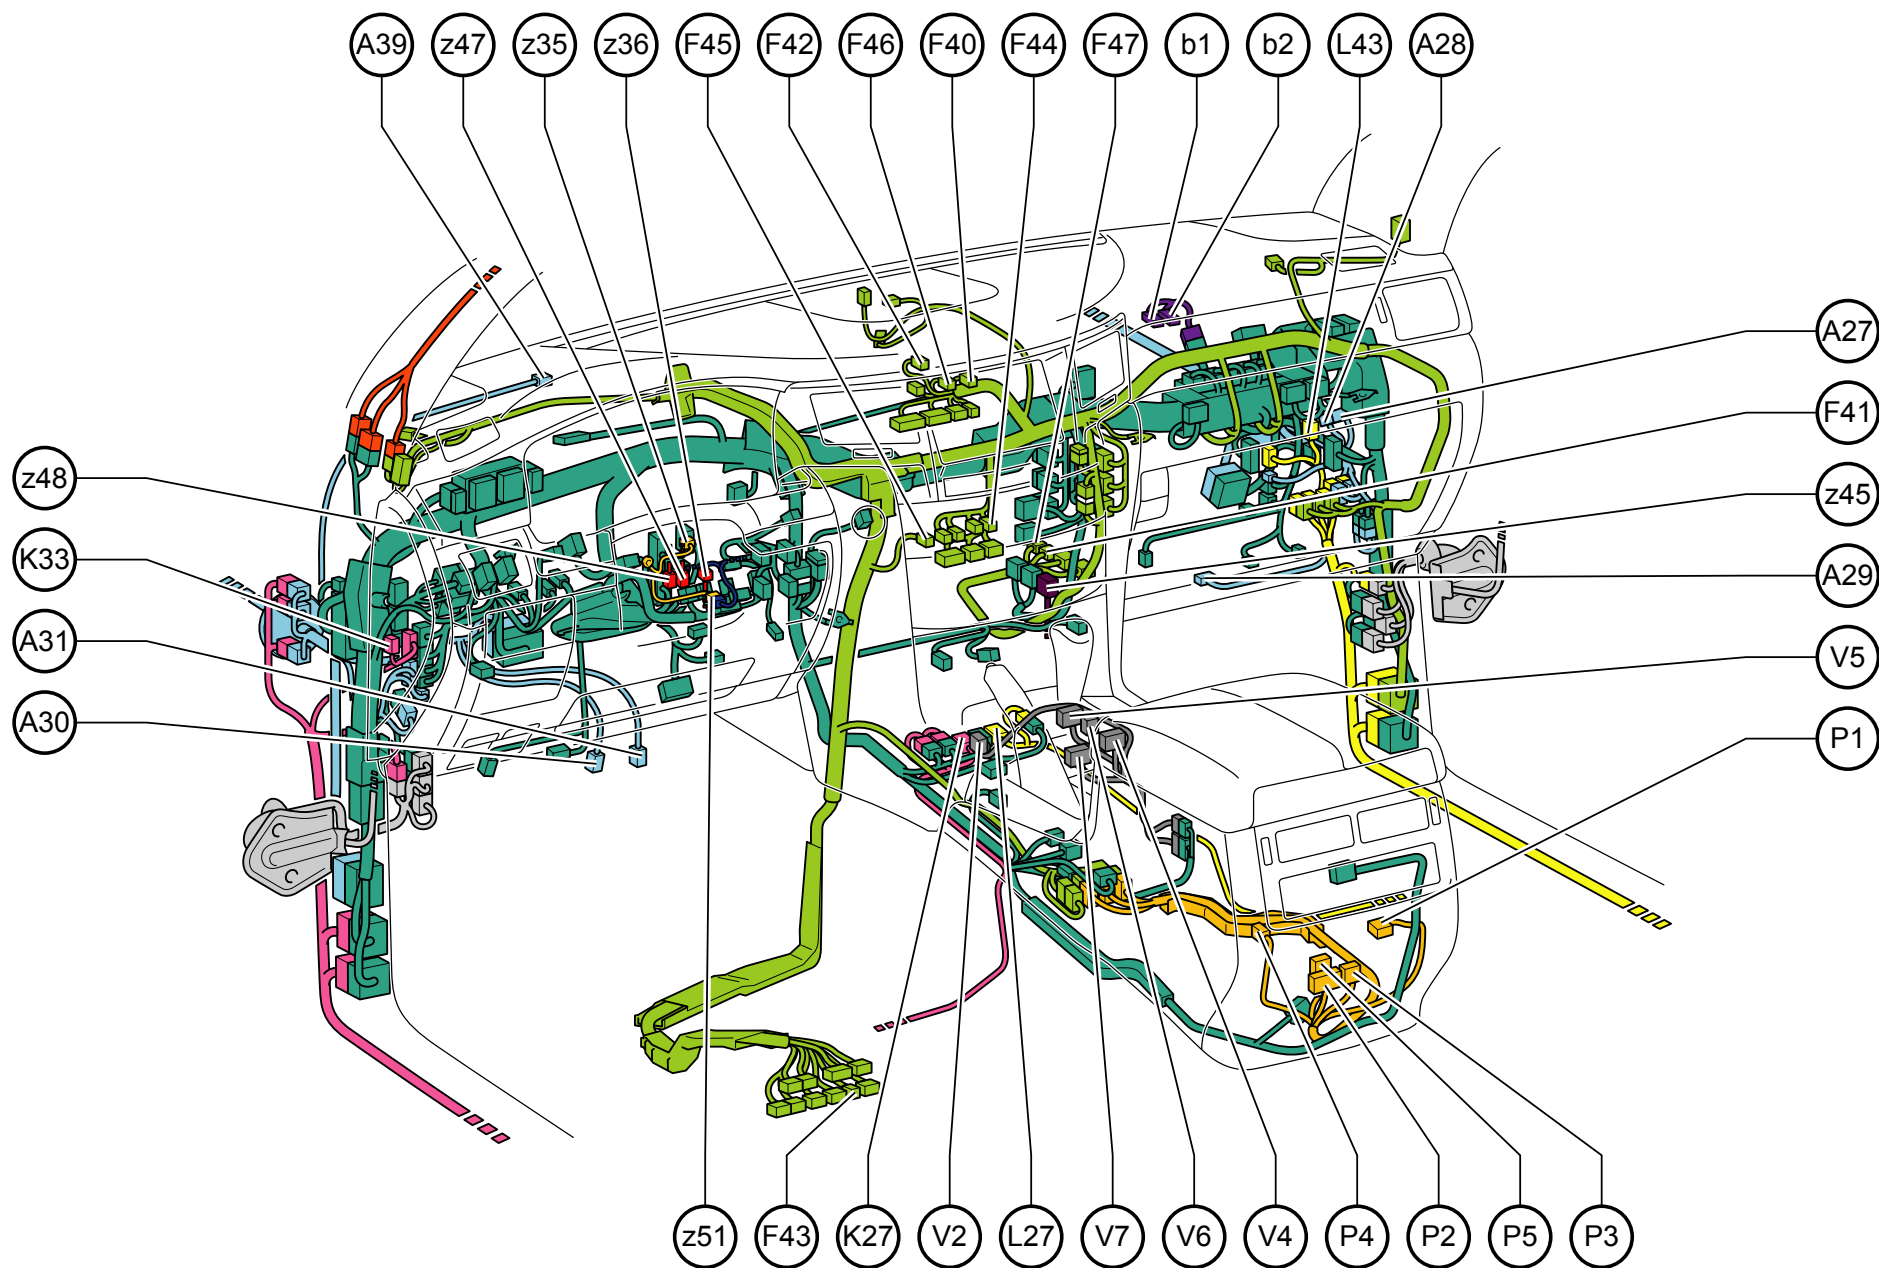

- A 27 Four Wheel Drive Control ECU
- A 28 Four Wheel Drive Control ECU
- A 29 Front Blower with Fan Motor Sub-Assembly
- A 30 Stop Light Switch Assembly
- A 31 Accelerator Pedal Sensor Assembly
- A 39 Stop Light Control Relay Assembly

- F 40 Multi-Display
- F 41 Parking Assist ECU
- F 42 Multi-Display
- F 43 Stereo Component Amplifier Assembly
- F 44 Radio Receiver Assembly
- F 45 IEEE Connector
- F 46 Multi-Display
- F 47 Parking Assist ECU

- K 27 Center Airbag Sensor Assembly
- K 33 Acceleration Sensor LH

- L 27 Center Airbag Sensor Assembly
- L 43 Acceleration Sensor RH













 
 
 
 
 
 


 



- P 1 Headphone Terminal
- P 2 Telephone ECU Assembly
- P 3 Telephone ECU Assembly
- P 4 Portable Phone Battery
- P 5 Bus Buffer ECU

- V 2 No.1 Stereo Jack Adapter Assembly
- V 4 Integration Control & Panel Assembly
- V 5 No.1 Pattern Select Switch Assembly
- V 6 Shift Lever Illumination (No.1 Interior Illumination Light Assembly)
- V 7 Power Outlet Socket Assembly

- b 1 Front Passenger Side Squib Circuit
- b 2 Front Passenger Side Squib Circuit

- z 36 Cruise Control Main Switch , Spiral Cable Sub-Assembly
- z 45 A/C Blower Assembly , A/C Amplifier Assembly
- z 47 Driver Side Squib 2nd Step Circuit , Spiral Cable Sub-Assembly
- z 48 Driver Side Squib Circuit , Spiral Cable Sub-Assembly

Position of Parts in Instrument Panel

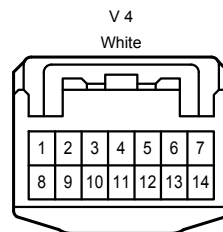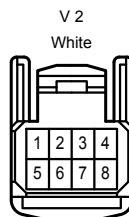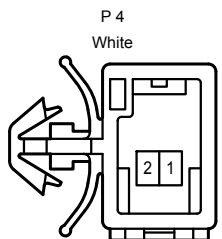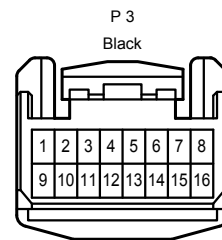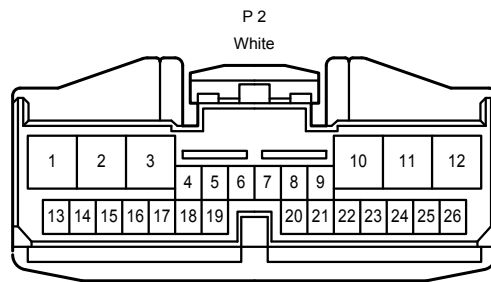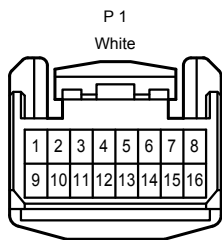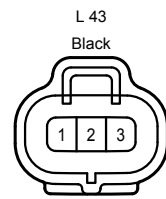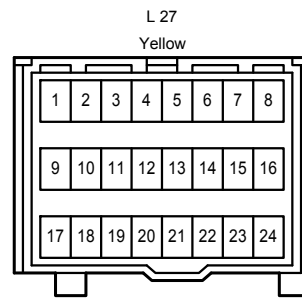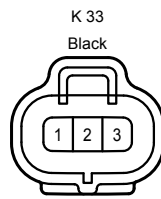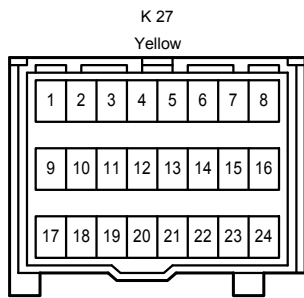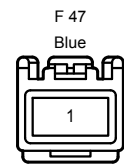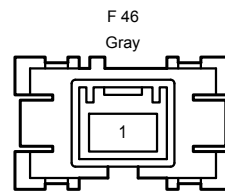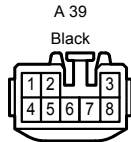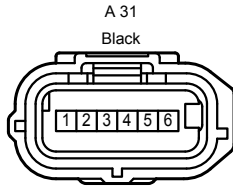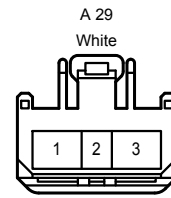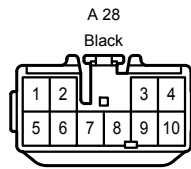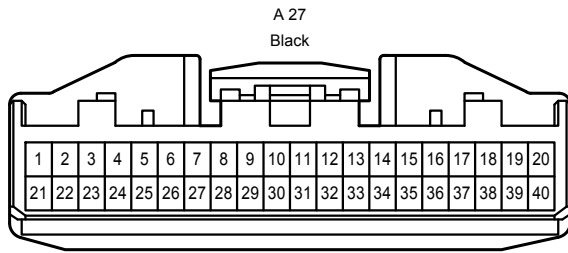

Position of Parts in Instrument Panel

