

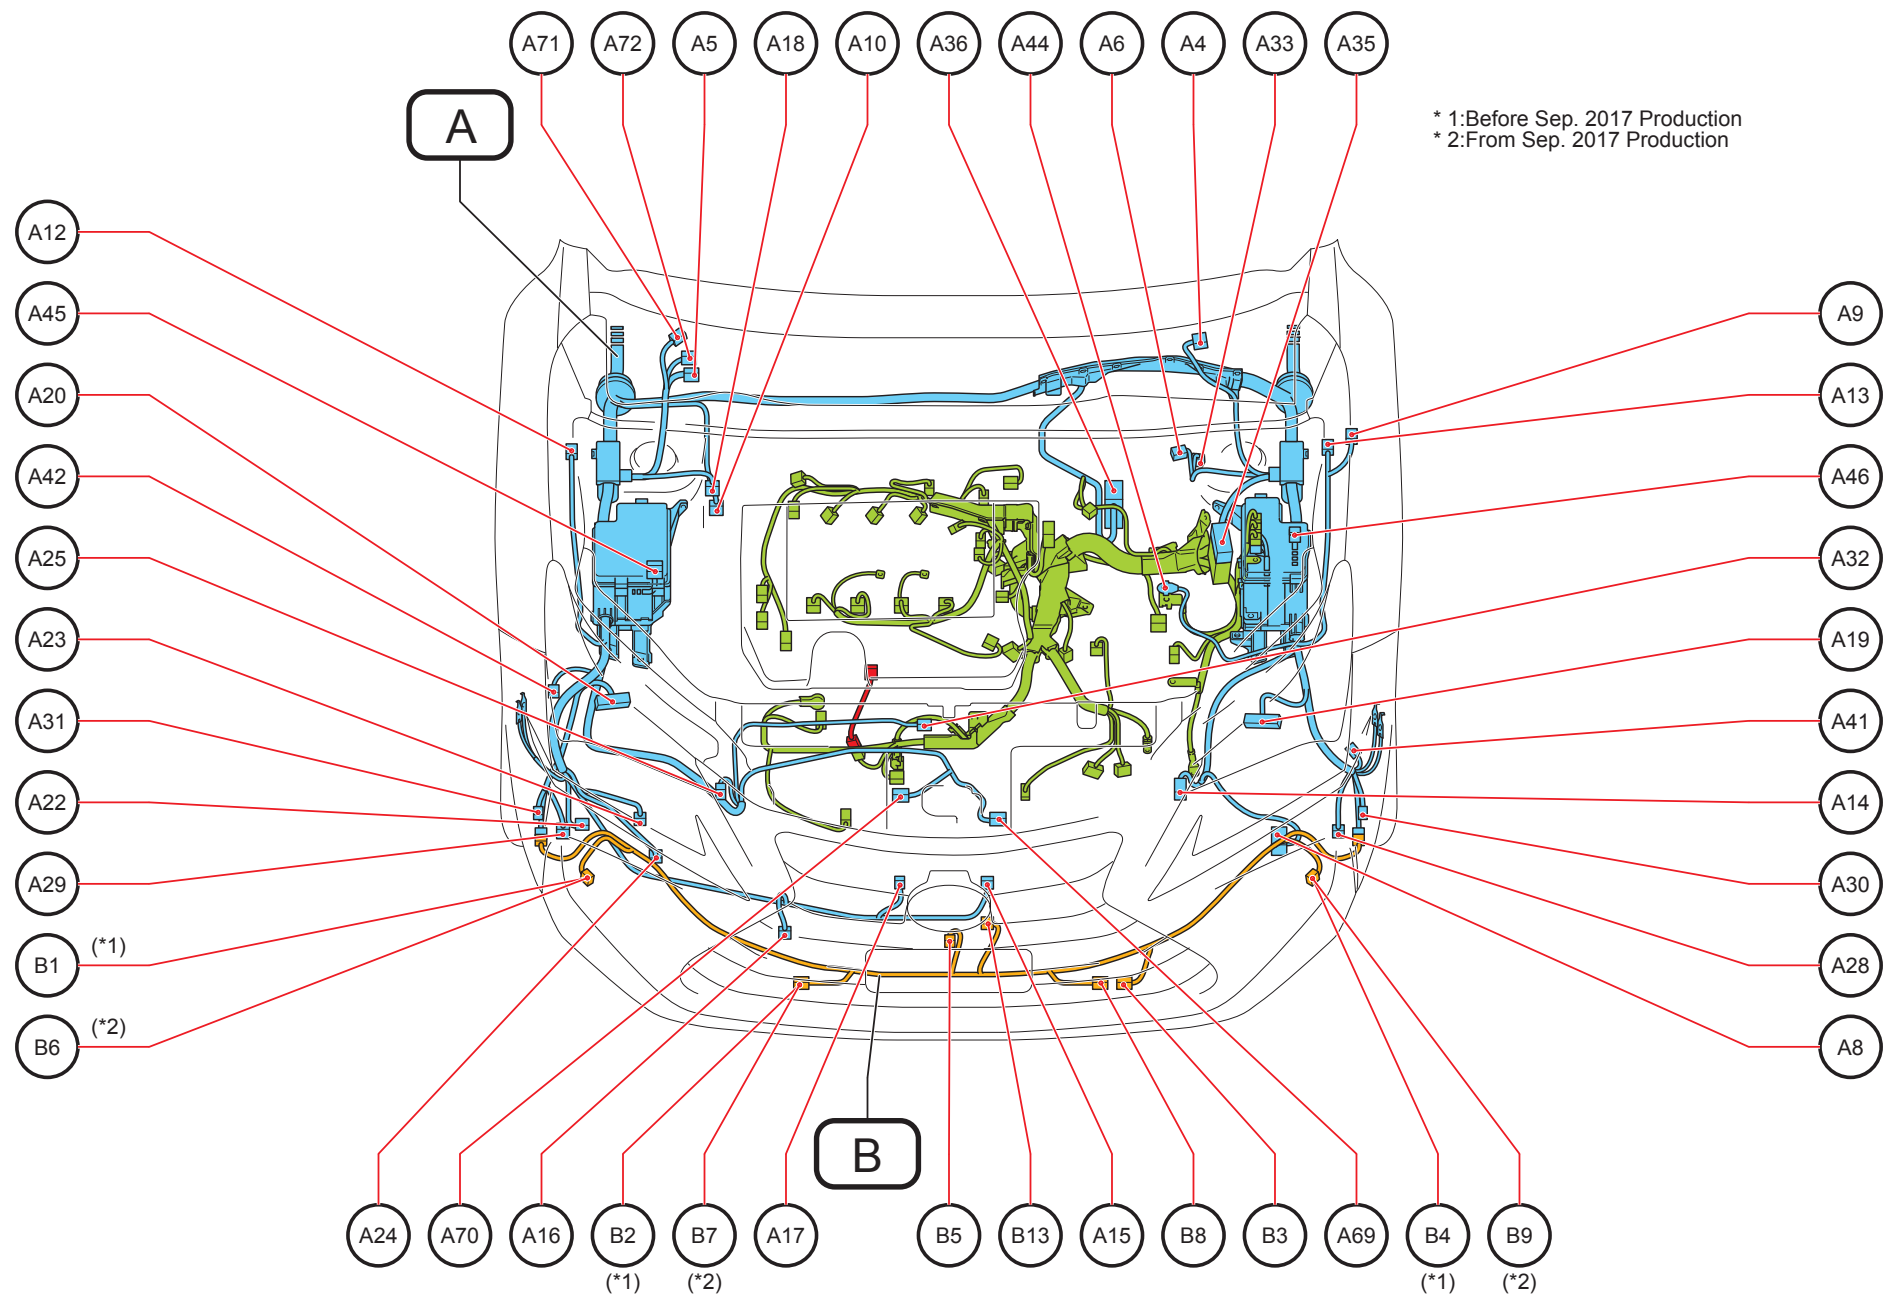
 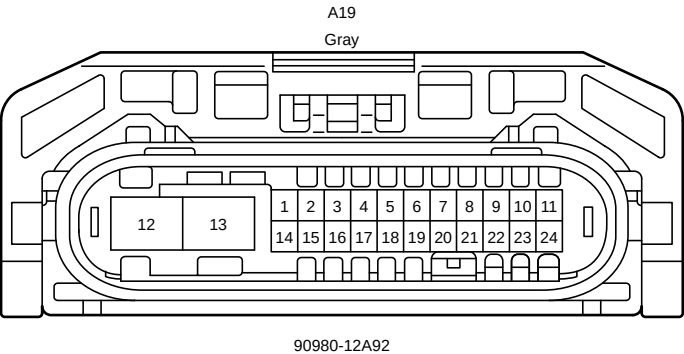
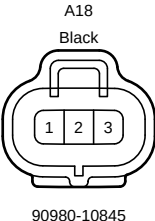
 
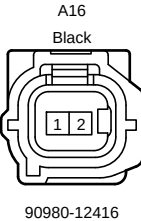

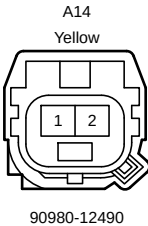
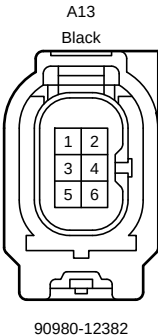
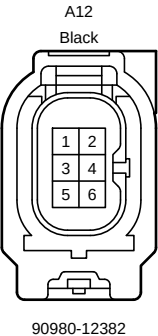
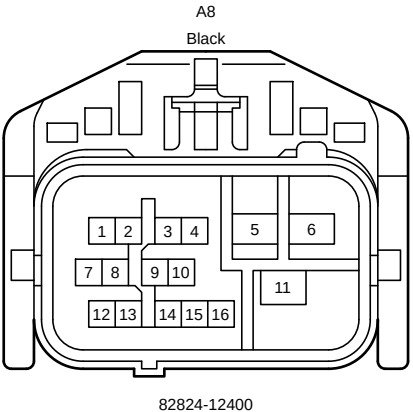
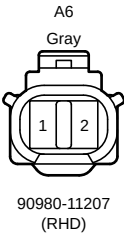


Position of Parts in Engine Compartment (LHD 3ZR-FAE)











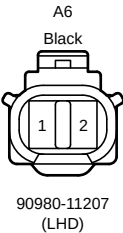


A4	Windshield Wiper Motor Assembly
A5	Front Wiper Deicer (Windshield Glass)
A6	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A8	Eco Run Vehicle Converter Assembly
A9	Wireless Door Lock Buzzer
A10	Security Horn Assembly
A12	Front Speed Sensor RH
A13	Front Speed Sensor LH
A14	Front Airbag Sensor LH
A15	Low Pitched Horn Assembly
A16	Ambient Temperature Sensor (Thermistor Assembly)
A17	High Pitched Horn Assembly
A18	A/C Pressure Sensor
A19	Headlight Light Control ECU Sub-Assembly LH
A20	Headlight Light Control ECU Sub-Assembly RH
A22	Level Warning Switch Assembly
A23	Windshield Washer Motor and Pump Assembly
A24	Headlight Cleaner Motor and Pump Assembly
A25	Front Airbag Sensor RH
A28	Fog Light Assembly LH
A29	Fog Light Assembly RH
A30	Clearance Light Assembly LH
A31	Clearance Light Assembly RH
A32	Engine Hood Courtesy Switch (Hood Lock Assembly)
A33	Brake Booster Pressure Sensor (Vacuum Sensor Assembly)
A35	ECM
A36	Brake Actuator Assembly
A41	Front Tire Pressure Monitor Initiator
A42	No. 1 Wiring Harness Condenser Assembly
A44	Battery
A45	No. 1 Junction Connector
A46	No. 2 Junction Connector
A69	Cooling Fan Motor
A70	No. 2 Cooling Fan Motor
A71	Heated Windshield Defroster (Windshield Glass)
A72	Heated Windshield Defroster (Windshield Glass)
B1	Front No. 1 Ultrasonic Sensor RH
B2	Front No. 1 Ultrasonic Sensor RH Center
B3	Front No. 1 Ultrasonic Sensor LH Center
B4	Front No. 1 Ultrasonic Sensor LH
B5	Front Television Camera Assembly
B6	Front No. 1 Ultrasonic Sensor RH
B7	Front No. 1 Ultrasonic Sensor RH Center
B8	Front No. 1 Ultrasonic Sensor LH Center
B9	Front No. 1 Ultrasonic Sensor LH
B13	Millimeter Wave Radar Sensor Assembly

Position of Parts in Engine Compartment (LHD 3ZR-FAE)

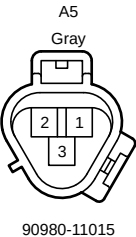

Position of Parts in Engine Compartment (LHD 3ZR-FAE)

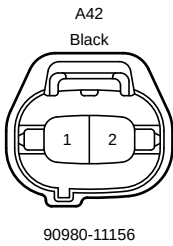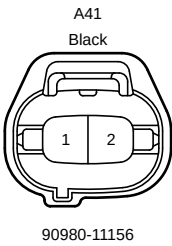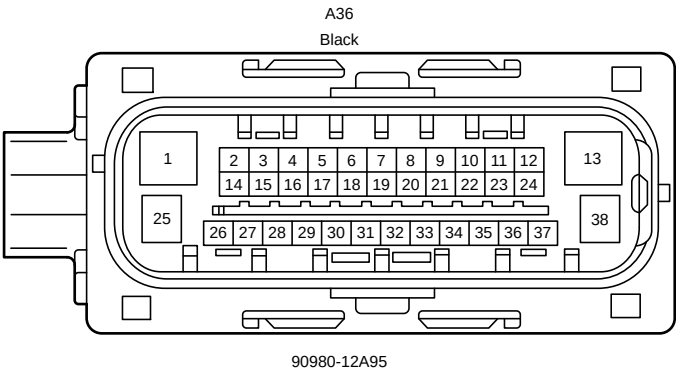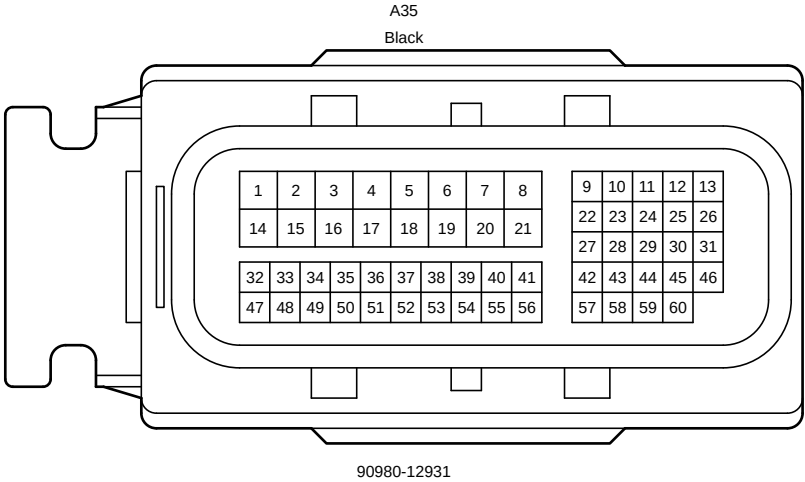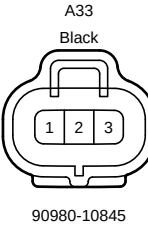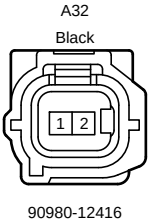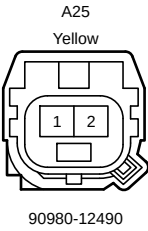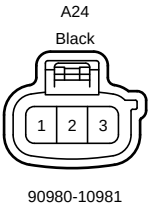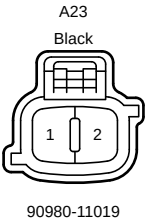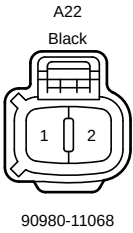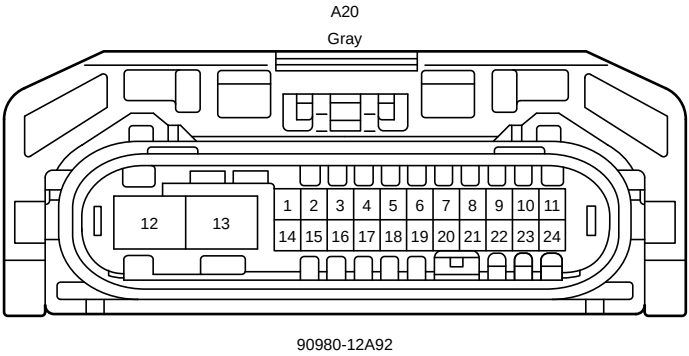

Position of Parts in Engine Compartment (LHD 3ZR-FAE)

