



Position of Parts in Engine Compartment (LHD 3ZR-FAE)

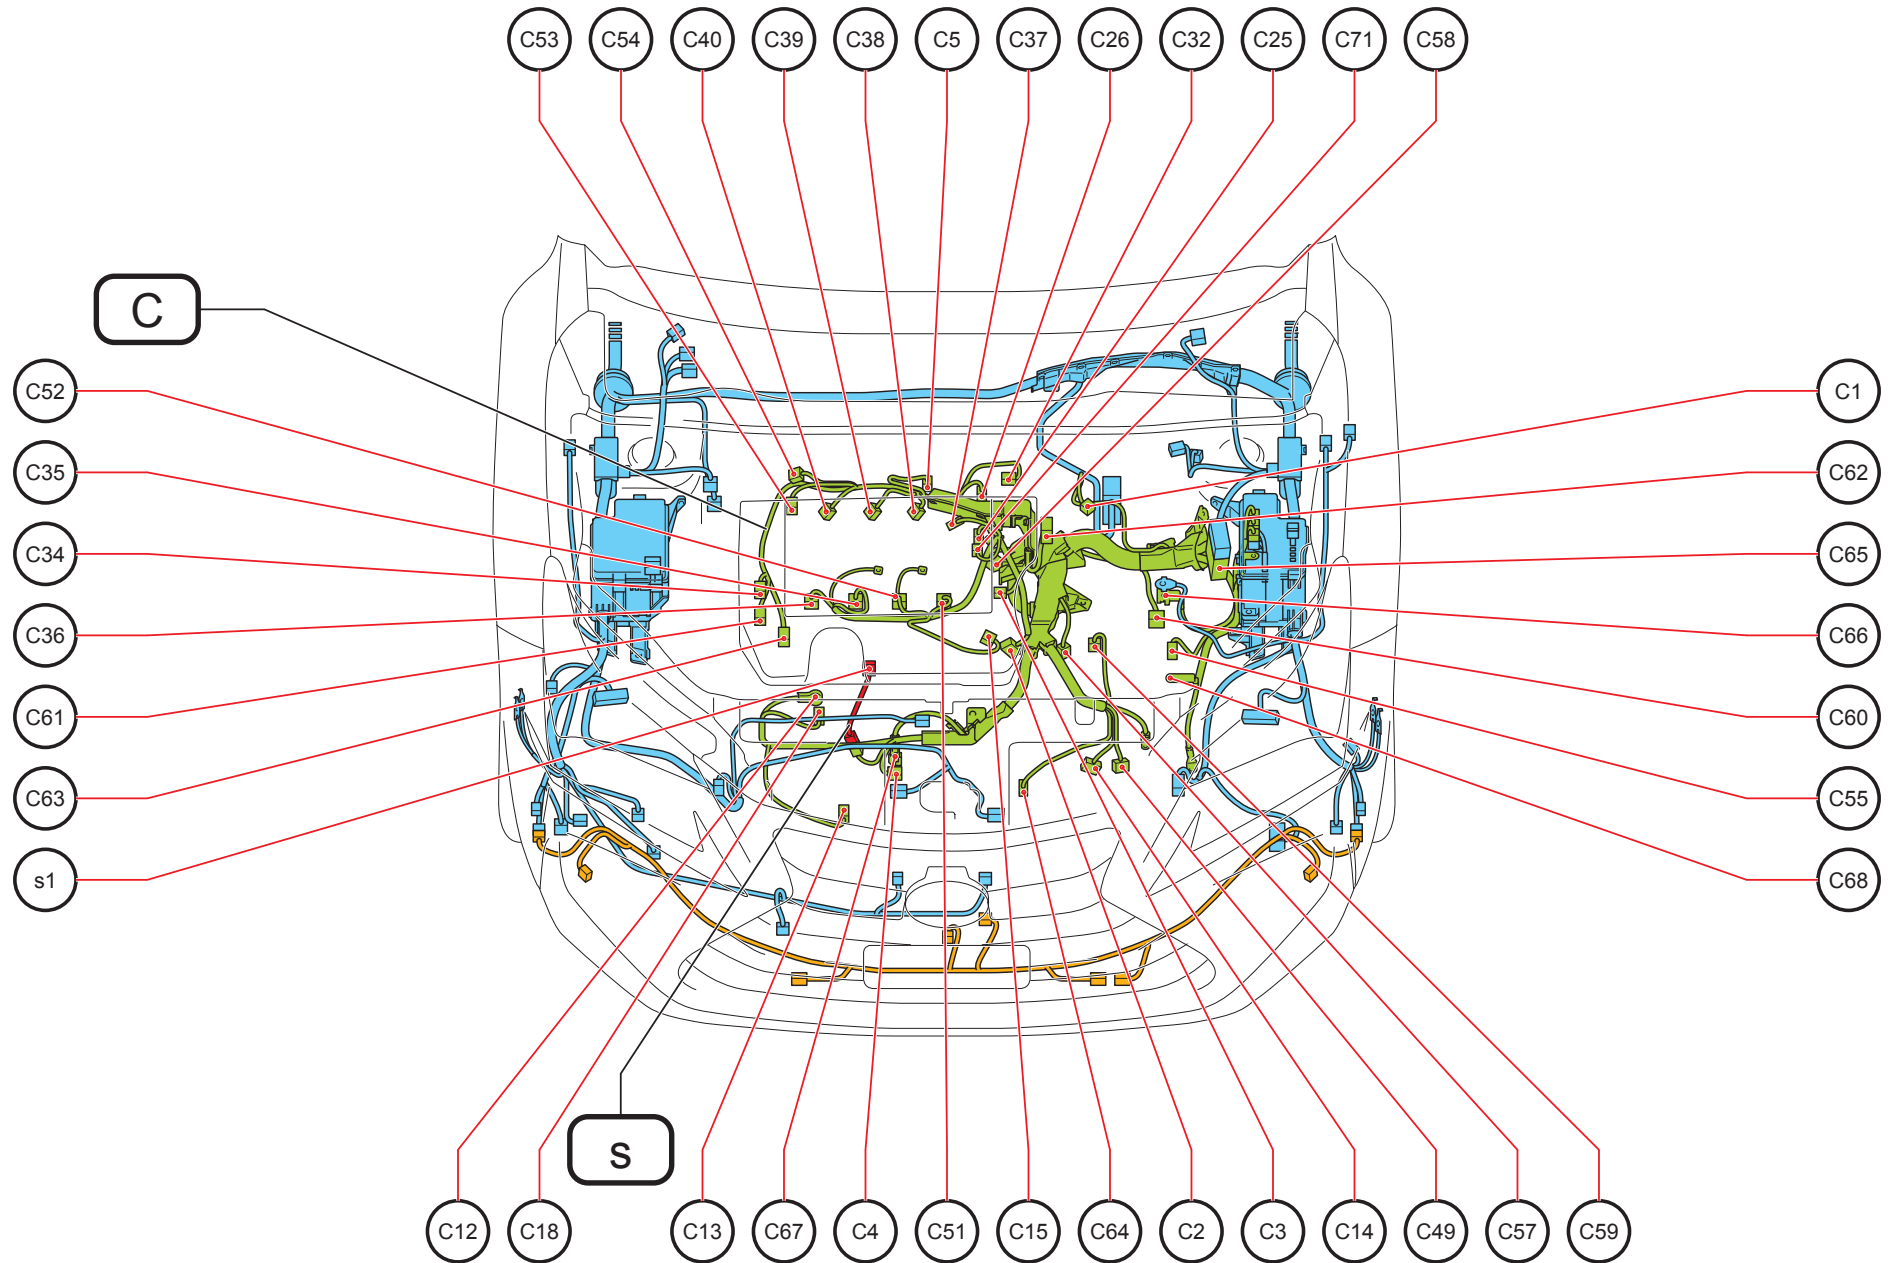


C1	Intake Mass Air Flow Meter Sub-Assembly
C2	Throttle Body with Motor Assembly
C3	E.F.I. Engine Coolant Temperature Sensor
C4	Starter Assembly
C5	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C12	Generator Assembly
C13	Compressor with Pulley Assembly
C14	Park/Neutral Position Switch Assembly
C15	E.F.I. Vacuum Sensor Assembly
C18	Generator Assembly
C25	Camshaft Position Sensor (Intake Side)
C26	Camshaft Position Sensor (Exhaust Side)
C32	Purge VSV
C34	Engine Oil Pressure Switch Assembly
C35	Fuel Injector Assembly No. 2 (for Port Injection)
C36	Fuel Injector Assembly No. 1 (for Port Injection)
C37	Ignition Coil Assembly No. 4
C38	Ignition Coil Assembly No. 3
C39	Ignition Coil Assembly No. 2
C40	Ignition Coil Assembly No. 1
C49	CVT Solenoid (Transmission Wire)
C51	Fuel Injector Assembly No. 4 (for Port Injection)
C52	Fuel Injector Assembly No. 3 (for Port Injection)
C53	Camshaft Timing Oil Control Valve Assembly (Intake Side)
C54	Camshaft Timing Oil Control Valve Assembly (Exhaust Side)
C55	Battery State Sensor Assembly
C57	Transmission Revolution Sensor No. 1 (Turbine)
C58	Transmission Revolution Sensor No. 1 (Secondary)
C59	Transmission Revolution Sensor No. 1 (Primary)
C60	Oil Pressure Sensor
C61	Engine Oil Temperature Sensor
C62	Continuously Variable Valve Lift Controller Assembly
C63	Crank Position Sensor
C64	Oil Pump with Motor Assembly
C65	ECM
C66	Battery
C67	Starter Assembly
C68	Battery
C71	Valve Event Angle Control Shaft Monitor Sensor (Crank Position Sensor)
s1	Knock Control Sensor (Bank 1)

Position of Parts in Engine Compartment (LHD 3ZR-FAE)

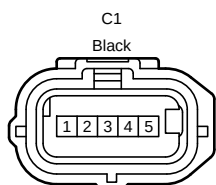

90980-12292

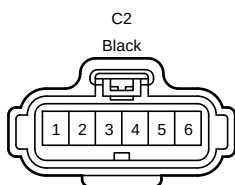

90980-11858





90980-10735




90980-11410




90980-10869

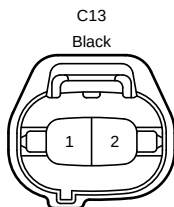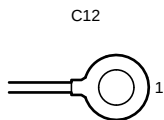


90980-11156

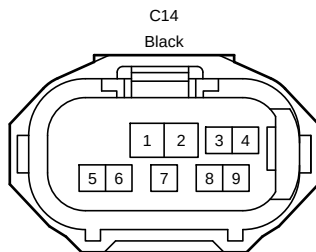


90980-12A23

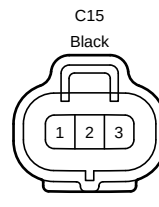


90980-10845

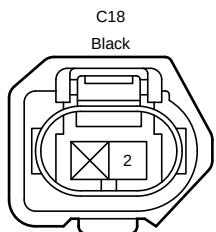


90980-12A88

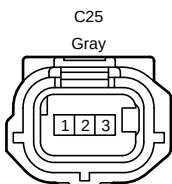


90980-12353

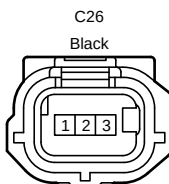


90980-12353

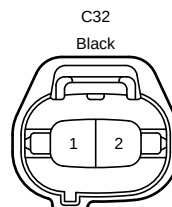


90980-11156
(Except China)

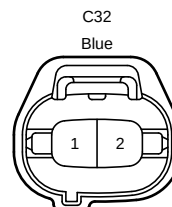


90980-11156
(China)

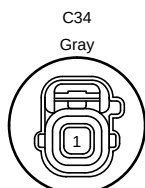


90980-11363

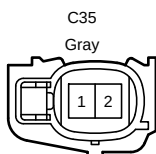


90980-11875

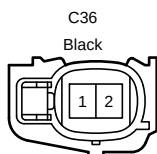


90980-11875

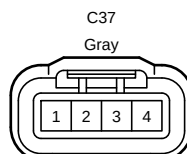


90980-11885

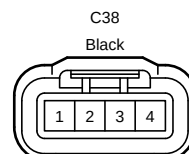


90980-11885

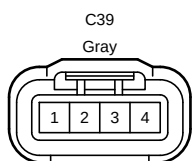


90980-11885

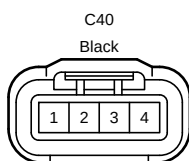


90980-11885

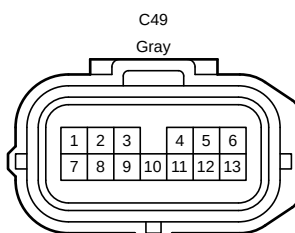

90980-12326

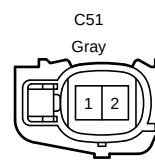


90980-11875

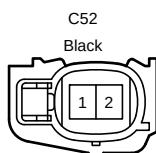


90980-11875




90980-11162

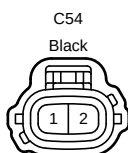

90980-11162

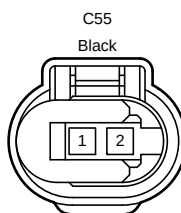

90080-98275

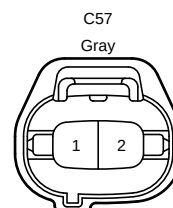

90980-11156

Position of Parts in Engine Compartment (LHD 3ZR-FAE)

