



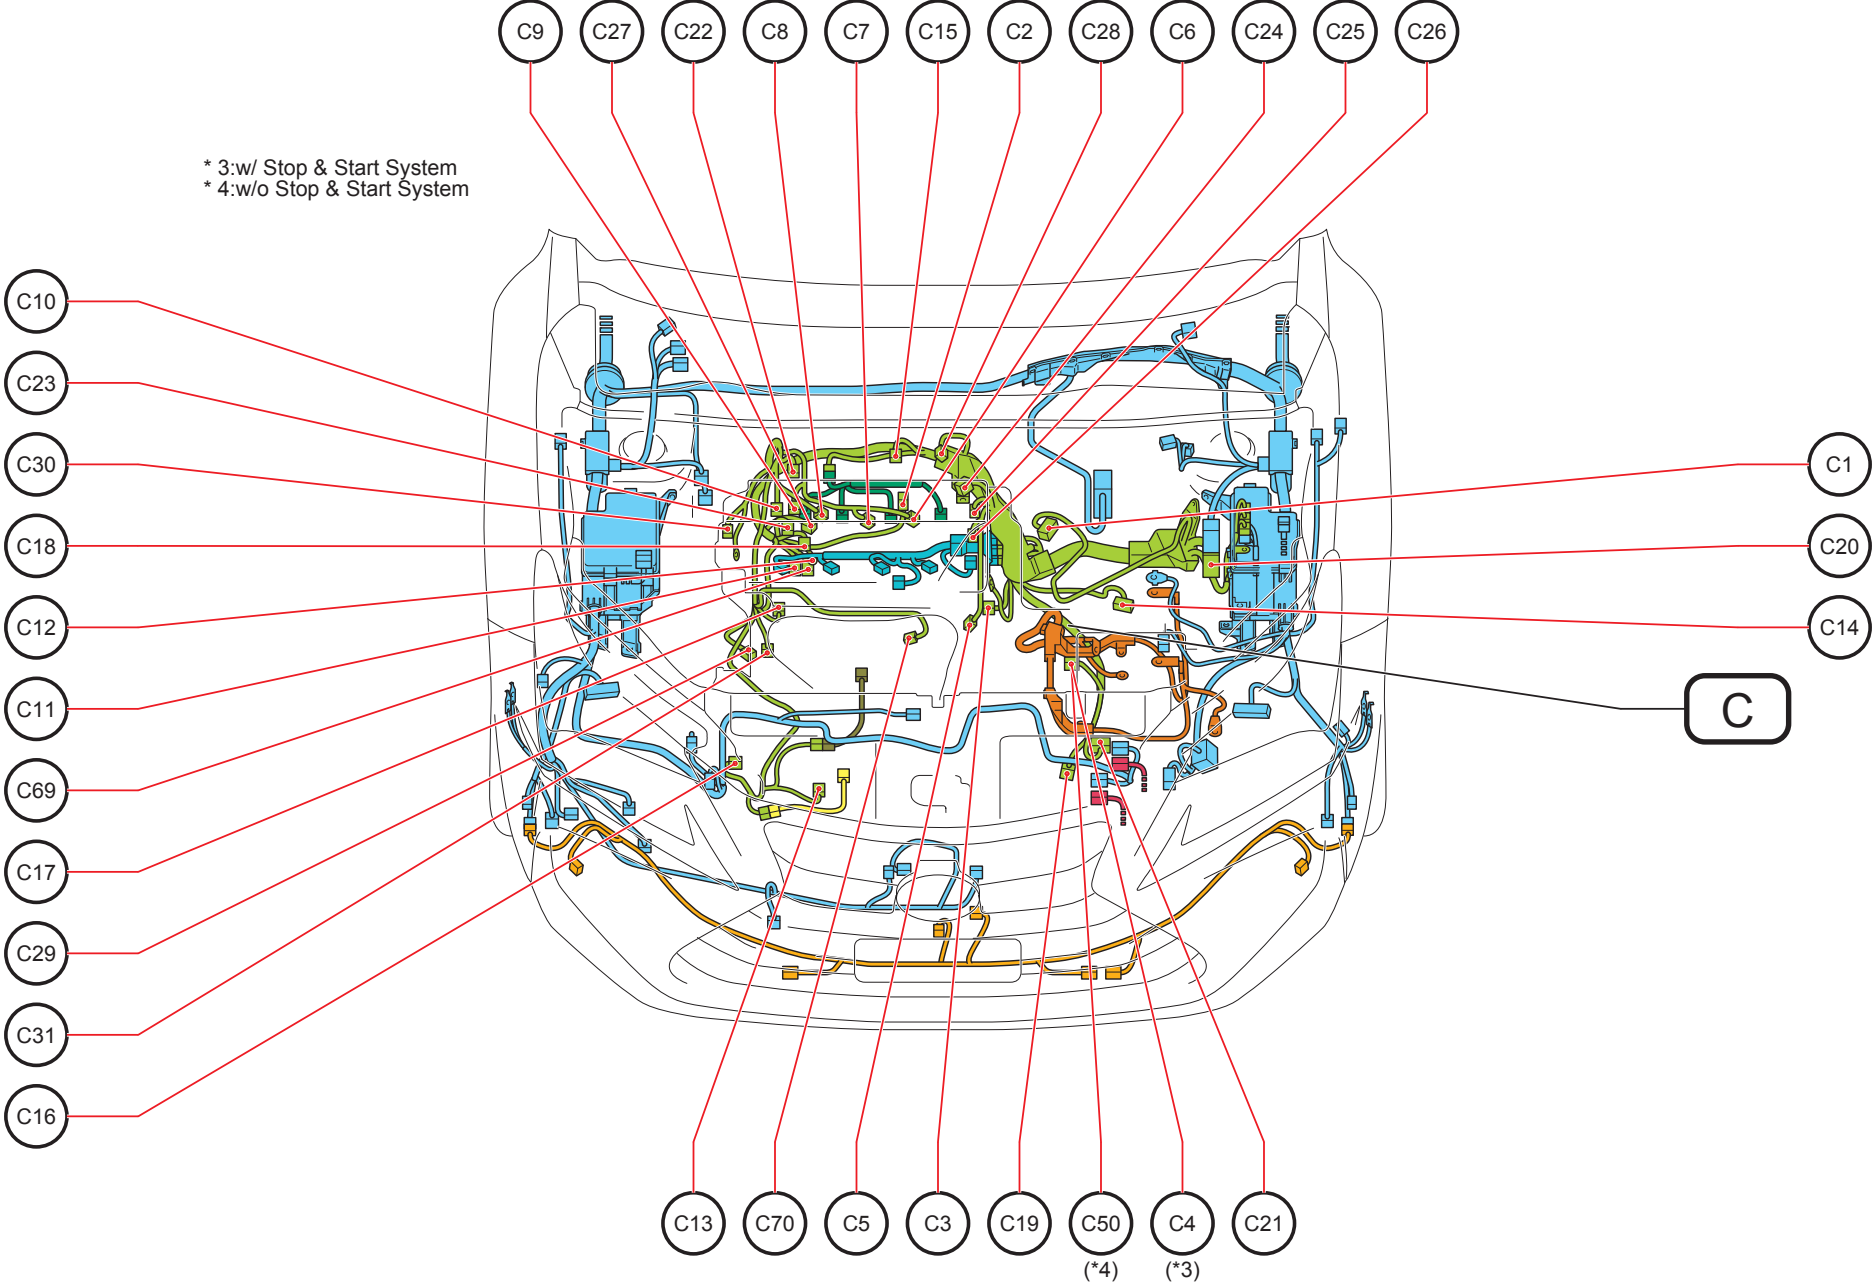

C1	Intake Mass Air Flow Meter Sub-Assembly
C2	Throttle Body with Motor Assembly
C3	E.F.I. Engine Coolant Temperature Sensor
C4	Starter Assembly
C5	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C6	Ignition Coil Assembly No. 4
C7	Ignition Coil Assembly No. 3
C8	Ignition Coil Assembly No. 2
C9	Ignition Coil Assembly No. 1
C10	Camshaft Timing Oil Control Valve Assembly (Exhaust Side)
C11	Oxygen Sensor (Bank 1 Sensor 2)
C12	Generator Assembly
C13	Compressor with Pulley Assembly
C14	Park/Neutral Position Switch Assembly
C15	E.F.I. Vacuum Sensor Assembly
C16	Engine Oil Temperature Sensor (Temperature Sensor)
C17	Engine Oil Pressure Switch Assembly
C18	Generator Assembly
C19	Oil Pump with Motor Assembly
C20	ECM
C21	Electronically Controlled Transmission Solenoid (Transmission Wire)
C22	Fuel Pressure Sensor (Low Pressure Side)
C23	Vacuum Regulating Valve Assembly
C24	Fuel Pump Assembly
C25	Camshaft Position Sensor (Intake Side)
C26	Camshaft Position Sensor (Exhaust Side)
C27	E.F.I. Vacuum Sensor Assembly
C28	Purge VSV
C29	Crank Position Sensor
C30	Camshaft Timing Oil Control Valve Assembly (Intake Side)
C31	No. 2 Vacuum Switching Valve Assembly
C50	Starter Assembly
C69	No. 2 Air Fuel Ratio Sensor (Bank 1 Sensor 2)
C70	Differential Pressure Sensor

Position of Parts in Engine Compartment (LHD 8AR-FTS)

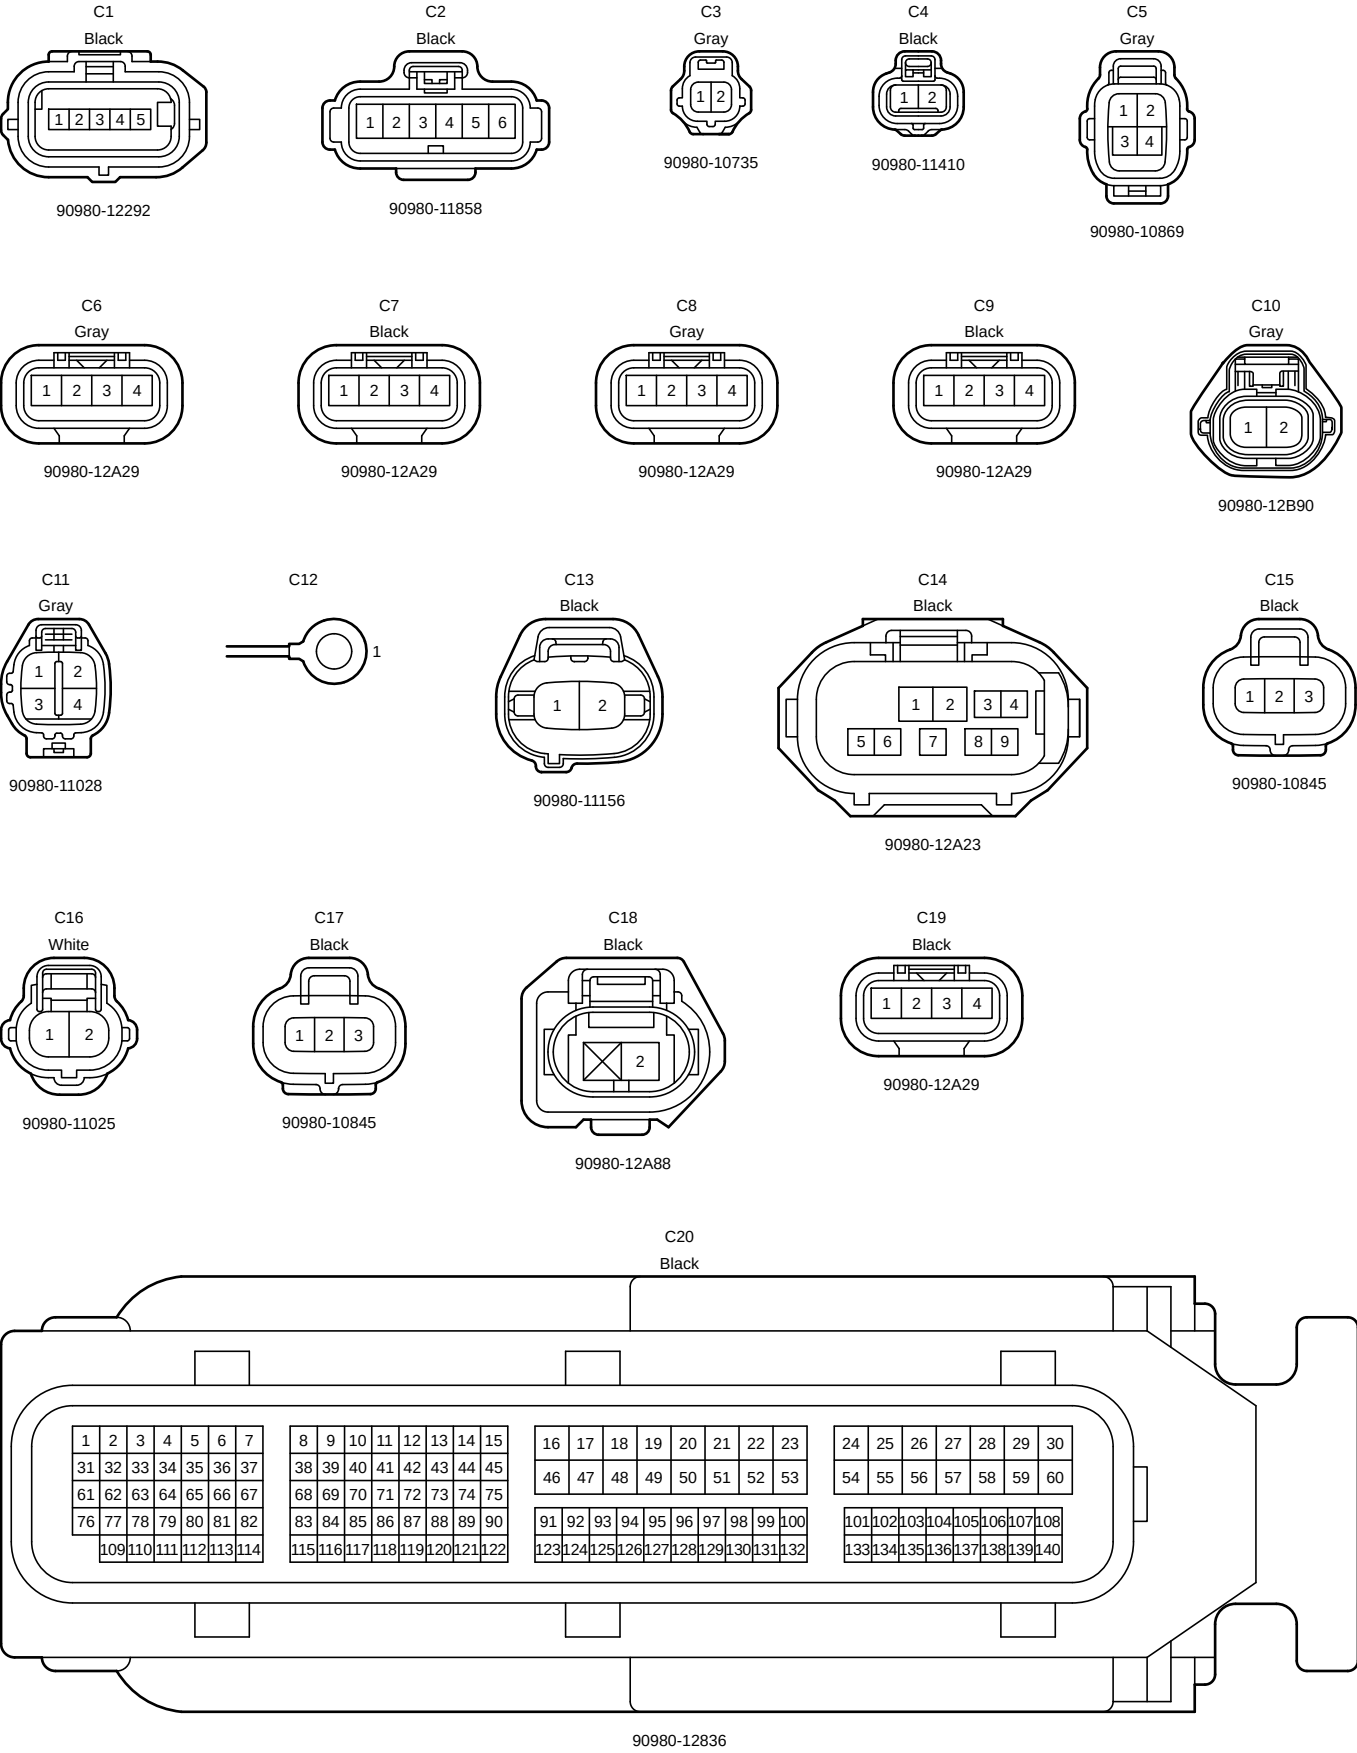

Position of Parts in Engine Compartment (LHD 8AR-FTS)

