


Position of Parts in Engine Compartment (LHD 8AR-FTS)

* 5: Before Sep. 2017 Production
* 6: From Sep. 2017 Production

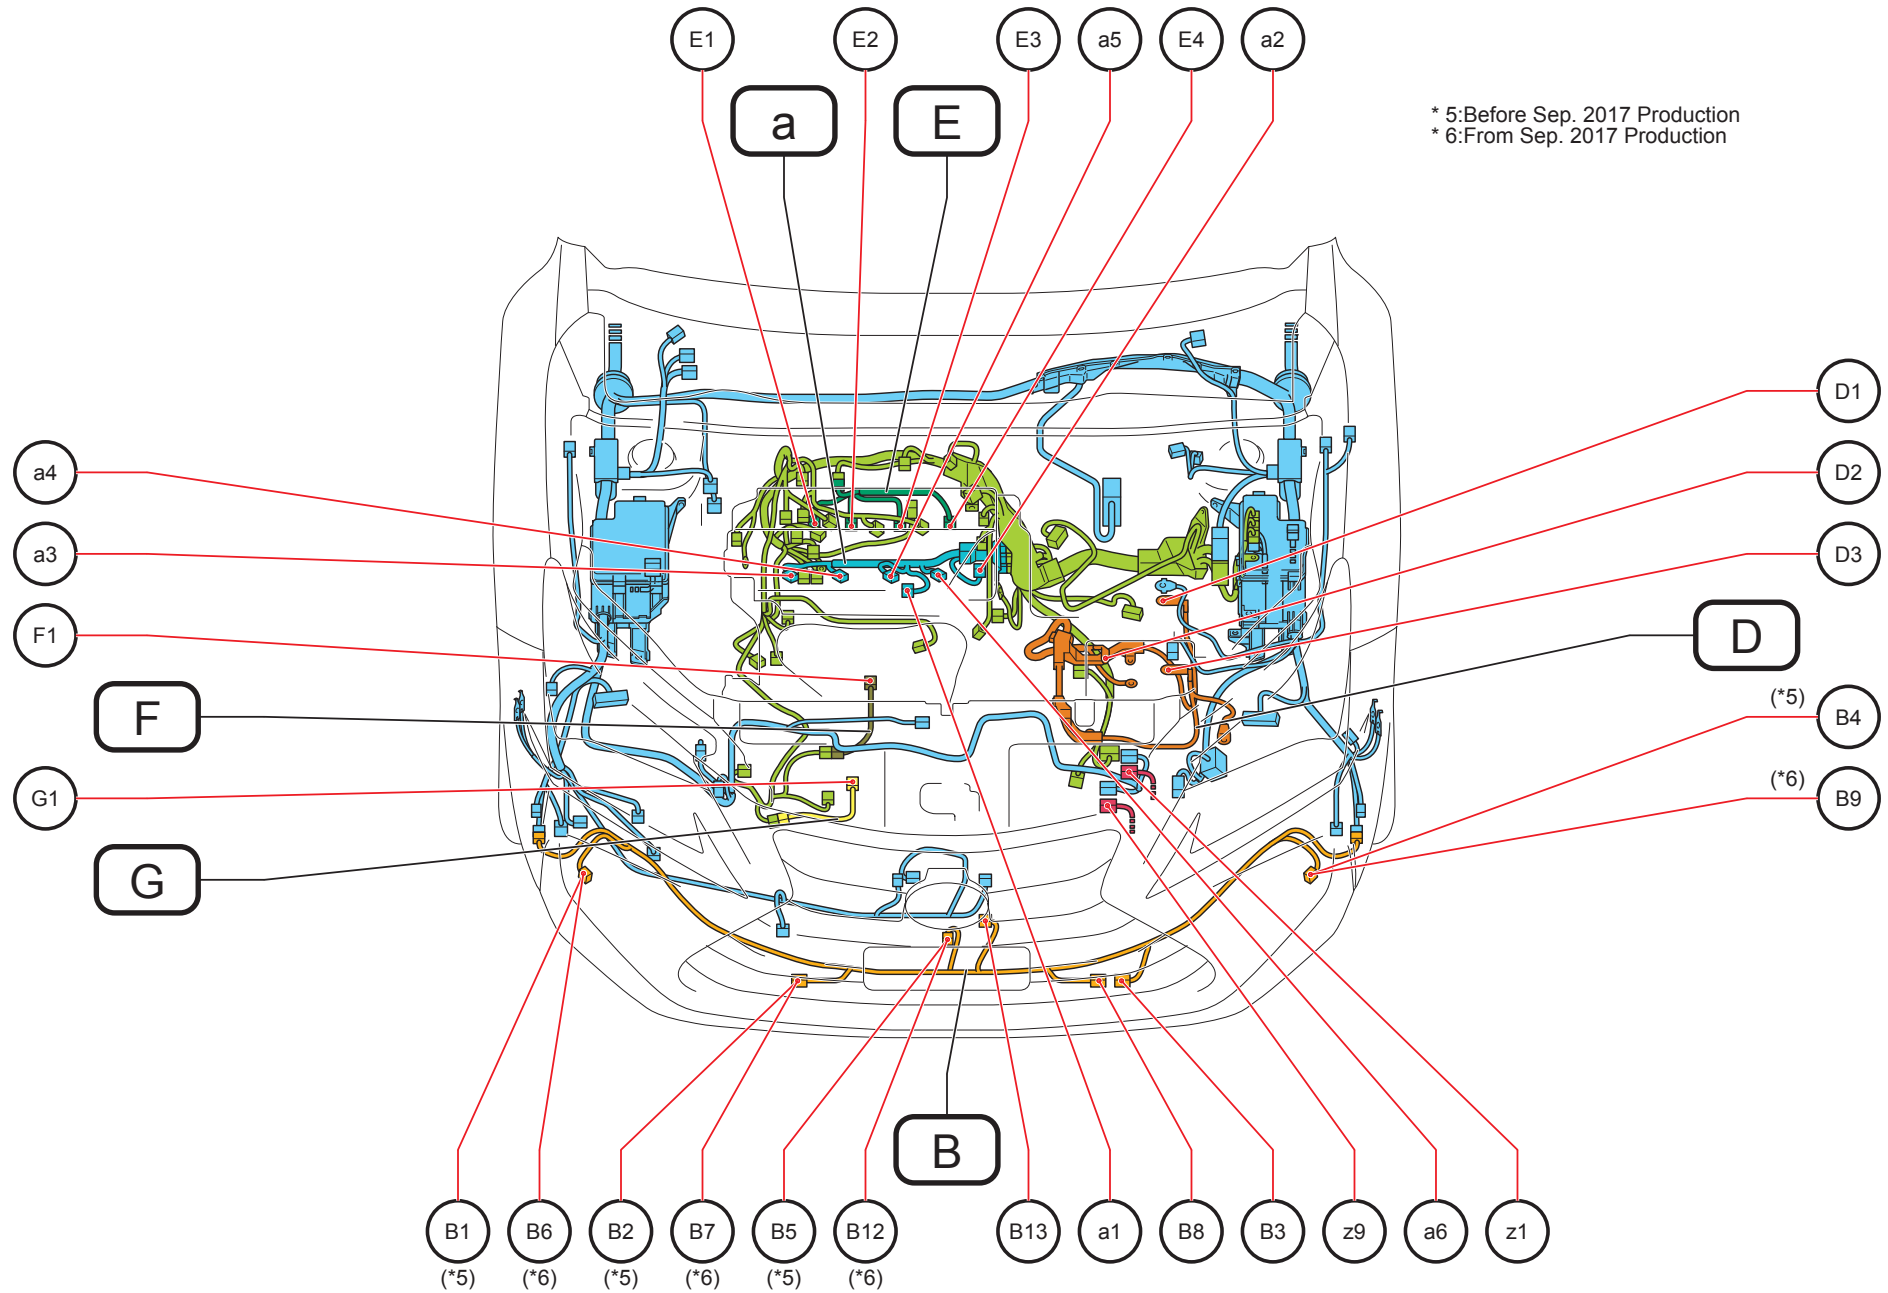

B1	Front No. 1 Ultrasonic Sensor RH
B2	Front No. 1 Ultrasonic Sensor RH Center
B3	Front No. 1 Ultrasonic Sensor LH Center
B4	Front No. 1 Ultrasonic Sensor LH
B5	Front Television Camera Assembly
B6	Front No. 1 Ultrasonic Sensor RH
B7	Front No. 1 Ultrasonic Sensor RH Center
B8	Front No. 1 Ultrasonic Sensor LH Center
B9	Front No. 1 Ultrasonic Sensor LH
B12	Front Television Camera Assembly
B13	Millimeter Wave Radar Sensor Assembly
D1	Battery
D2	Starter Assembly
D3	Battery
E1	Fuel Injector Assembly No. 1 (for Port Injection)
E2	Fuel Injector Assembly No. 2 (for Port Injection)
E3	Fuel Injector Assembly No. 3 (for Port Injection)
E4	Fuel Injector Assembly No. 4 (for Port Injection)
F1	Oil Pressure Switching Valve Assembly
G1	Engine Oil Level Sensor
a1	Knock Control Sensor (Bank 1)
a2	Fuel Pressure Sensor (High Pressure Side)
a3	Fuel Injector Assembly No. 1 (for Direct Injection)
a4	Fuel Injector Assembly No. 2 (for Direct Injection)
a5	Fuel Injector Assembly No. 3 (for Direct Injection)
a6	Fuel Injector Assembly No. 4 (for Direct Injection)
z1	Cooling Fan Motor , No. 1 Cooling Fan ECU
z9	No. 2 Cooling Fan ECU , No. 2 Cooling Fan Motor

Position of Parts in Engine Compartment (LHD 8AR-FTS)

