























Position of Parts in Seat (LHD Front Seat)

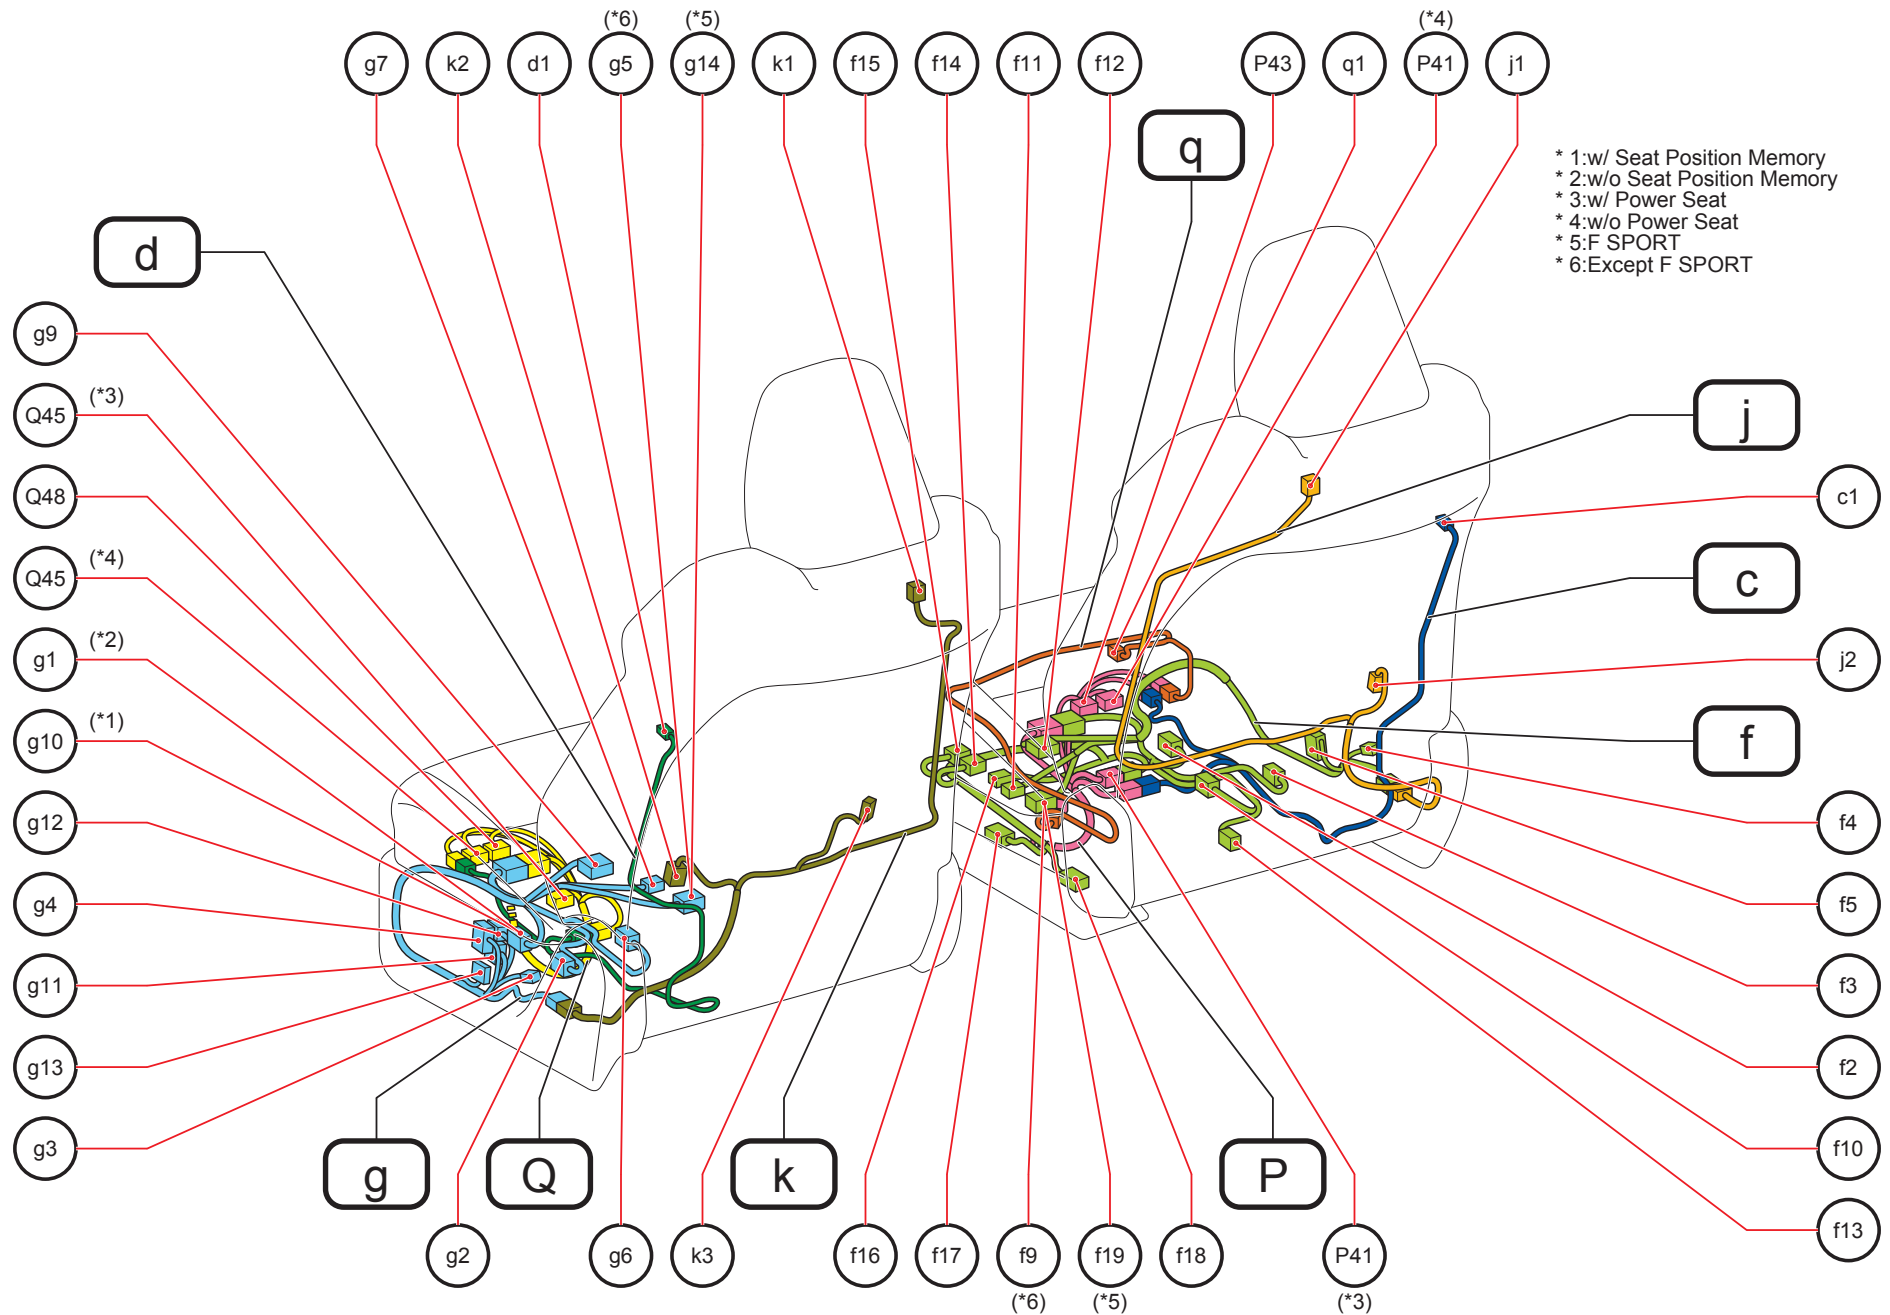


Position of Parts in Seat (LHD Front Seat)

P41	Front Seat Inner Belt Assembly RH
P43	Front Seat Inner Belt Assembly RH
Q45	Front Seat Inner Belt Assembly LH
Q48	Front Seat Inner Belt Assembly LH
c1	Front Seat Airbag Assembly RH
d1	Front Seat Airbag Assembly LH
f2	Front Power Seat Slide Position Motor RH (Front Seat Adjuster Assembly RH)
f3	Front Power Seat Tilt Position Motor RH (Front Seat Adjuster Assembly RH)
f4	Front Power Seat Lift Position Motor RH (Front Seat Adjuster Assembly RH)
f5	Front Power Seat Switch RH
f9	Seat Heater Control Sub-Assembly RH
f10	Seat Cushion Climate Control Blower Assembly RH
f11	Front Seat Inner Belt Assembly RH
f12	No. 39 Junction Connector
f13	Occupant Detection Sensor RH (Separate Type Front Seat Cushion Pad RH)
f14	Occupant Detection ECU
f15	Occupant Detection ECU
f16	Front Seat Inner Belt Assembly RH
f17	Front Occupant Classification Sensor LH
f18	Rear Occupant Classification Sensor LH
f19	Separate Type Front Seat Cushion Cover RH
g1	Front Power Seat Slide Position Motor LH (Front Seat Adjuster Assembly LH)
g2	Front Power Seat Tilt Position Motor LH (Front Seat Adjuster Assembly LH)
g3	Front Power Seat Lift Position Motor LH (Front Seat Adjuster Assembly LH)
g4	Front Power Seat Switch LH
g5	Seat Heater Control Sub-Assembly LH
g6	Seat Cushion Climate Control Blower Assembly LH
g7	Front Seat Inner Belt Assembly LH
g9	No. 40 Junction Connector
g10	Front Power Seat Slide Position Motor LH (Front Seat Adjuster Assembly LH)
g11	Front Power Seat Switch LH
g12	Front Power Seat Switch LH
g13	Front Lumbar Power Seat Switch
g14	Separate Type Front Seat Cushion Cover LH
j1	Seat Back Climate Control Blower RH
j2	Front Power Seat Reclining Position Motor RH (Separate Type Front Seat Back Spring Assembly RH)
k1	Seat Back Climate Control Blower LH
k2	Front Power Seat Reclining Position Motor LH (Separate Type Front Seat Back Spring Assembly LH)
k3	Front Power Seat Lumbar Support Motor LH (Front Seat Back Spring Sub-Assembly LH)
q1	Front Seat Cushion Airbag Assembly RH

      
Position of Parts in Seat (LHD Front Seat)

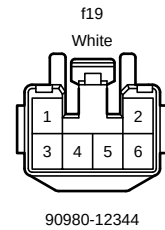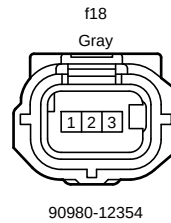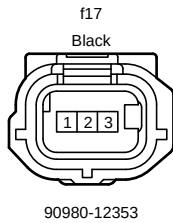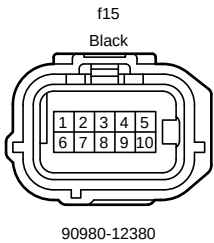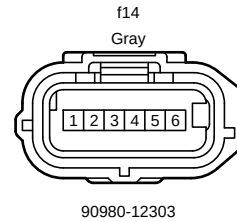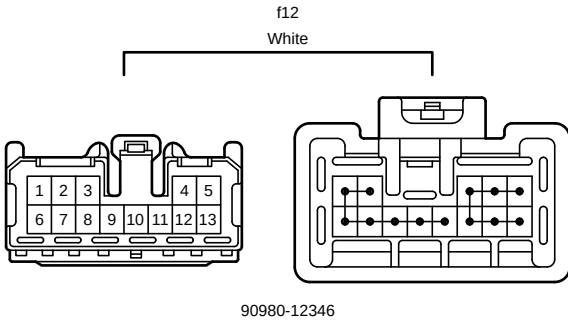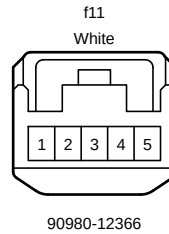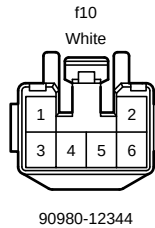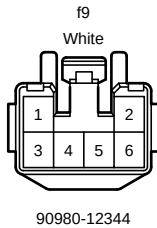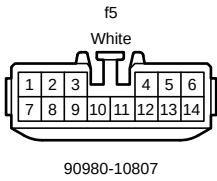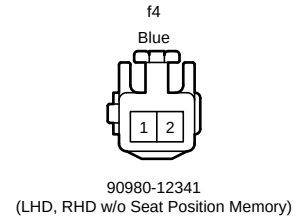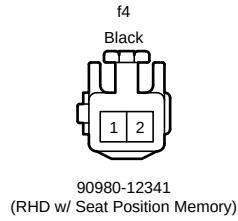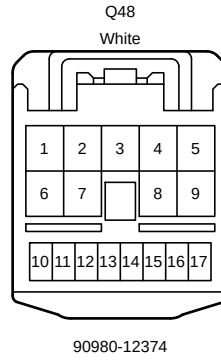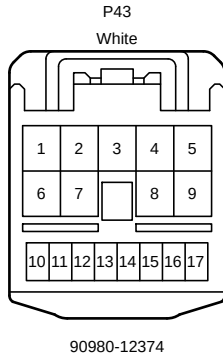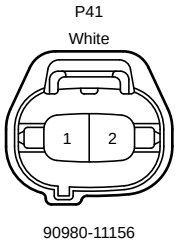

 
Position of Parts in Seat (LHD Front Seat)




90980-12341

 


90980-12341

 

 
90980-12341
(LHD w/ Seat Position Memory)



 
90980-12341
(RHD, LHD w/o Seat Position Memory Except Korea, w/o Seat Position Memory Korea w/o Climate Control Seat)



 
90980-12341
(w/o Seat Position Memory Korea w/ Climate Control Seat Before May 2018 Production)




90980-12341
(w/o Seat Position Memory Korea w/ Climate Control Seat From May 2018 Production)

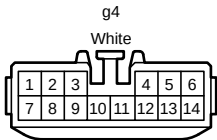


90980-10807

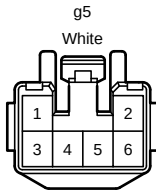


90980-12344

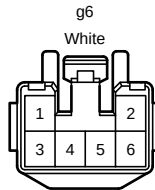


90980-12344

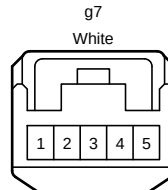


90980-12366

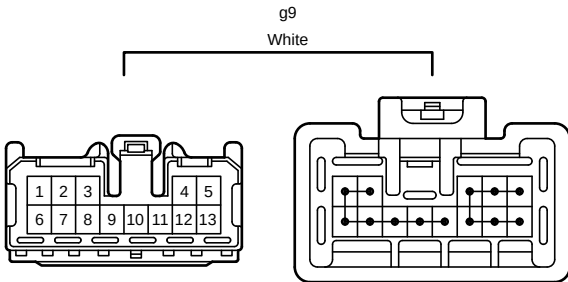


90980-12346

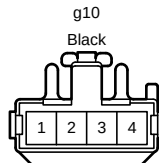


90980-12335

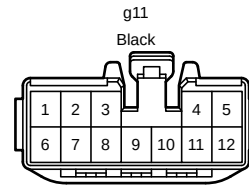


90980-11782

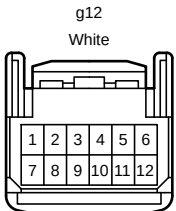


90980-12552

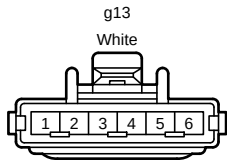


90980-10933

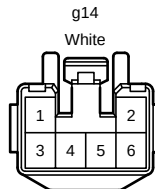

90980-12344

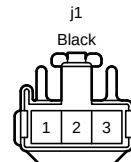


90980-12255

 


90980-12341


Position of Parts in Seat (LHD Front Seat)

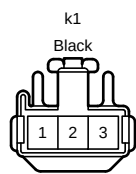


90980-12255

 

90980-12341

 

90980-12341

 

90980-12452