



Position of Parts in Instrument Panel (LHD)

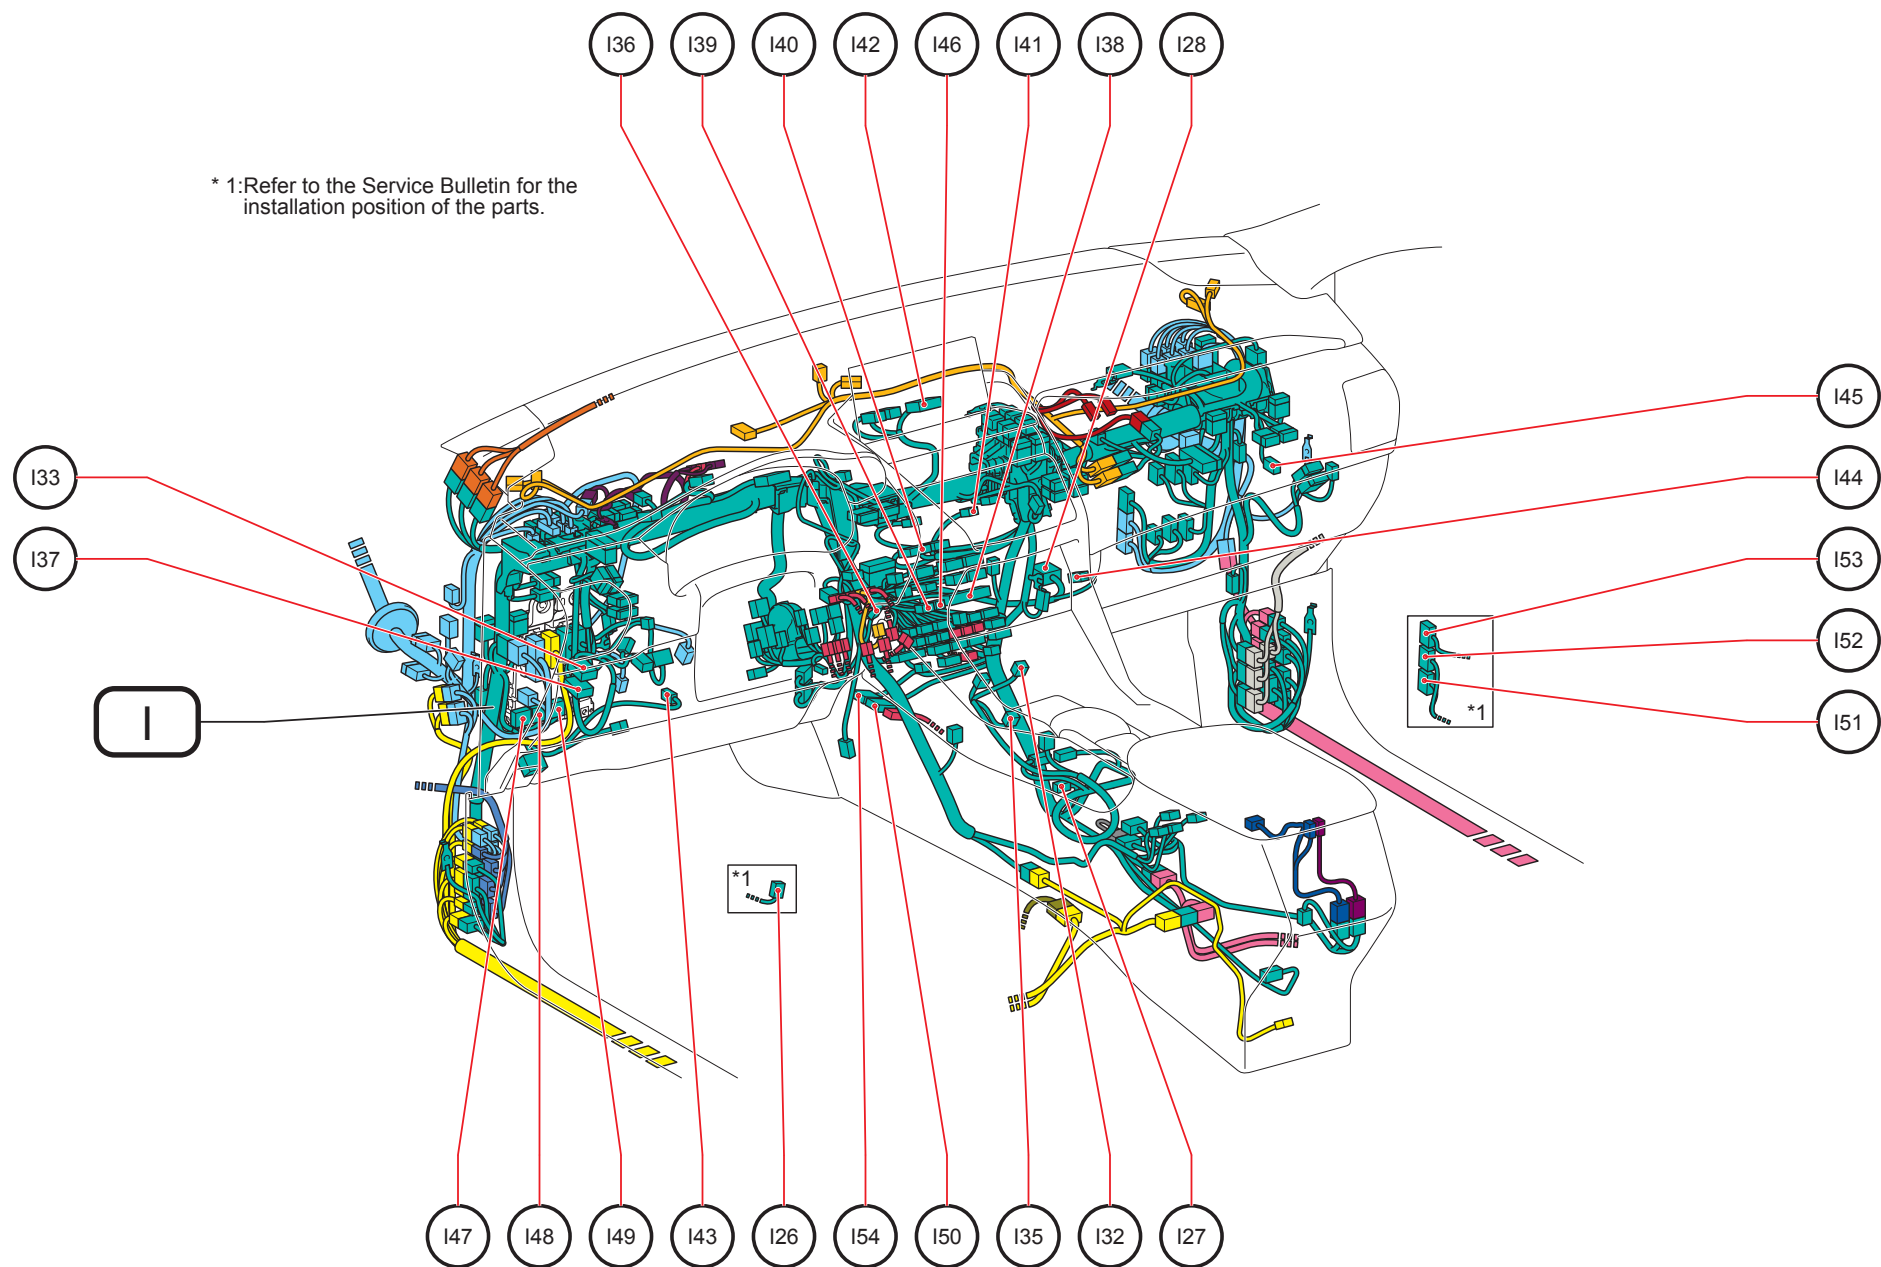


Position of Parts in Instrument Panel (LHD)

I26	ID Code Box
I27	No. 1 Indoor Electrical Key Antenna Assembly
I28	Blower Motor with Fan Sub-Assembly
I32	Shift Position Indicator
I33	Combination Switch Assembly
I35	Integration Control & Panel Assembly
I36	Skid Control Buzzer Assembly
I37	No. 2 Combination Switch Assembly
I38	Radio Receiver Assembly
I39	Radio Receiver Assembly
I40	Telematics Transceiver
I41	Mayday Battery
I42	Multi-Display Assembly
I43	No. 1 Interior Illumination Light Assembly LH
I44	No. 1 Interior Illumination Light Assembly RH
I45	Glove Box Light Assembly
I46	Radio Receiver Assembly
I47	Main Body ECU
I48	Main Body ECU
I49	Main Body ECU
I50	A/C Amplifier Assembly
I51	Certification ECU
I52	Certification ECU
I53	Certification ECU
I54	A/C Amplifier Assembly


Position of Parts in Instrument Panel (LHD)

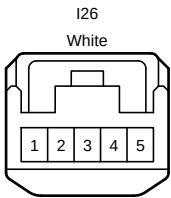


90980-12366

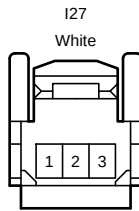


90980-12795

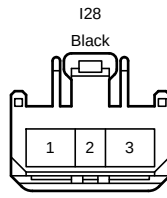


90980-11667

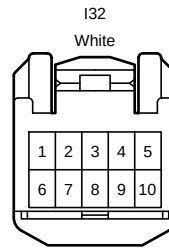


90980-12361

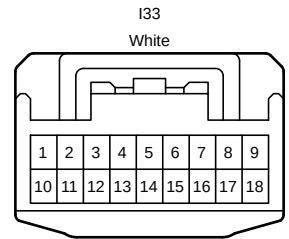


90980-12412

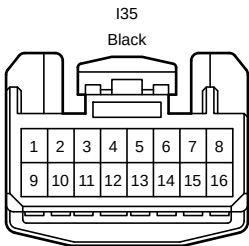


82824-33470

 


90980-10860

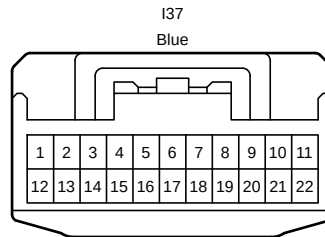


90980-12372

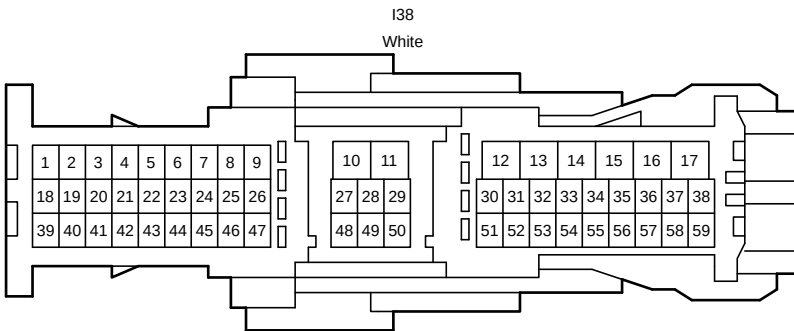


90980-12964

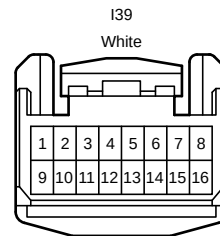


90980-12553

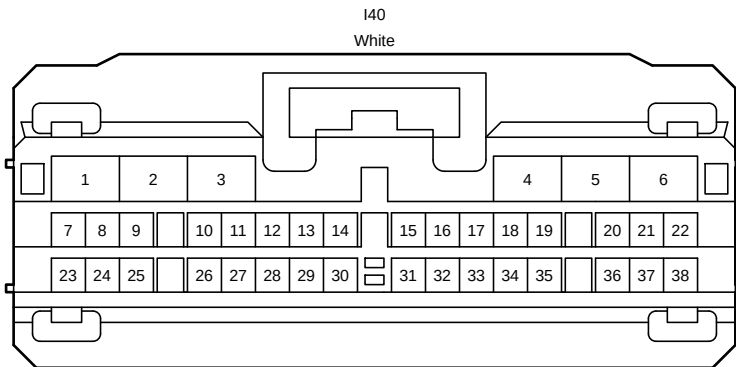

90980-12817

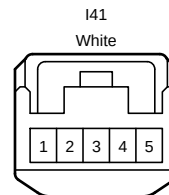

90980-12366

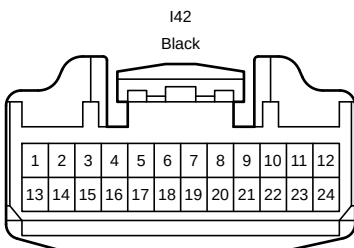

90980-12554




90980-12128



90980-12128




90980-12128

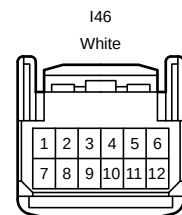

90980-12552


Position of Parts in Instrument Panel (LHD)

I47
White

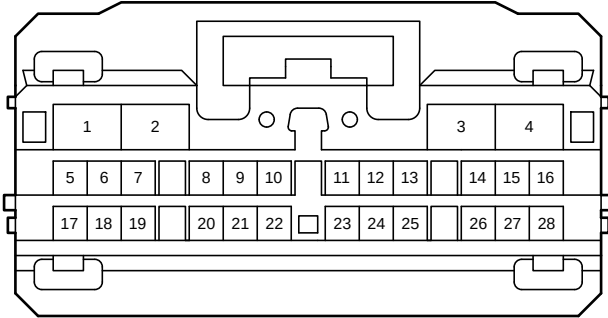


90980-12908

I48
White

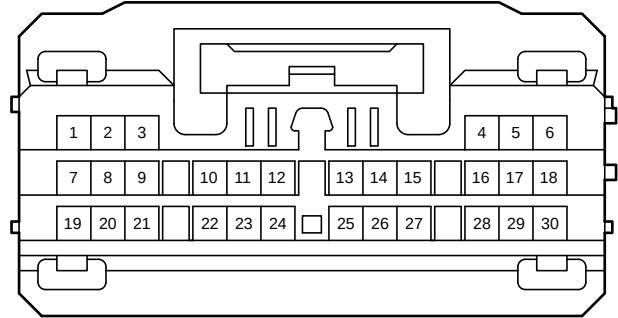


90980-12909

I49
White

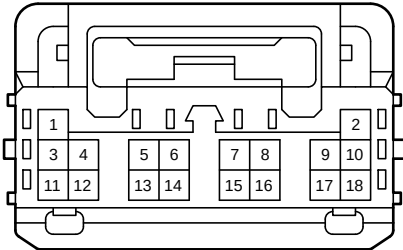


82824-33350

I50
White

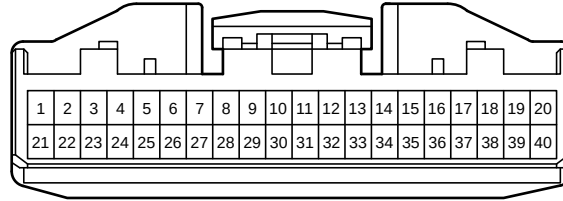


90980-12557

I51
White

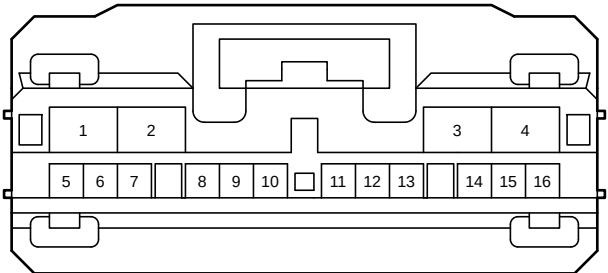


90980-12763

I52
Black

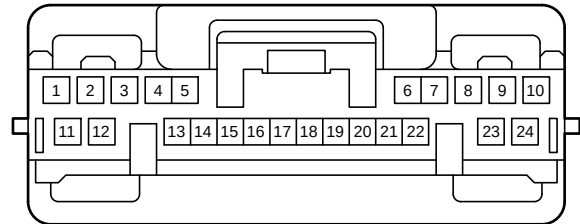


90980-12912

I53
Black

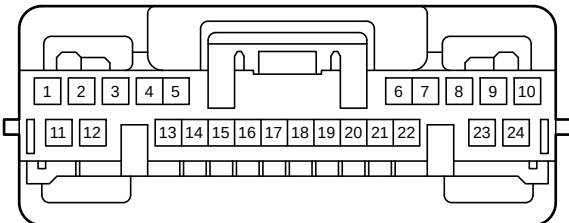

90980-12A42

I54
White

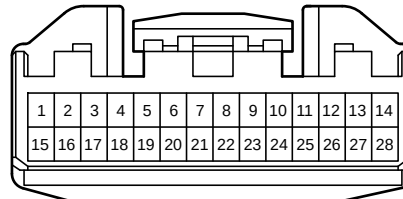

90980-12555