 
 


Position of Parts in Instrument Panel (LHD)

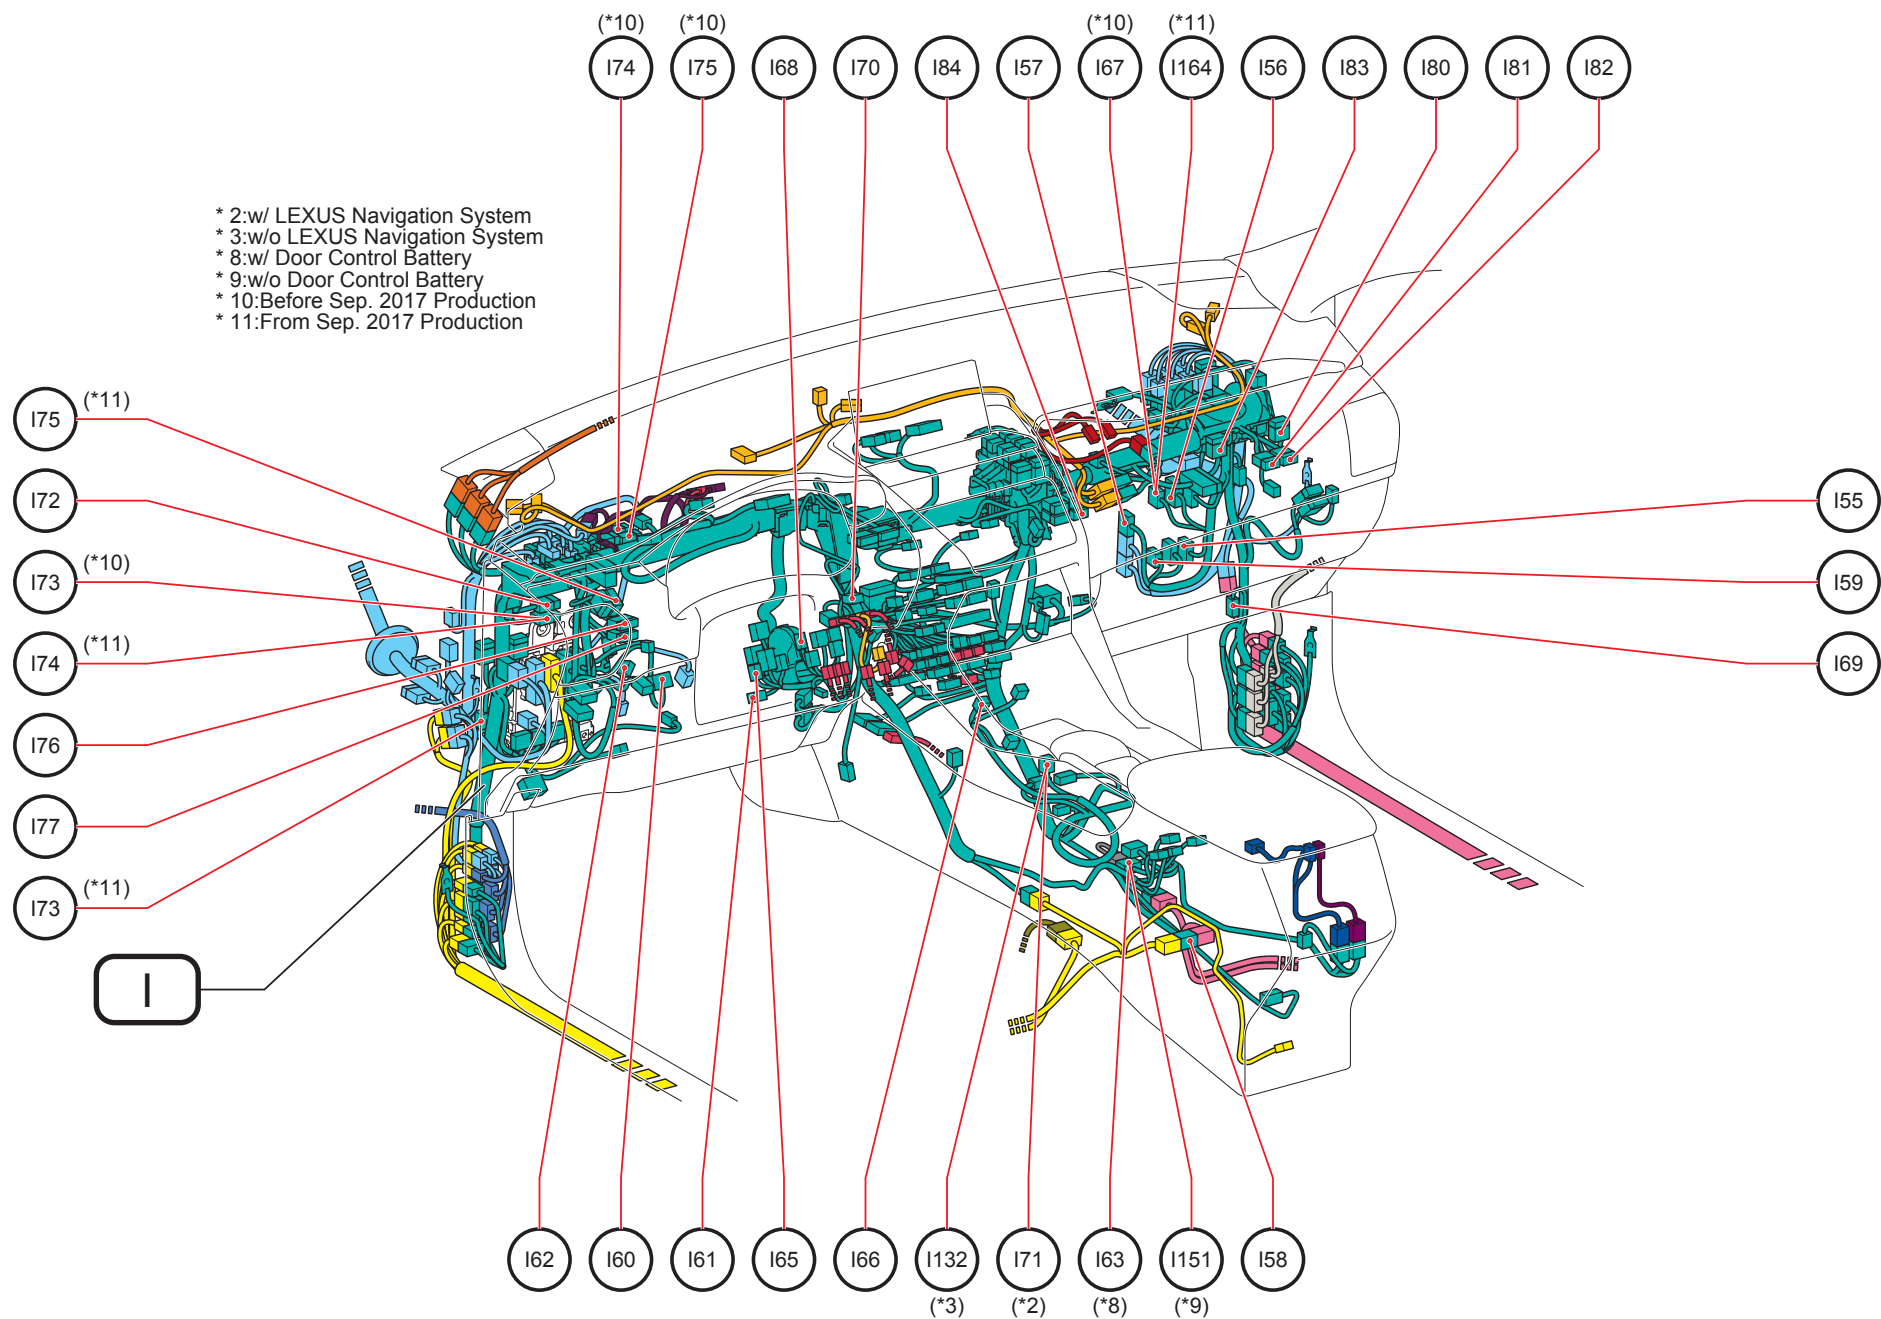


I55	4WD ECU Assembly
I56	Windshield Wiper Relay Assembly
I57	Engine Stop and Start ECU
I58	Airbag ECU Assembly
I59	Tire Pressure Monitor Initiator Driver
I60	Multiplex Tilt & Telescopic ECU
I61	Electric Power Steering Column Sub-Assembly
I62	Electric Power Steering Column Sub-Assembly
I63	Door Control Battery
I65	Tilt & Telescopic Switch
I66	Integration Control & Panel Assembly
I67	Network Gateway ECU
I68	Electric Power Steering Column Sub-Assembly
I69	Diode (Interior Illumination Light)
I70	Headup Display Switch Assembly
I71	Remote Operation Controller Assembly
I72	No. 6 Junction Connector
I73	No. 7 Junction Connector
I74	No. 8 Junction Connector
I75	No. 9 Junction Connector
I76	No. 10 Junction Connector
I77	No. 11 Junction Connector
I80	No. 14 Junction Connector
I81	No. 15 Junction Connector
I82	No. 16 Junction Connector
I83	No. 17 Junction Connector
I84	No. 18 Junction Connector
I132	Remote Operation Controller Assembly
I151	Short Connector
I164	Network Gateway ECU


Position of Parts in Instrument Panel (LHD)

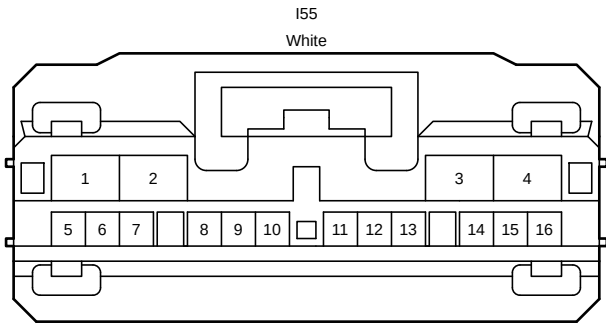

 
90980-12763

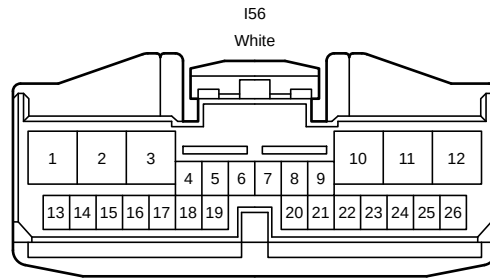


90980-12444

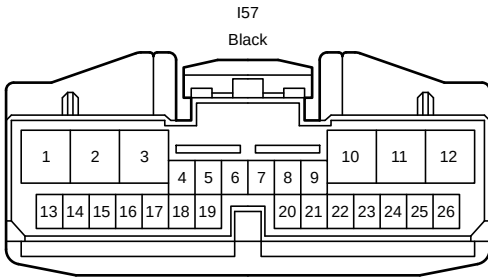 


82824-12510

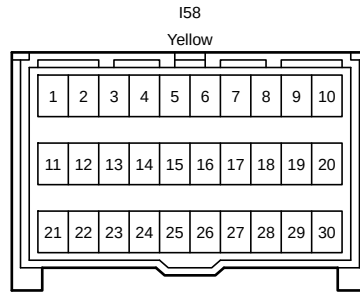 


90980-12391

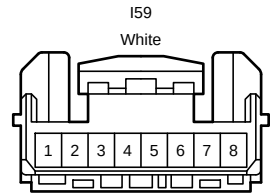 


90980-12558

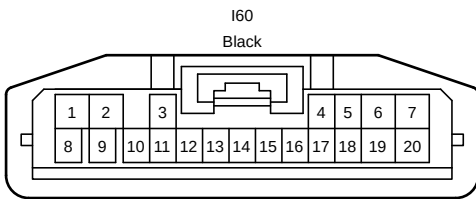 


90980-12976

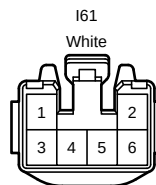 


90980-10797

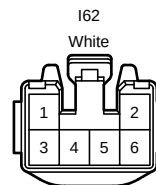 


90980-10797

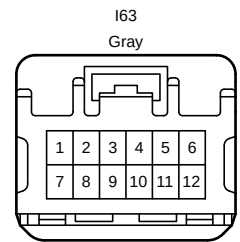 


90980-12737

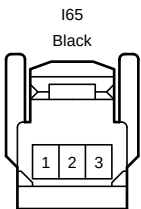 


90980-12695

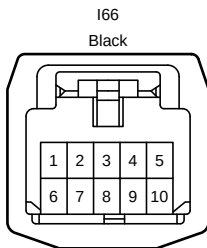 


82824-78040

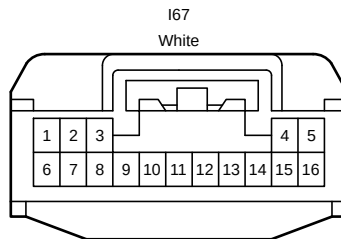 


90980-12423

 


90980-10871

 


90980-10962

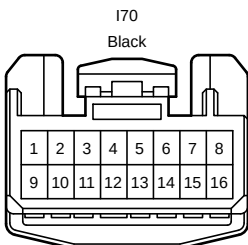 

82824-33470




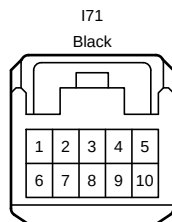 


90980-12368

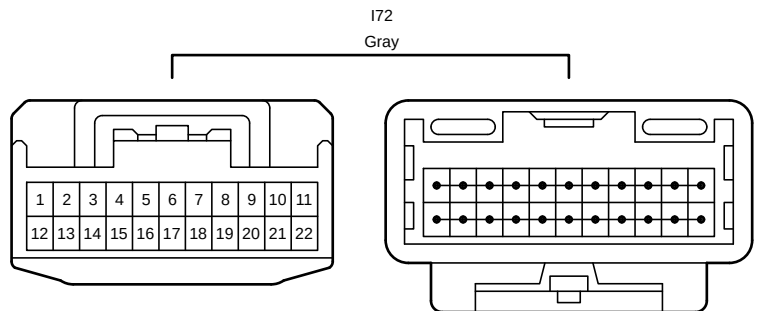 


90980-12372

    Position of Parts in Instrument Panel (LHD)

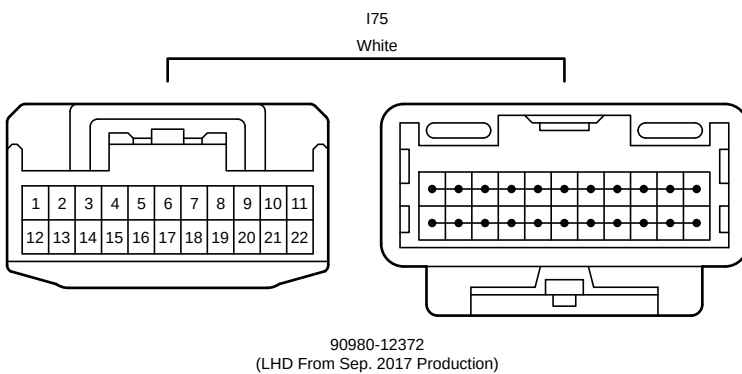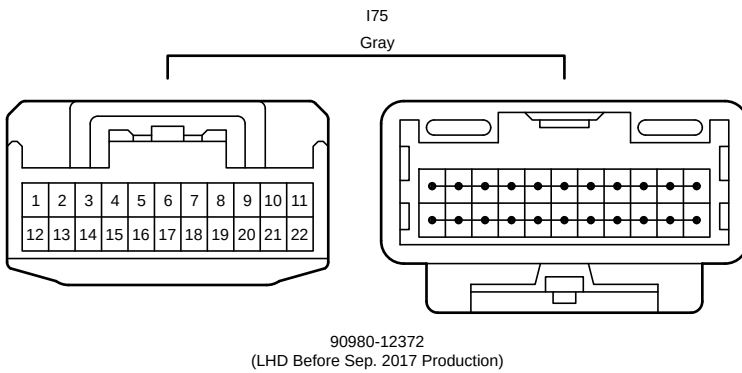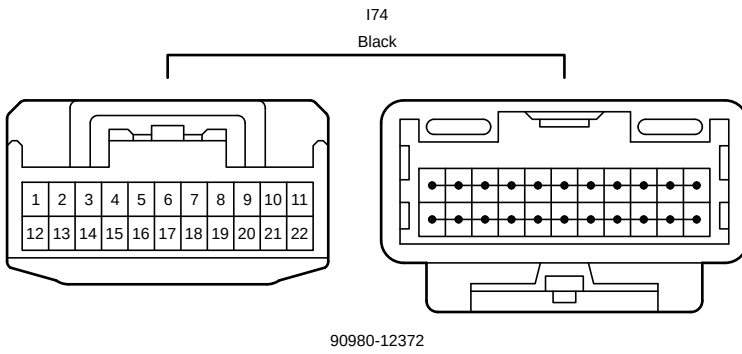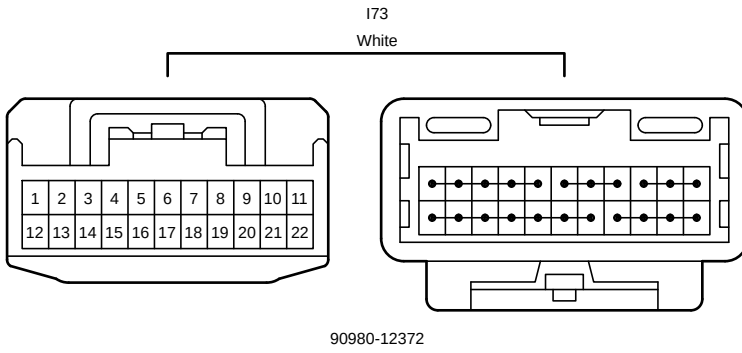


Position of Parts in Instrument Panel (LHD)

 I75
Blue

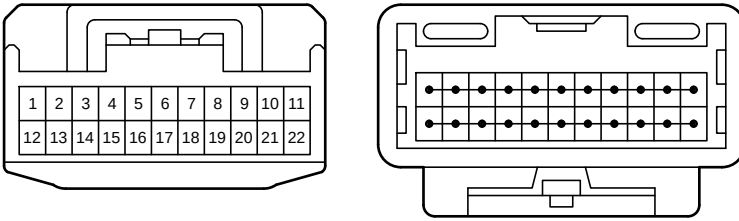


90980-12372
(RHD)

 I76
Blue

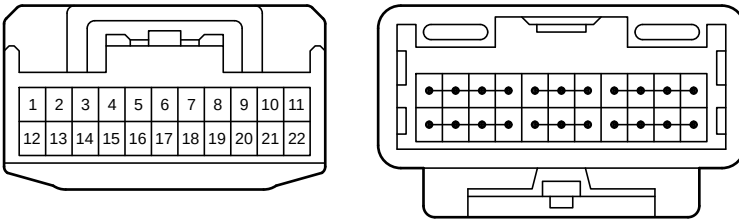


90980-12372

 I77
Gray

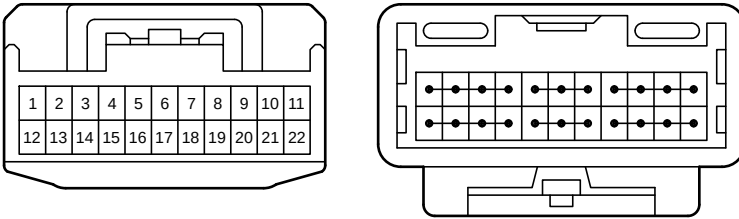

90980-12372

 
I80
White

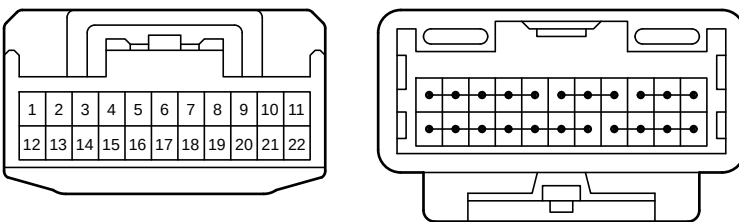

90980-12372


Position of Parts in Instrument Panel (LHD)

 I81
Gray

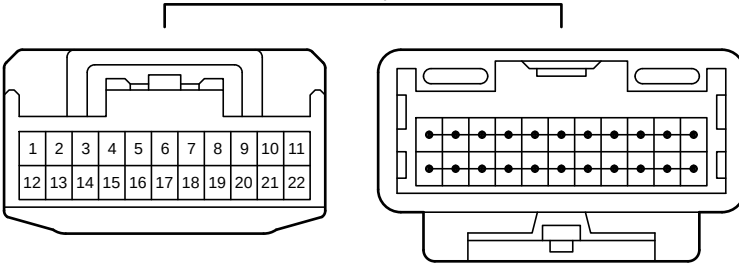


90980-12372

 I82
Blue

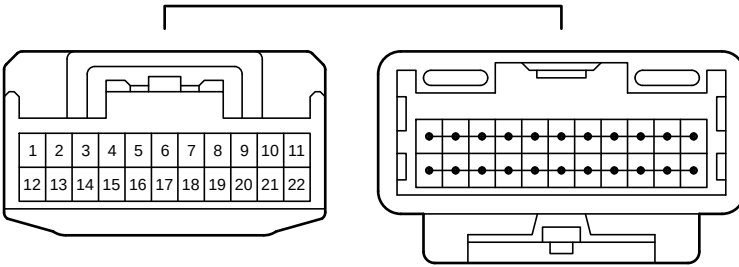


90980-12372
(LHD)

 I82
White

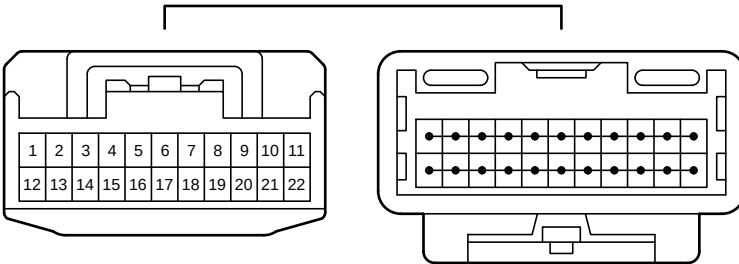

90980-12372
(RHD)

 
I83
Black

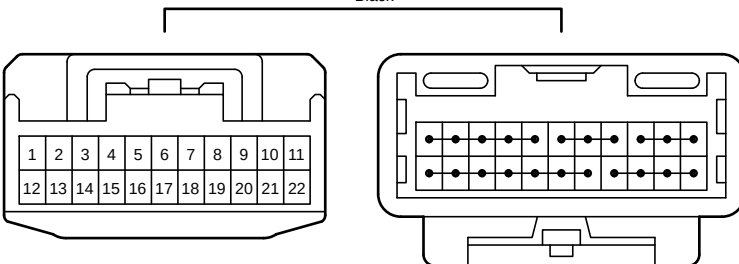

90980-12372
(LHD)


Position of Parts in Instrument Panel (LHD)

 I83
White

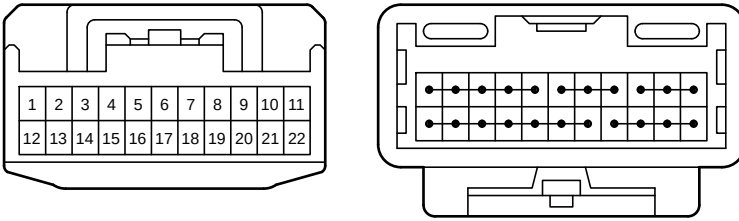


90980-12372
(RHD)

 I84
Black

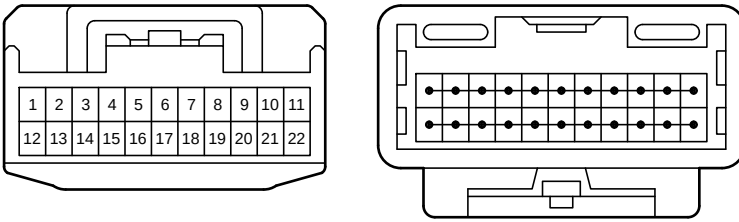


90980-12372
(LHD)

 I84
Gray

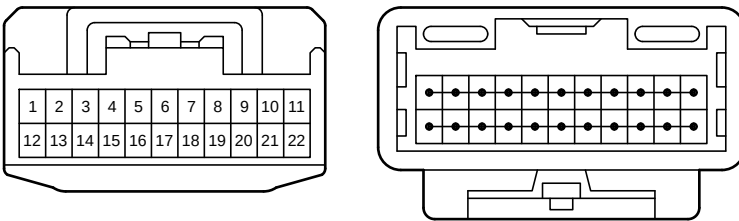


90980-12372
(RHD)

 I132
Black

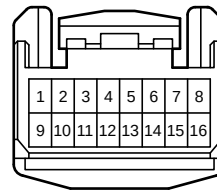


90980-12553

 I151
Gray

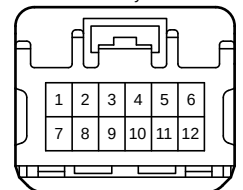

90980-12737

 I164
Black

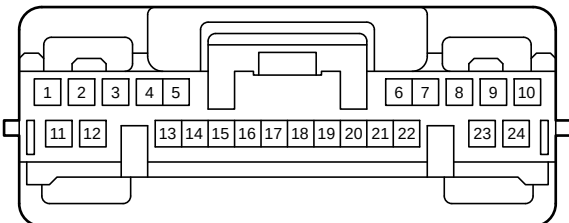

90980-12912