



Position of Parts in Instrument Panel (LHD)

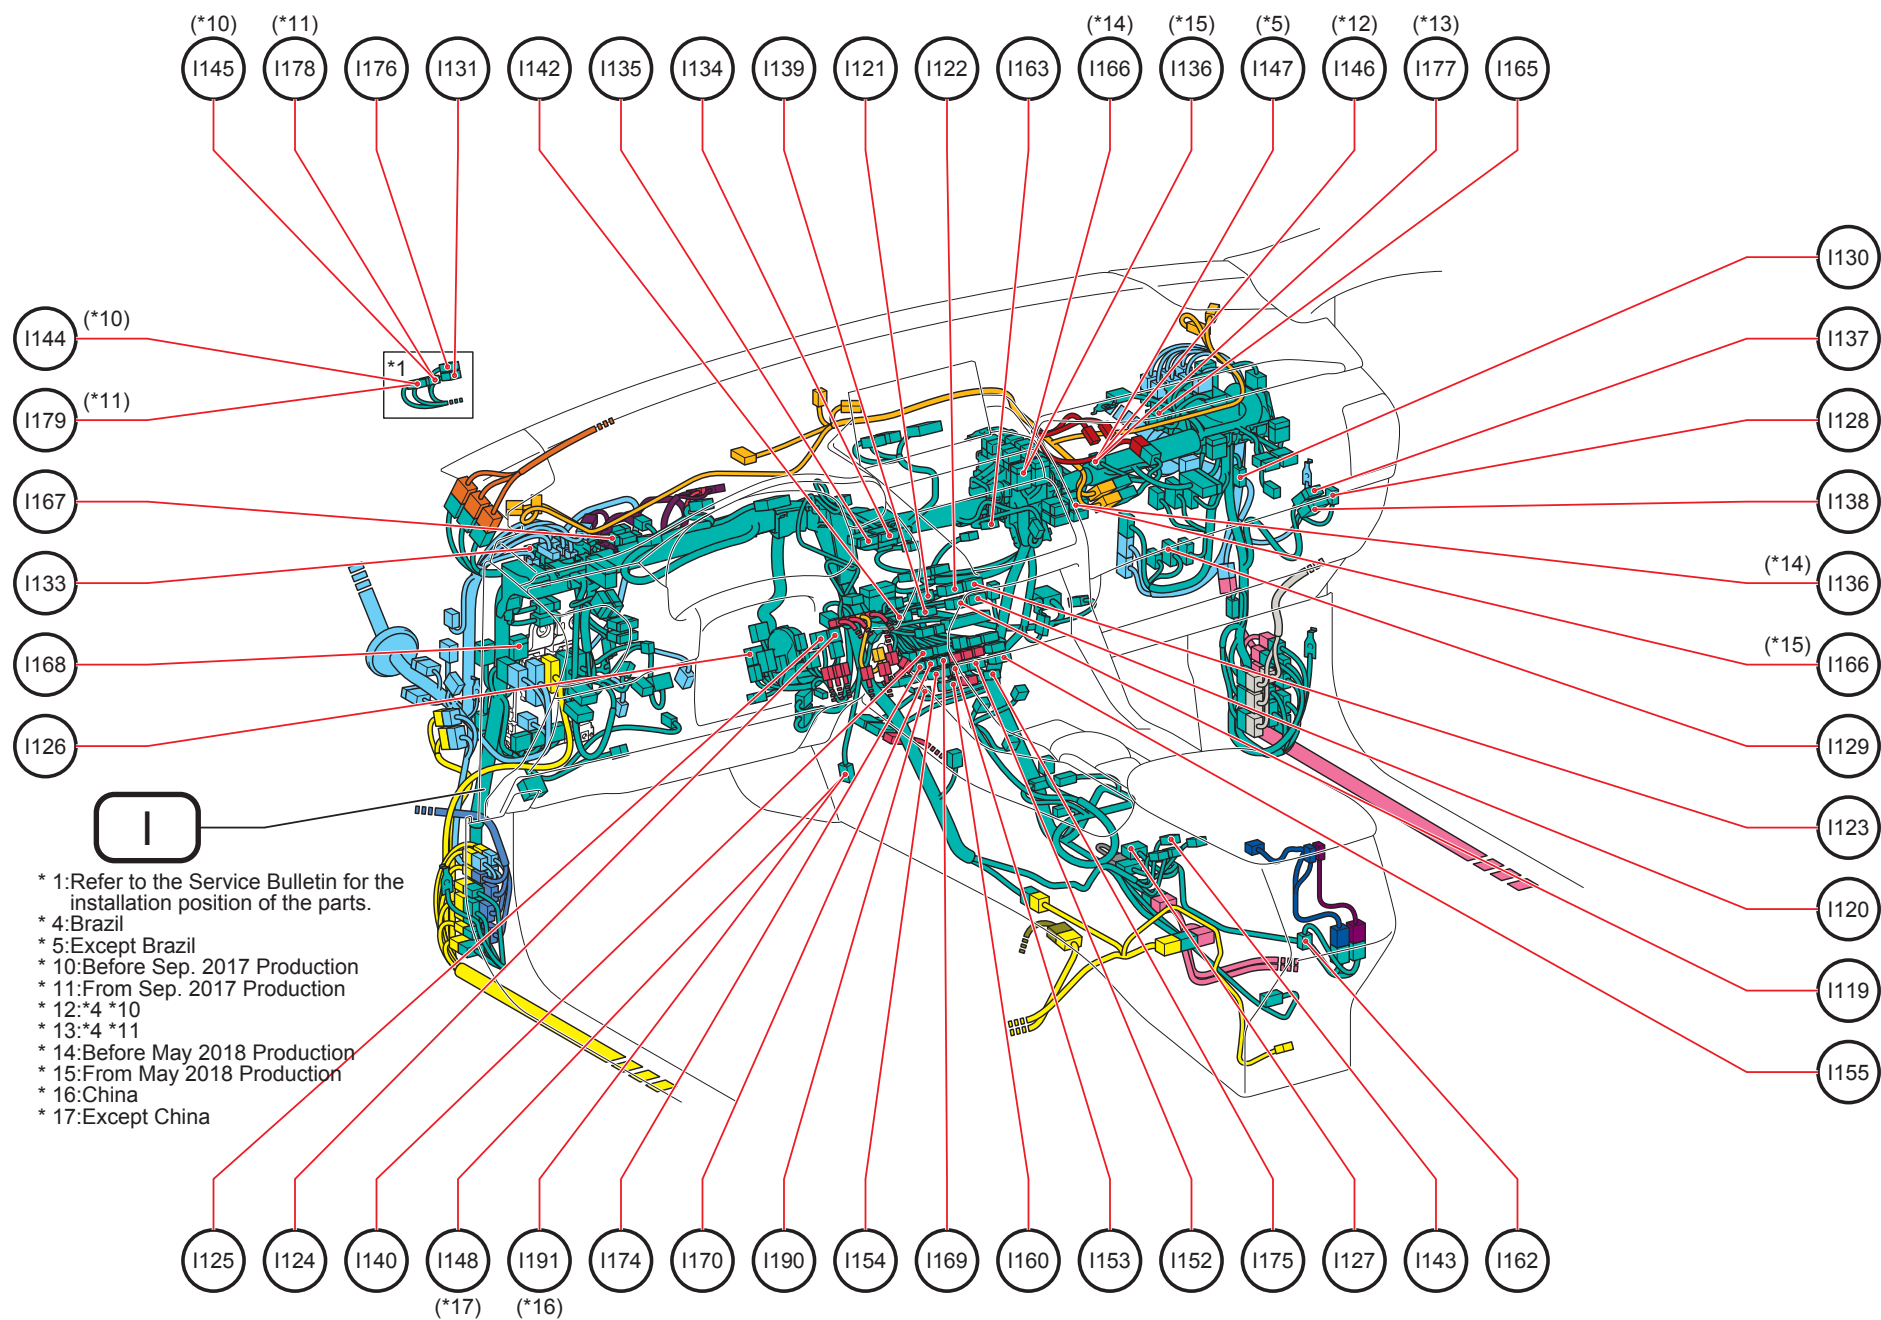


I119	Radio Receiver Assembly
I120	Radio Receiver Assembly
I121	Radio Receiver Assembly
I122	Radio Receiver Assembly
I123	Radio Receiver Assembly
I124	Windshield Wiper Switch Assembly
I125	Windshield Wiper Switch Assembly
I126	Headlight Dimmer Switch Assembly
I127	Theft Warning Tilt Sensor
I128	Airbag Cut Off Switch Cylinder Sub-Assembly
I129	Double Lock Door Control Relay Assembly
I130	Option Connector (Remote Engine Starter)
I131	Telephone Transceiver Assembly
I133	No. 27 Junction Connector
I134	No. 28 Junction Connector
I135	No. 29 Junction Connector
I136	No. 30 Junction Connector
I137	No. 31 Junction Connector
I138	No. 32 Junction Connector
I139	Radio Receiver Assembly
I140	Radio Receiver Assembly
I142	Radio Receiver Assembly
I143	No. 1 Stereo Jack Adapter Assembly
I144	Telephone Transceiver Assembly
I145	Telephone Transceiver Assembly
I146	Antenna Cord Sub-Assembly
I147	Antenna Cord Sub-Assembly
I148	Oxygen Sensor (Bank 1 Sensor 2)
I152	Radio Receiver Assembly
I153	Radio Receiver Assembly
I154	Radio Receiver Assembly
I155	Radio Receiver Assembly
I160	Navigation ECU
I162	Refreshing Seat Switch
I163	Clock Assembly (Air Conditioning Control Assembly)
I165	No. 8 CAN Junction Connector
I166	No. 9 CAN Junction Connector
I167	No. 10 CAN Junction Connector
I168	No. 3 CAN Junction Terminal
I169	Radio Receiver Assembly
I170	Radio Receiver Assembly
I174	Radio Receiver Assembly
I175	Navigation ECU
I176	Telephone Transceiver Assembly
I177	Antenna Cord Sub-Assembly
I178	Telephone Transceiver Assembly
I179	Telephone Transceiver Assembly
I190	Navigation ECU
I191	Air Fuel Ratio Sensor (Bank 1 Sensor 2)


Position of Parts in Instrument Panel (LHD)

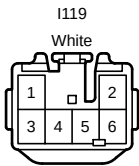


90980-10996

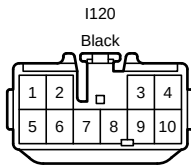


90980-10997

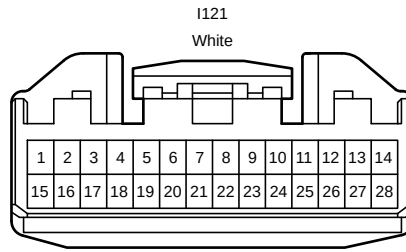

90980-12555

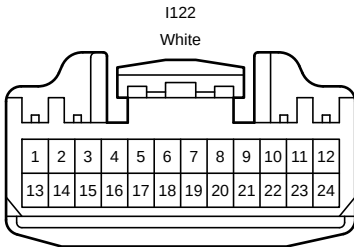


90980-12905

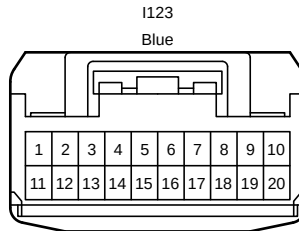


90980-12460




90980-12358

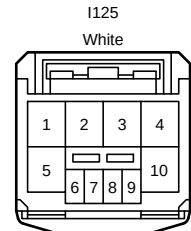


90980-12359

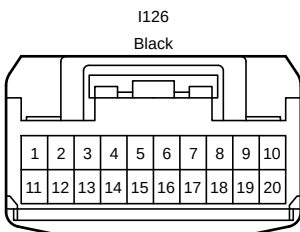


90980-12460

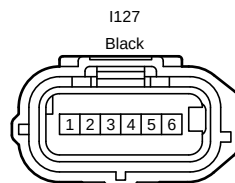


90980-12303

 


90980-12063

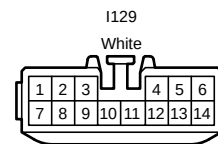


90980-10807

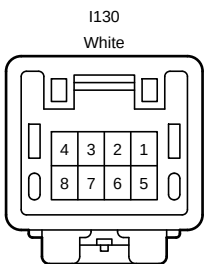



90980-12734

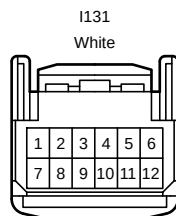


90980-12552

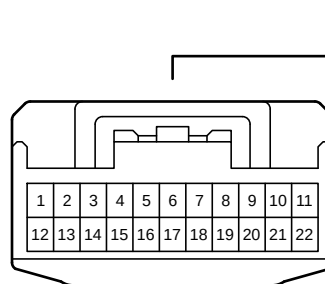

90980-12372

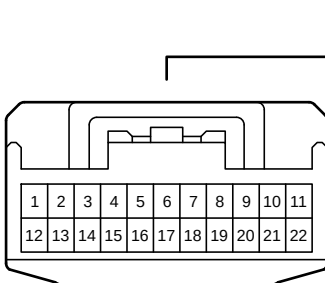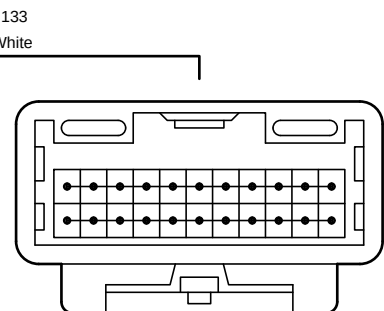


90980-12372

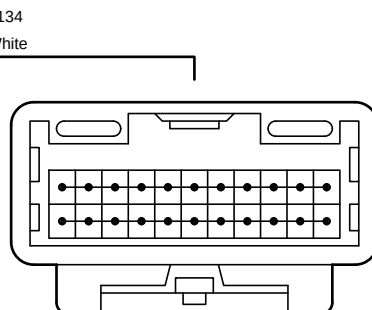


Position of Parts in Instrument Panel (LHD)

I135
Gray

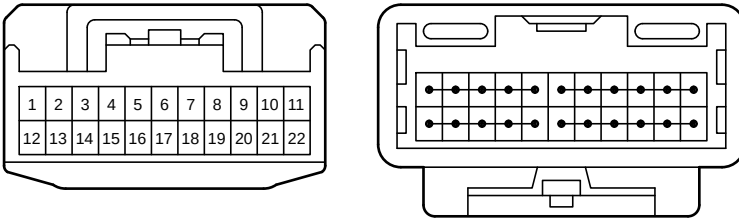


90980-12372

I136
Gray

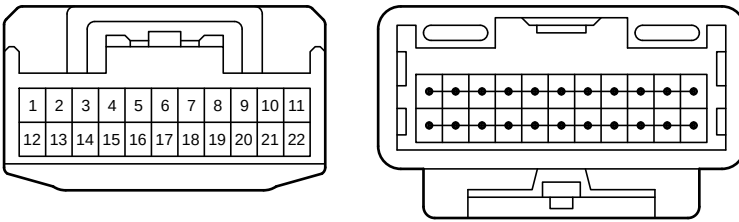


90980-12372

I137
White

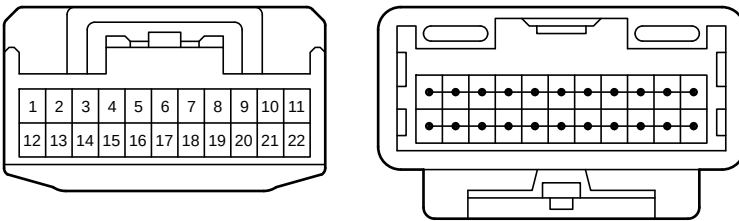


90980-12372

I138
Gray

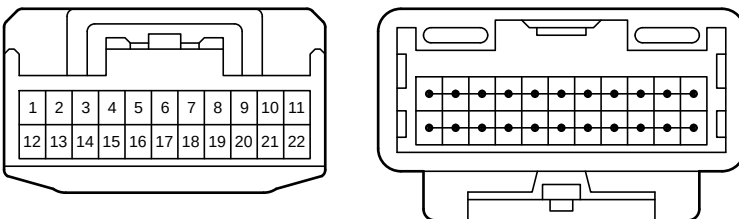


90980-12372

 I139
Blue




90980-12957

I140
Brown

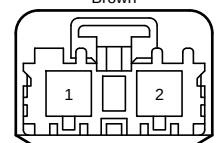


90980-12A71


Position of Parts in Instrument Panel (LHD)

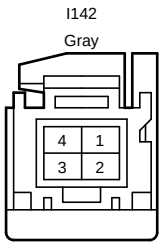


90980-12A52

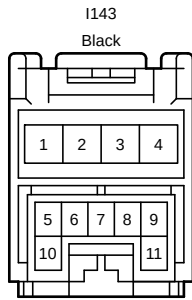


90980-12A69

 


90980-50024

 


90980-50022

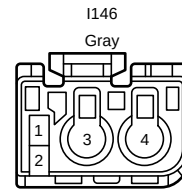


90980-50040

 


90980-50024

 


90980-10794

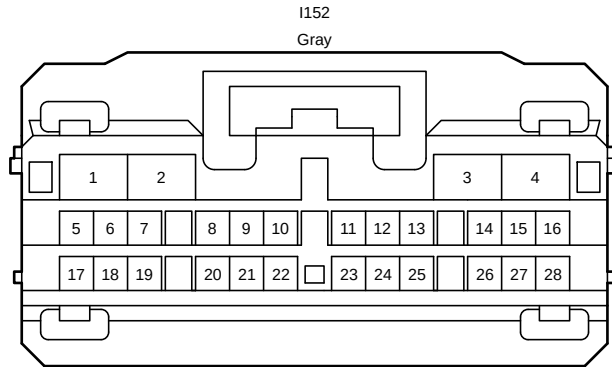


82824-52380

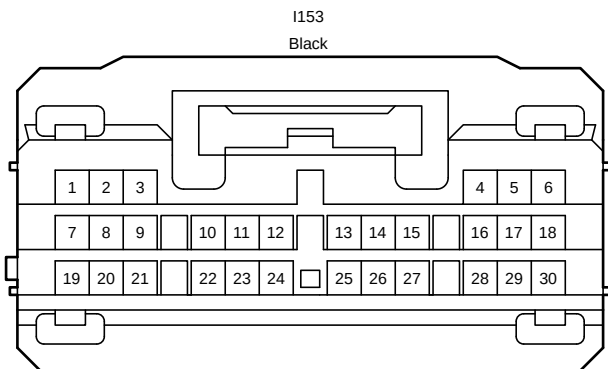


90980-12761

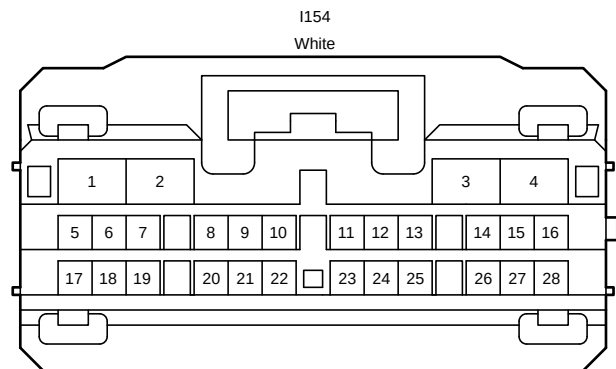


90980-12760

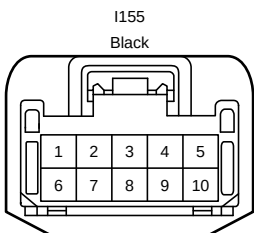

90980-12C39







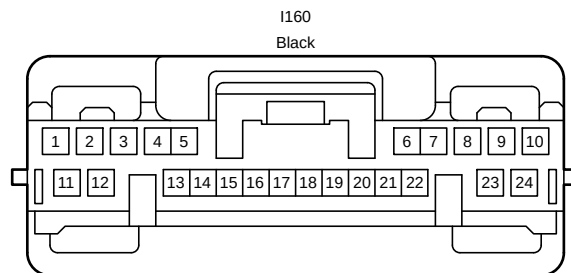


90980-12912

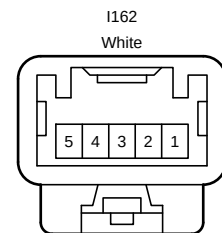

90980-12365

 Position of Parts in Instrument Panel (LHD)

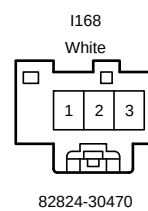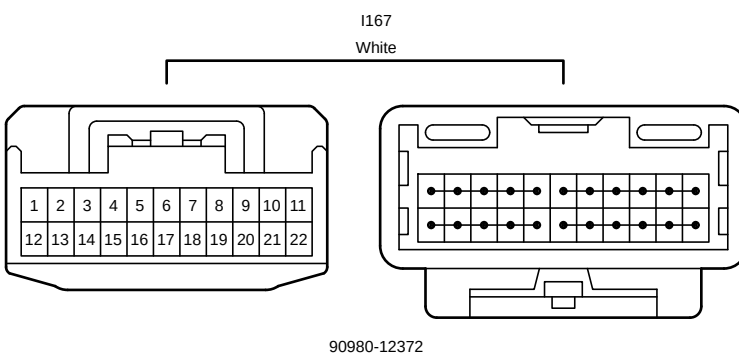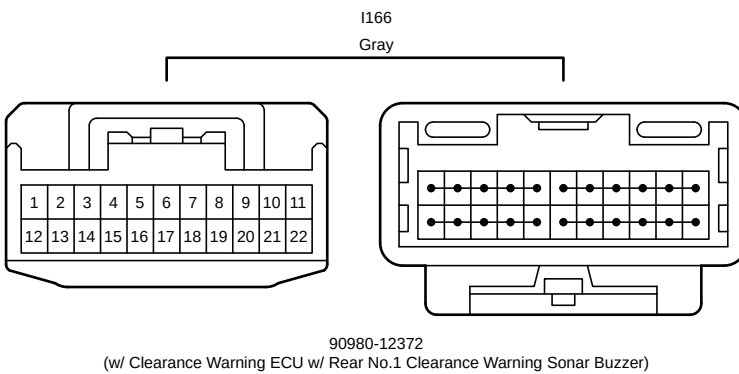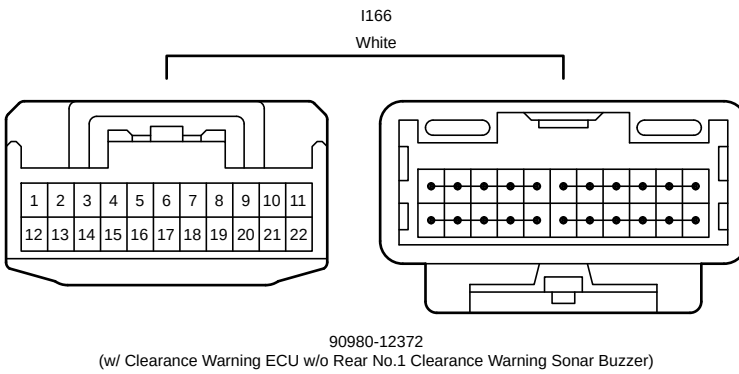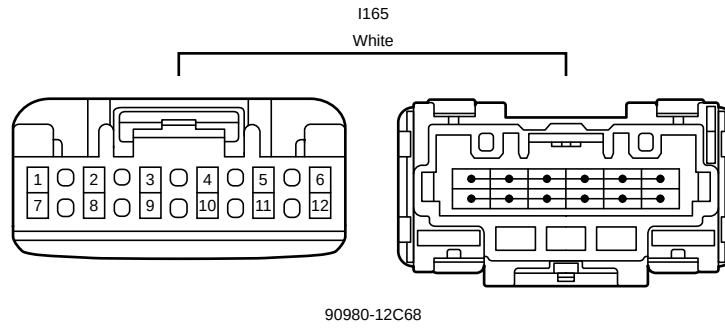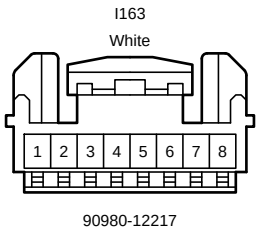

Position of Parts in Instrument Panel (LHD)

