



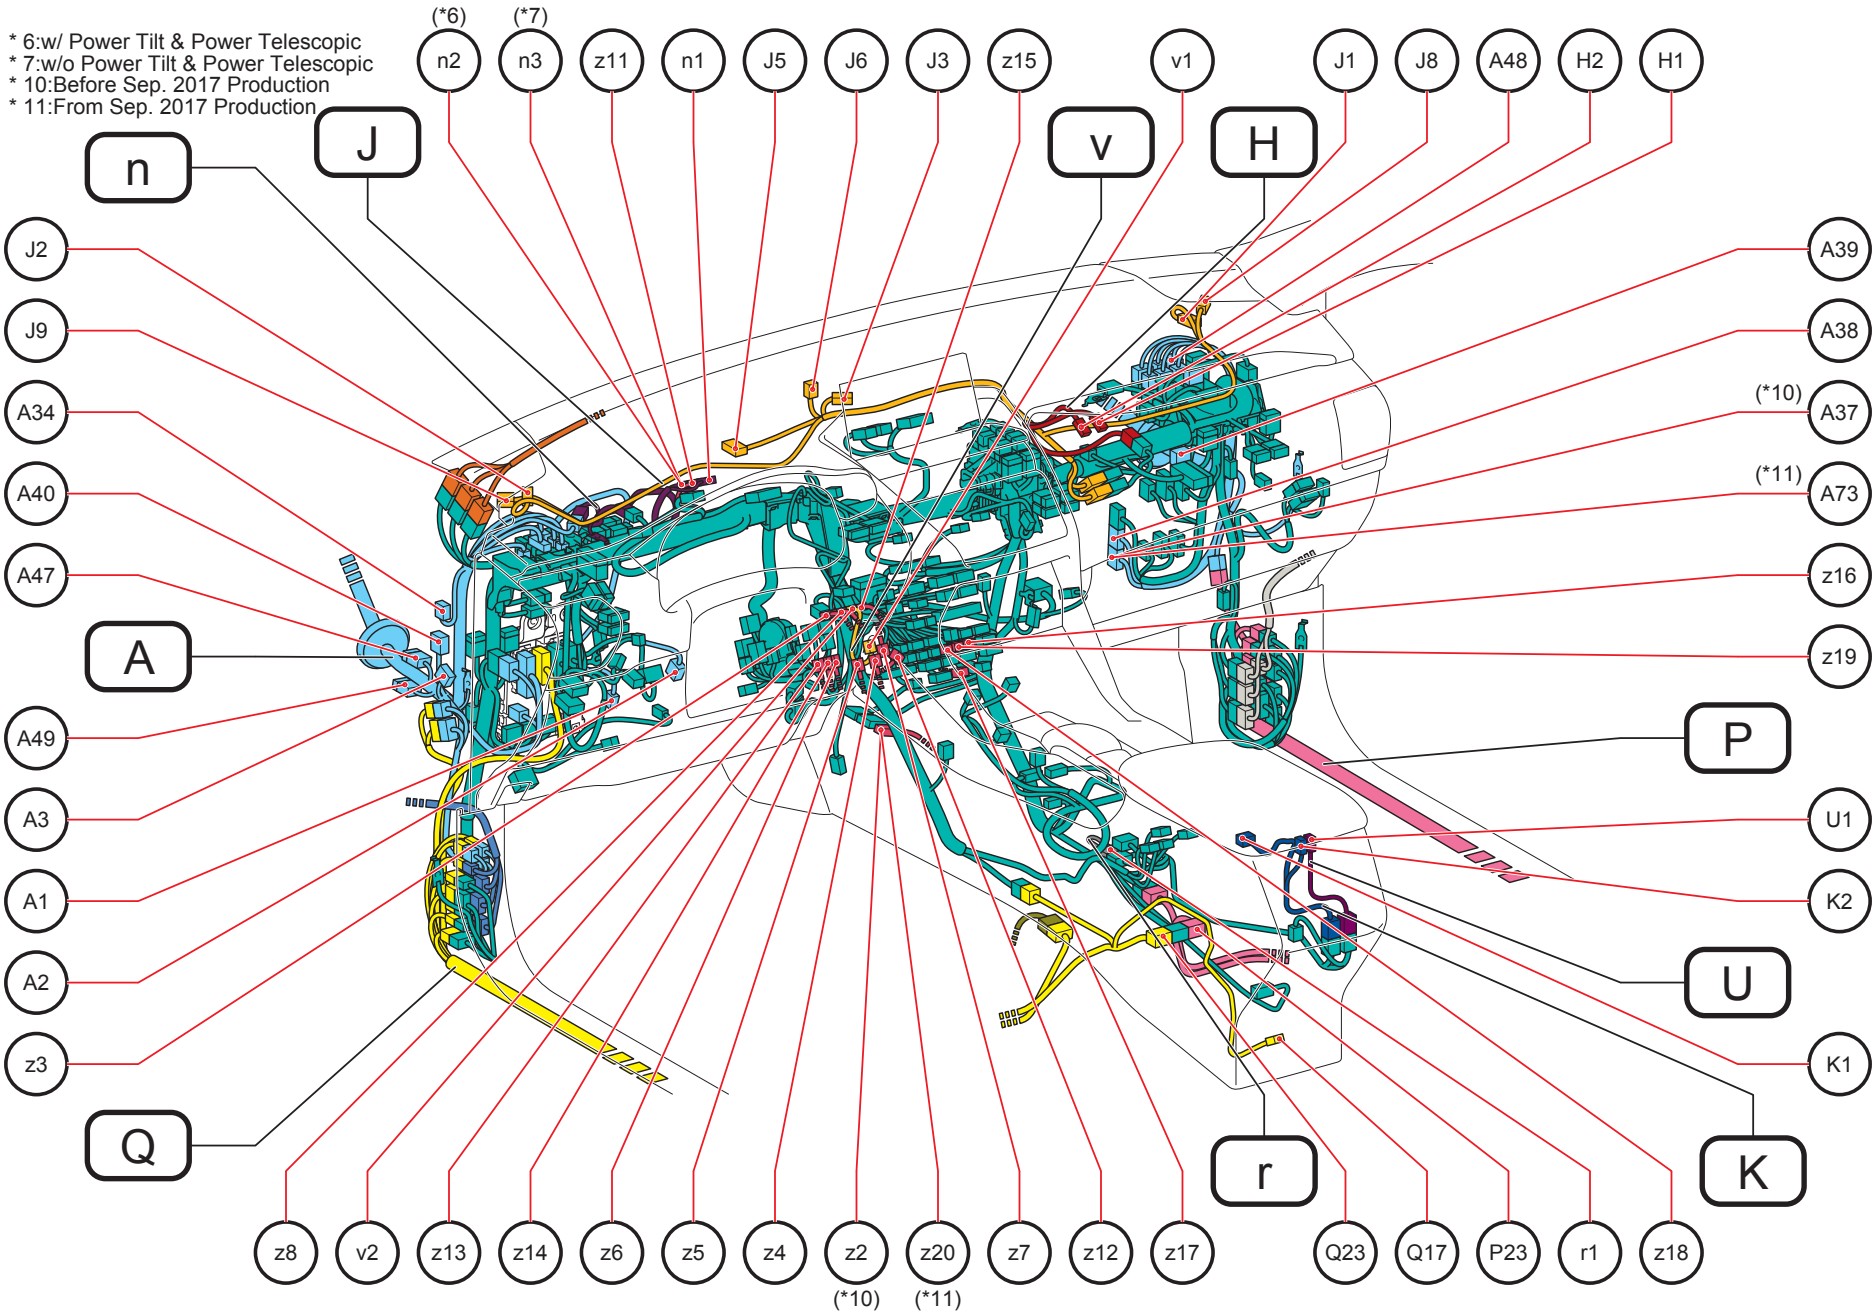


Position of Parts in Instrument Panel (LHD)

A1	Stop Light Switch Assembly
A2	Accelerator Pedal Sensor Assembly
A3	Stop Light Control ECU Assembly
A34	Diode (Shift Position)
A37	Engine Stop and Start ECU
A38	Engine Stop and Start ECU
A39	Front Acceleration Sensor RH
A40	Front Acceleration Sensor LH
A47	No. 3 Junction Connector
A48	No. 4 Junction Connector
A49	No. 5 Junction Connector
A73	Engine Stop and Start ECU
H1	Instrument Panel Passenger Airbag without Door Assembly
H2	Instrument Panel Passenger Airbag without Door Assembly
J1	Front No. 2 Speaker Assembly RH
J2	Front No. 2 Speaker Assembly LH
J3	Front No. 3 Speaker Assembly
J5	Headup Display (Combination Meter Mirror ECU)
J6	Automatic Light Control Sensor
J8	Front No. 2 Speaker Assembly RH
J9	Front No. 2 Speaker Assembly LH
K1	Mobile Wireless Charger Cradle Assembly
K2	Console Box Illumination Light Assembly
P23	Airbag ECU Assembly
Q17	No. 2 Power Outlet Socket Assembly
Q23	Airbag ECU Assembly
U1	Console Box Illumination Light Assembly
n1	Power Steering ECU Assembly
n2	Power Steering ECU Assembly
n3	Power Steering ECU Assembly
r1	Short Connector
v1	No. 1 Switch Wire
v2	Spiral Cable with Sensor Sub-Assembly
z2	A/C Amplifier Assembly , A/C Harness Assembly
z3	Spiral Cable with Sensor Sub-Assembly , Steering Pad Switch Assembly
z4	Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable with Sensor Sub-Assembly
z5	Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable with Sensor Sub-Assembly
z6	Spiral Cable with Sensor Sub-Assembly , Steering Wheel Heater Control Assembly
z7	No. 1 Switch Wire , Steering Pad Switch Assembly
z8	Cruise Control Main Switch , Spiral Cable with Sensor Sub-Assembly
z11	Electric Power Steering Column Sub-Assembly , Power Steering ECU Assembly
z12	Cruise Control Main Switch ,,, Steering Pad Switch Assembly
z13	Steering Wheel Assembly , Spiral Cable with Sensor Sub-Assembly
z14	Steering Wheel Heater Control Assembly , Spiral Cable with Sensor Sub-Assembly
z15	No. 1 Switch Wire , Spiral Cable with Sensor Sub-Assembly
z16	Radio Receiver Assembly
z17	Navigation ECU
z18	Radio Receiver Assembly
z19	Radio Receiver Assembly
z20	A/C Amplifier Assembly , A/C Harness Assembly


Position of Parts in Instrument Panel (LHD)

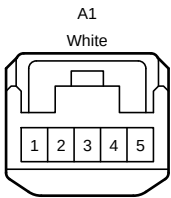


90980-12366

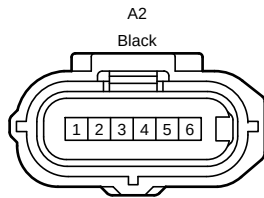


90980-12831

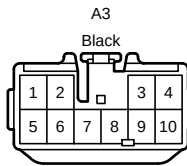


90980-10997

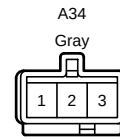


90980-11071

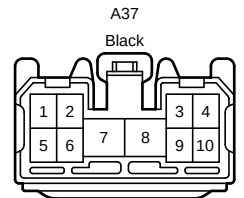


90980-11527

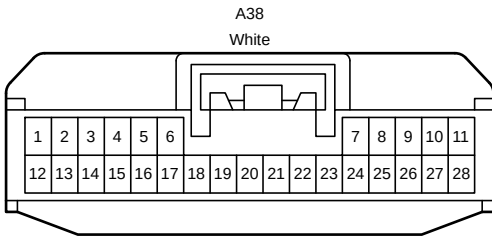


90980-12566

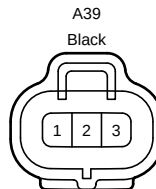


90980-10845

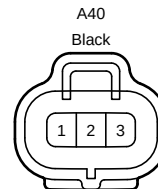


90980-10845

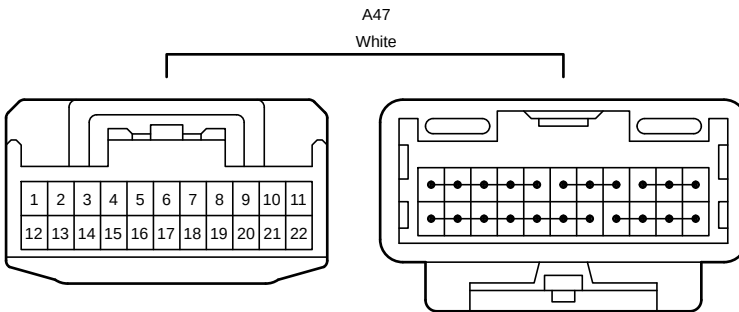


90980-12372

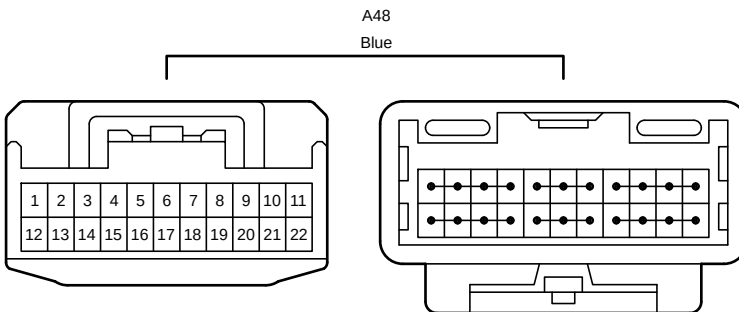


90980-12372

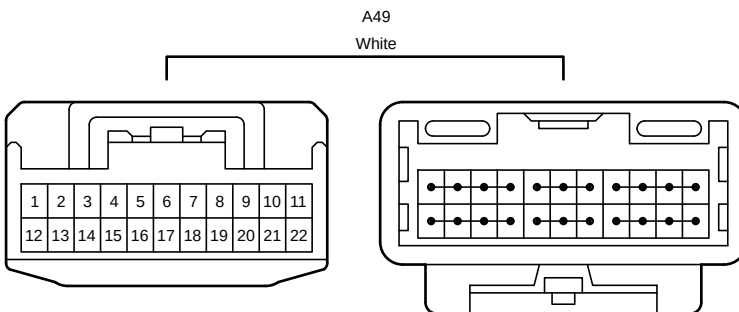

90980-12372

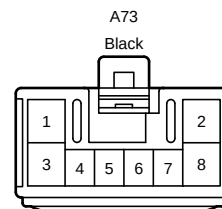


90980-11362

 


90980-12219

 
Position of Parts in Instrument Panel (LHD)




90980-12224

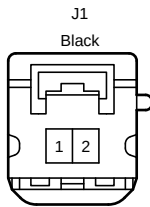


90980-12808

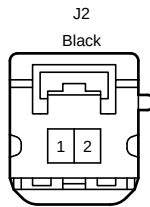


90980-12808

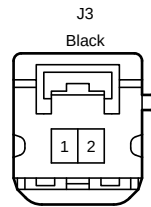


90980-12808

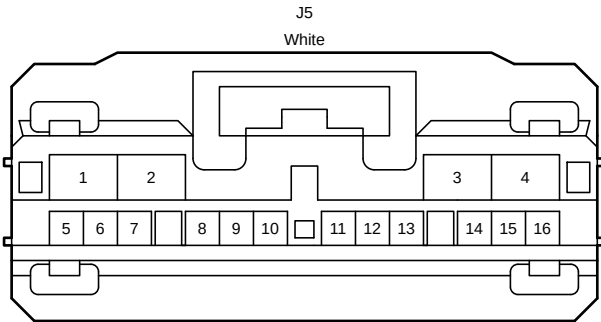


90980-12763

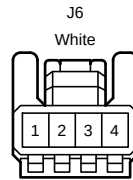


82824-50130

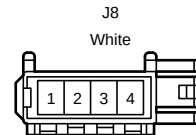

90980-12304

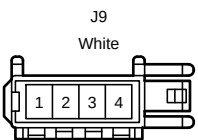


90980-12304

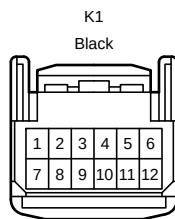


90980-12552




90980-11918

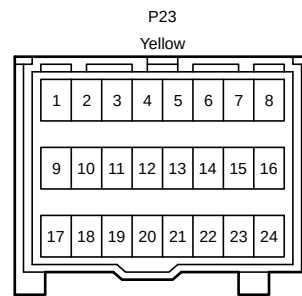

90980-12392

 


90980-10601

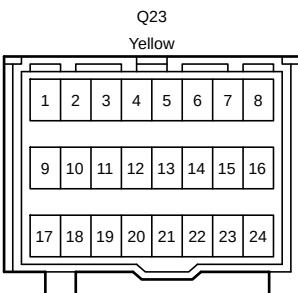


90980-12390




90980-11918

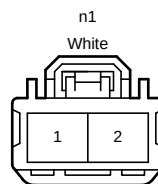


90980-12900

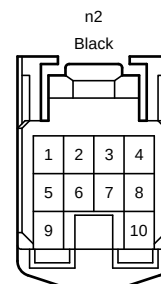


90980-12898

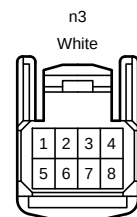


90980-12551

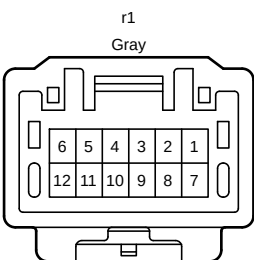


90980-12736

 


90980-12211

 

90980-12360

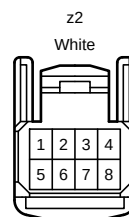


90980-12551

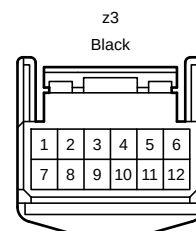


90980-12559

 
Position of Parts in Instrument Panel (LHD)




90980-12224

 


90980-12219

 


90980-10795

 


90980-12211

 


90980-12360

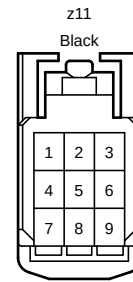


90980-12899

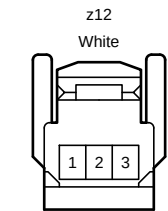


90980-12695
(w/o Pre-Collision System)

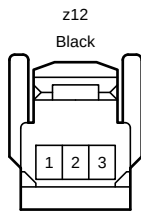


90980-12695
(w/ Pre-Collision System)

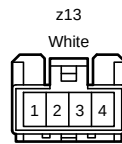


90980-11950

 


90980-12A94

 


90980-12360

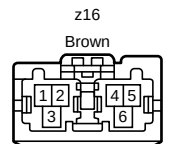


90980-12C89

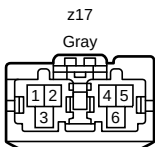


90980-12C91

 

90980-12C85

 

90980-12C87

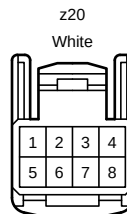

90980-12221