



Position of Parts in Engine Compartment (LHD)

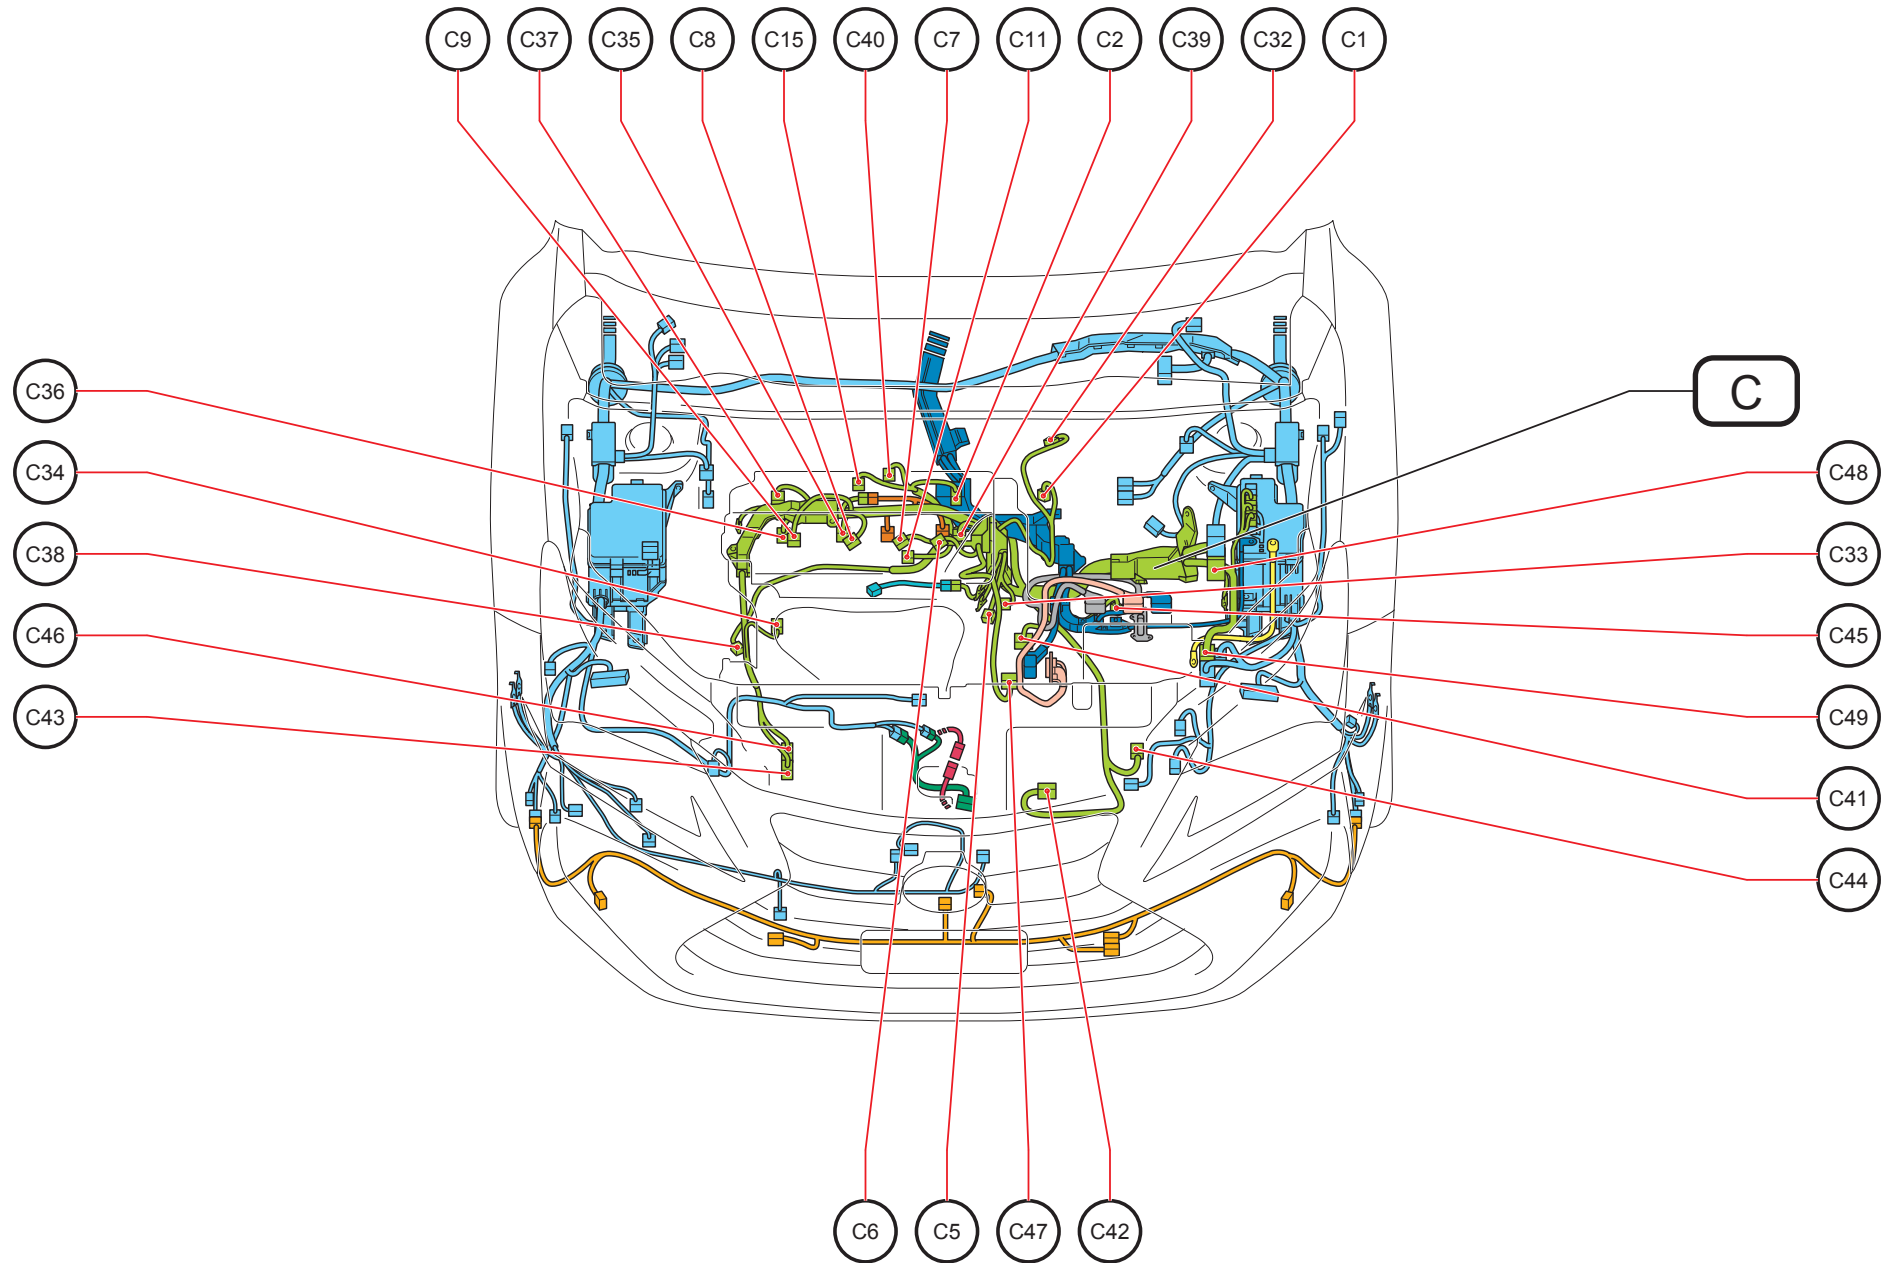


C1	Intake Mass Air Flow Meter Sub-Assembly
C2	Throttle Body with Motor Assembly
C5	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C6	Ignition Coil Assembly No. 4
C7	Ignition Coil Assembly No. 3
C8	Ignition Coil Assembly No. 2
C9	Ignition Coil Assembly No. 1
C11	Oxygen Sensor (Bank 1 Sensor 2)
C15	E.F.I. Vacuum Sensor Assembly
C32	Purge VSV
C33	E.F.I. Engine Coolant Temperature Sensor
C34	Engine Oil Pressure Switch Assembly
C35	Fuel Injector Assembly No. 2
C36	Fuel Injector Assembly No. 1
C37	Camshaft Timing Oil Control Valve Assembly
C38	Crank Position Sensor
C39	Camshaft Position Sensor
C40	EGR Valve Assembly
C41	Hybrid Vehicle Transaxle Assembly
C42	Shift Lever Position Sensor
C43	Compressor with Motor Assembly
C44	Hybrid Vehicle Transaxle Assembly
C45	Hybrid Vehicle Transaxle Assembly
C46	Compressor with Motor Assembly
C47	Inverter with Converter Assembly
C48	ECM
C49	Inverter with Converter Assembly

Position of Parts in Engine Compartment (LHD)

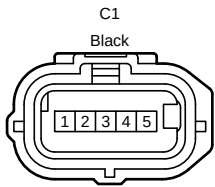


90980-12292

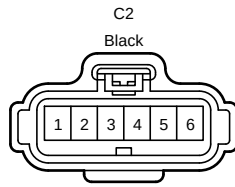


90980-11858




90980-11178

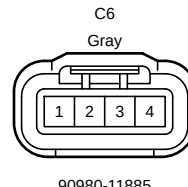


90980-11885

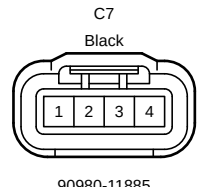

90980-11885

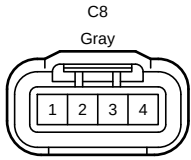


90980-11885

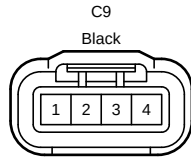


90980-11885



90980-11028

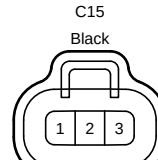


90980-10845

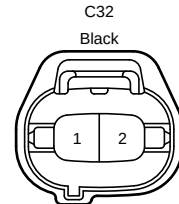


90980-11156




90980-10735

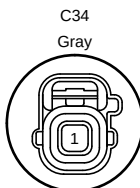


90980-11363

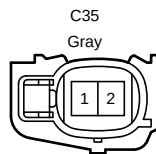


90980-11875

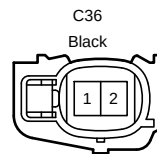


90980-11875

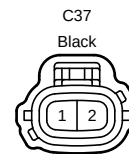


90980-11162

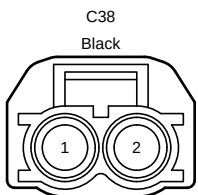


90980-12611

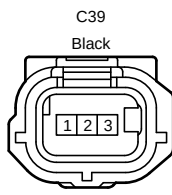


90980-12353

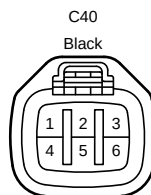


90980-11144

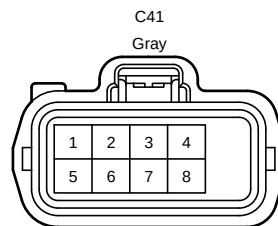


82824-33570

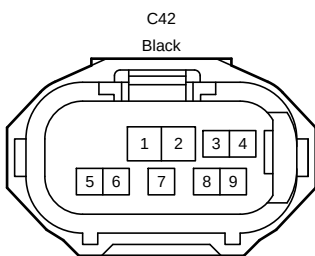


90980-12A23

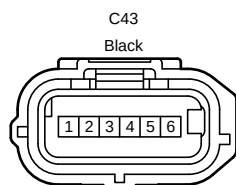


90980-12303

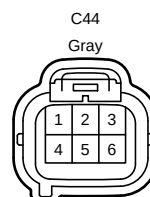


90980-11034

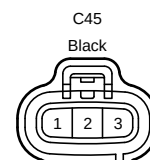

90980-11143

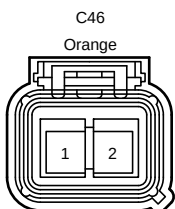

90980-12568

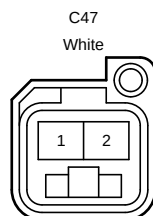

90980-12991

Position of Parts in Engine Compartment (LHD)

