


Position of Parts in Engine Compartment (LHD)


* 3:Before Sep. 2017 Production
* 4:From Sep. 2017 Production

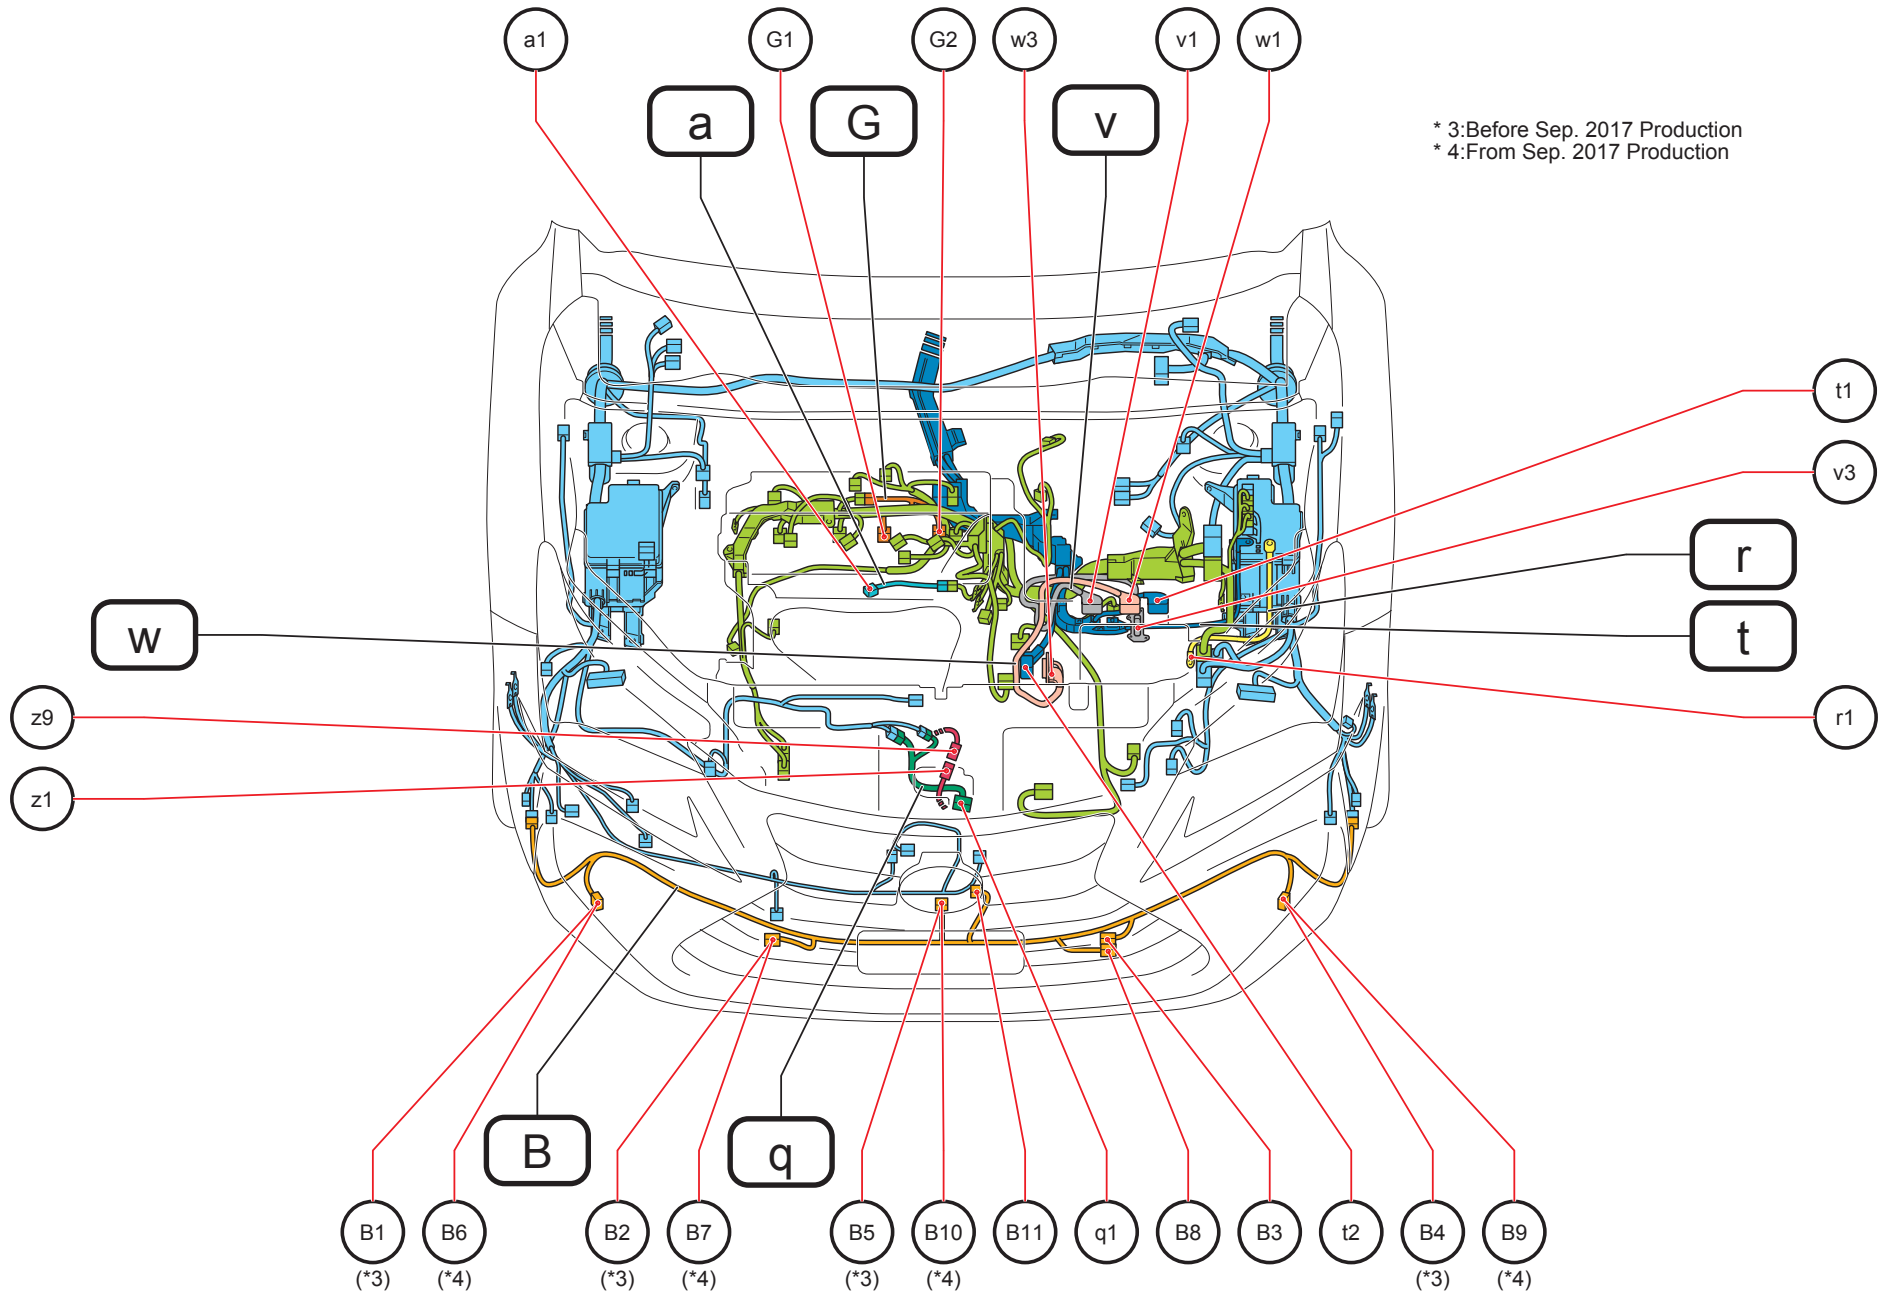

Position of Parts in Engine Compartment (LHD)

B1	Front No. 1 Ultrasonic Sensor RH
B2	Front No. 1 Ultrasonic Sensor RH Center
B3	Front No. 1 Ultrasonic Sensor LH Center
B4	Front No. 1 Ultrasonic Sensor LH
B5	Front Television Camera Assembly
B6	Front No. 1 Ultrasonic Sensor RH
B7	Front No. 1 Ultrasonic Sensor RH Center
B8	Front No. 1 Ultrasonic Sensor LH Center
B9	Front No. 1 Ultrasonic Sensor LH
B10	Front Television Camera Assembly
B11	Millimeter Wave Radar Sensor Assembly
G1	Fuel Injector Assembly No. 3
G2	Fuel Injector Assembly No. 4
a1	Knock Control Sensor (Bank 1)
q1	Cooling Fan ECU
r1	Inverter with Converter Assembly
t1	Inverter with Converter Assembly
t2	Inverter with Converter Assembly
v1	Inverter with Converter Assembly
v3	Hybrid Vehicle Transaxle Assembly
w1	Inverter with Converter Assembly
w3	Hybrid Vehicle Transaxle Assembly
z1	Cooling Fan ECU , Cooling Fan Motor
z9	Cooling Fan ECU , No. 2 Cooling Fan Motor

Position of Parts in Engine Compartment (LHD)

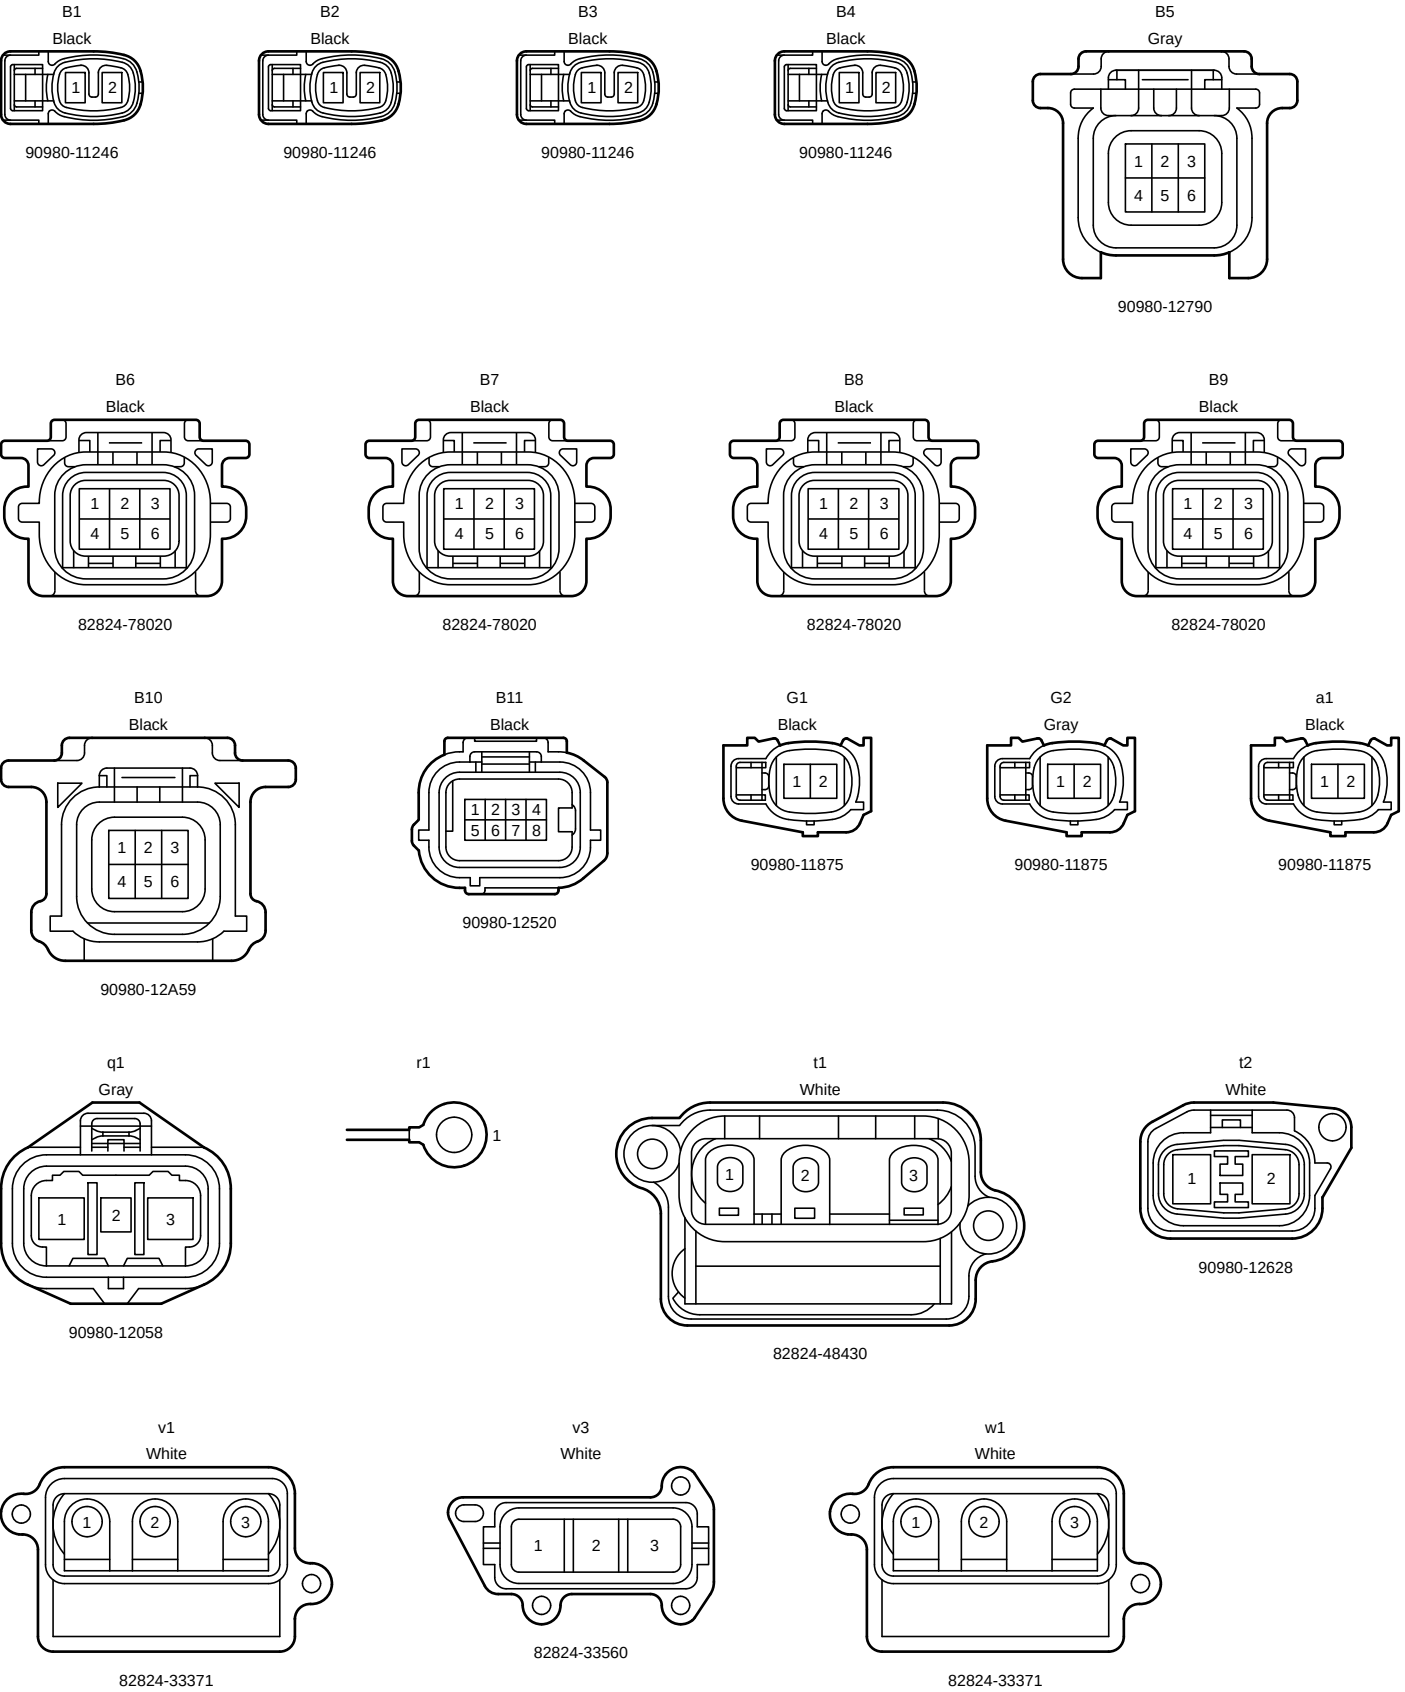

Position of Parts in Engine Compartment (LHD)

