



Position of Parts in Instrument Panel (RHD)

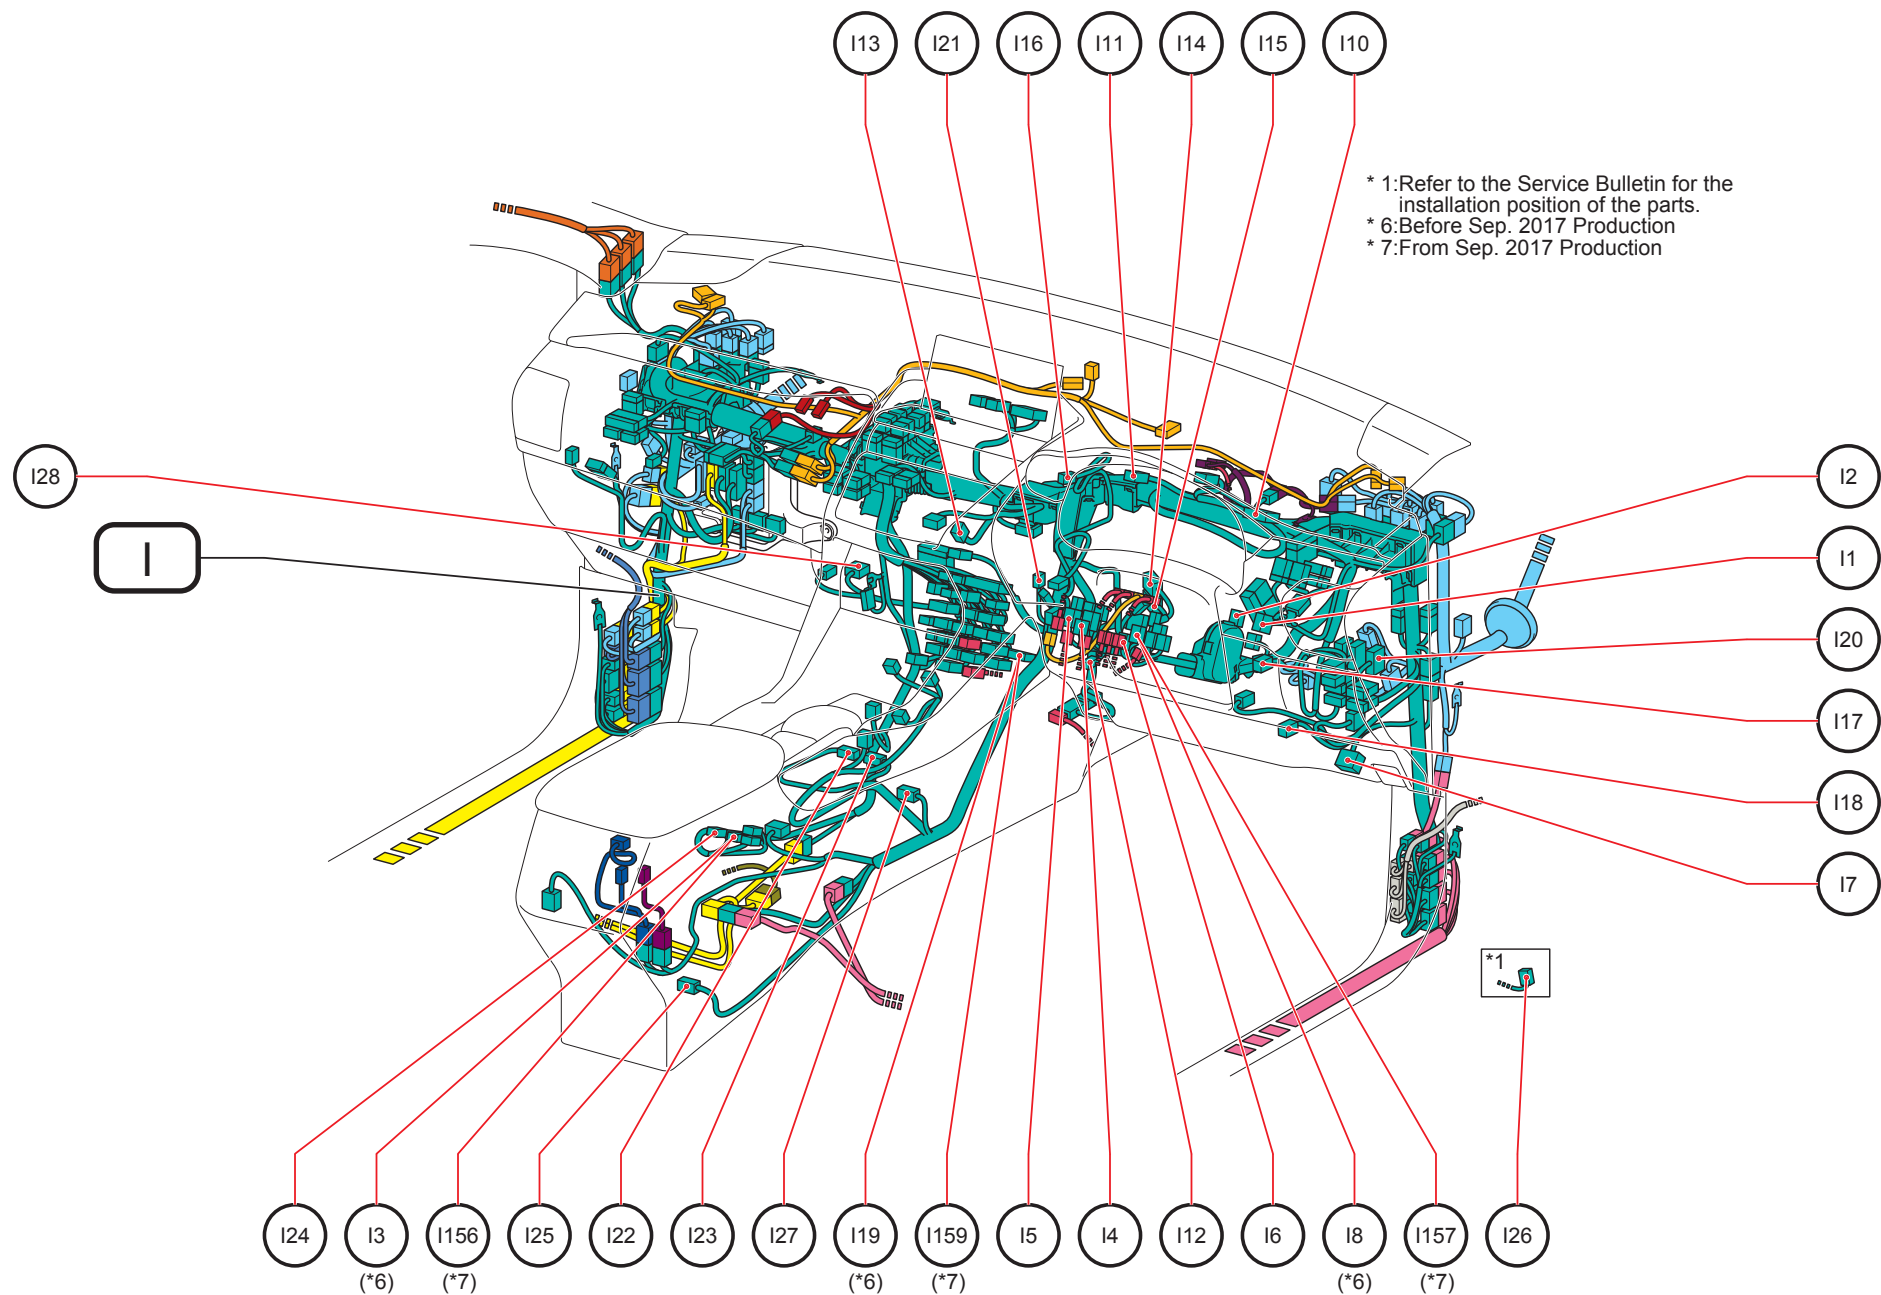


I1	Trip Switch
I2	Steering Lock Actuator Assembly
I3	No. 1 Stereo Jack Adapter Assembly
I4	Spiral Cable with Sensor Sub-Assembly
I5	Spiral Cable with Sensor Sub-Assembly
I6	Steering Sensor (Spiral Cable with Sensor Sub-Assembly)
I7	DLC3
I8	Spiral Cable with Sensor Sub-Assembly
I10	Combination Meter Assembly
I11	Combination Meter Assembly
I12	Cooler (Room Temperature Sensor) Thermistor
I13	A/C Control Assembly
I14	Quick Heater Assembly
I15	Quick Heater Assembly
I16	Power Switch
I17	No. 1 Fold Seat Switch Assembly
I18	Lower No. 1 Instrument Panel Airbag Assembly
I19	Driving Support ECU Assembly
I20	Clearance Warning ECU Assembly
I21	No. 1 Clearance Warning Buzzer
I22	Shift Lock Control ECU (Shift Lock Control Unit Assembly)
I23	Transmission Control Switch (Shift Lock Control Unit Assembly)
I24	No. 1 Power Outlet Socket Assembly
I25	No. 2 Indoor Electrical Key Antenna Assembly
I26	ID Code Box
I27	No. 1 Indoor Electrical Key Antenna Assembly
I28	Blower Motor with Fan Sub-Assembly
I156	No. 1 Stereo Jack Adapter Assembly
I157	Spiral Cable with Sensor Sub-Assembly
I159	Driving Support ECU Assembly


Position of Parts in Instrument Panel (RHD)

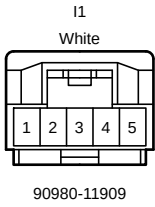


90980-11909

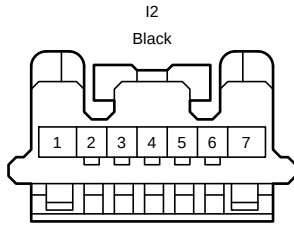


90980-12092

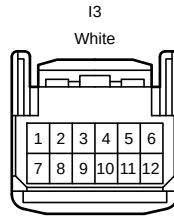


90980-12552

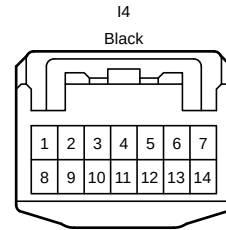


90980-12370

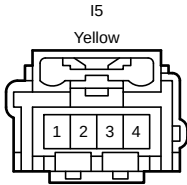


90980-12160

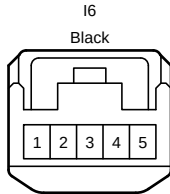


90980-12366

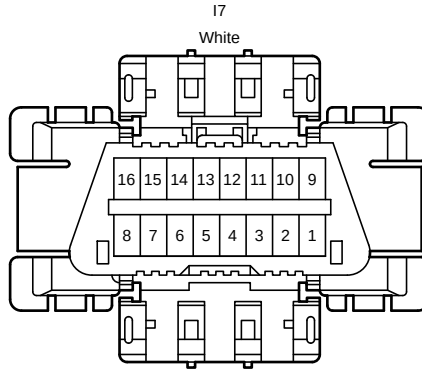


90980-11978

 


90980-10795

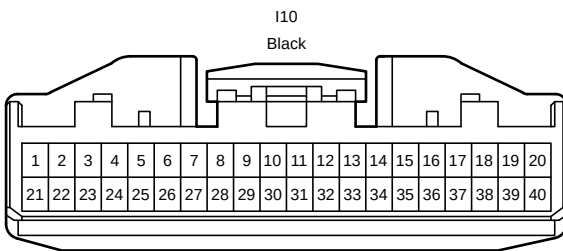


90980-12557

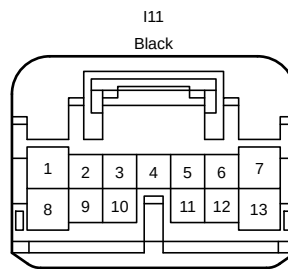


90980-12767

 


90980-12128

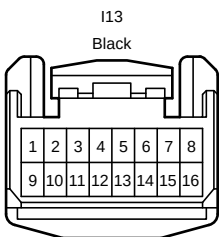


90980-12553

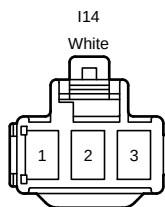


90980-10956

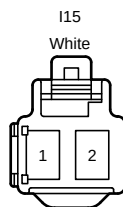


90980-10903

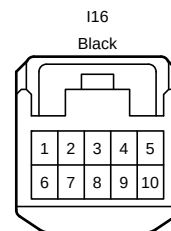


90980-12368

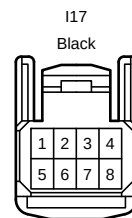

90980-12551

 

90980-12452

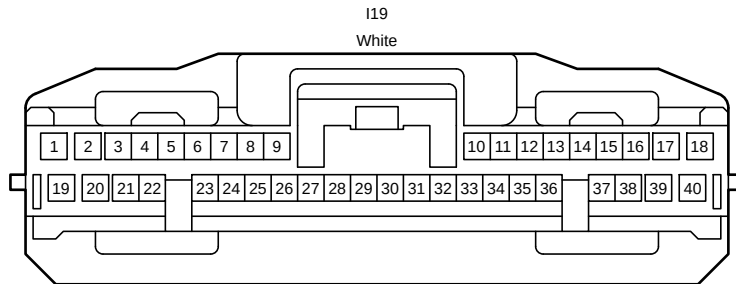

90980-12708

Position of Parts in Instrument Panel (RHD)

