



Position of Parts in Instrument Panel (RHD)

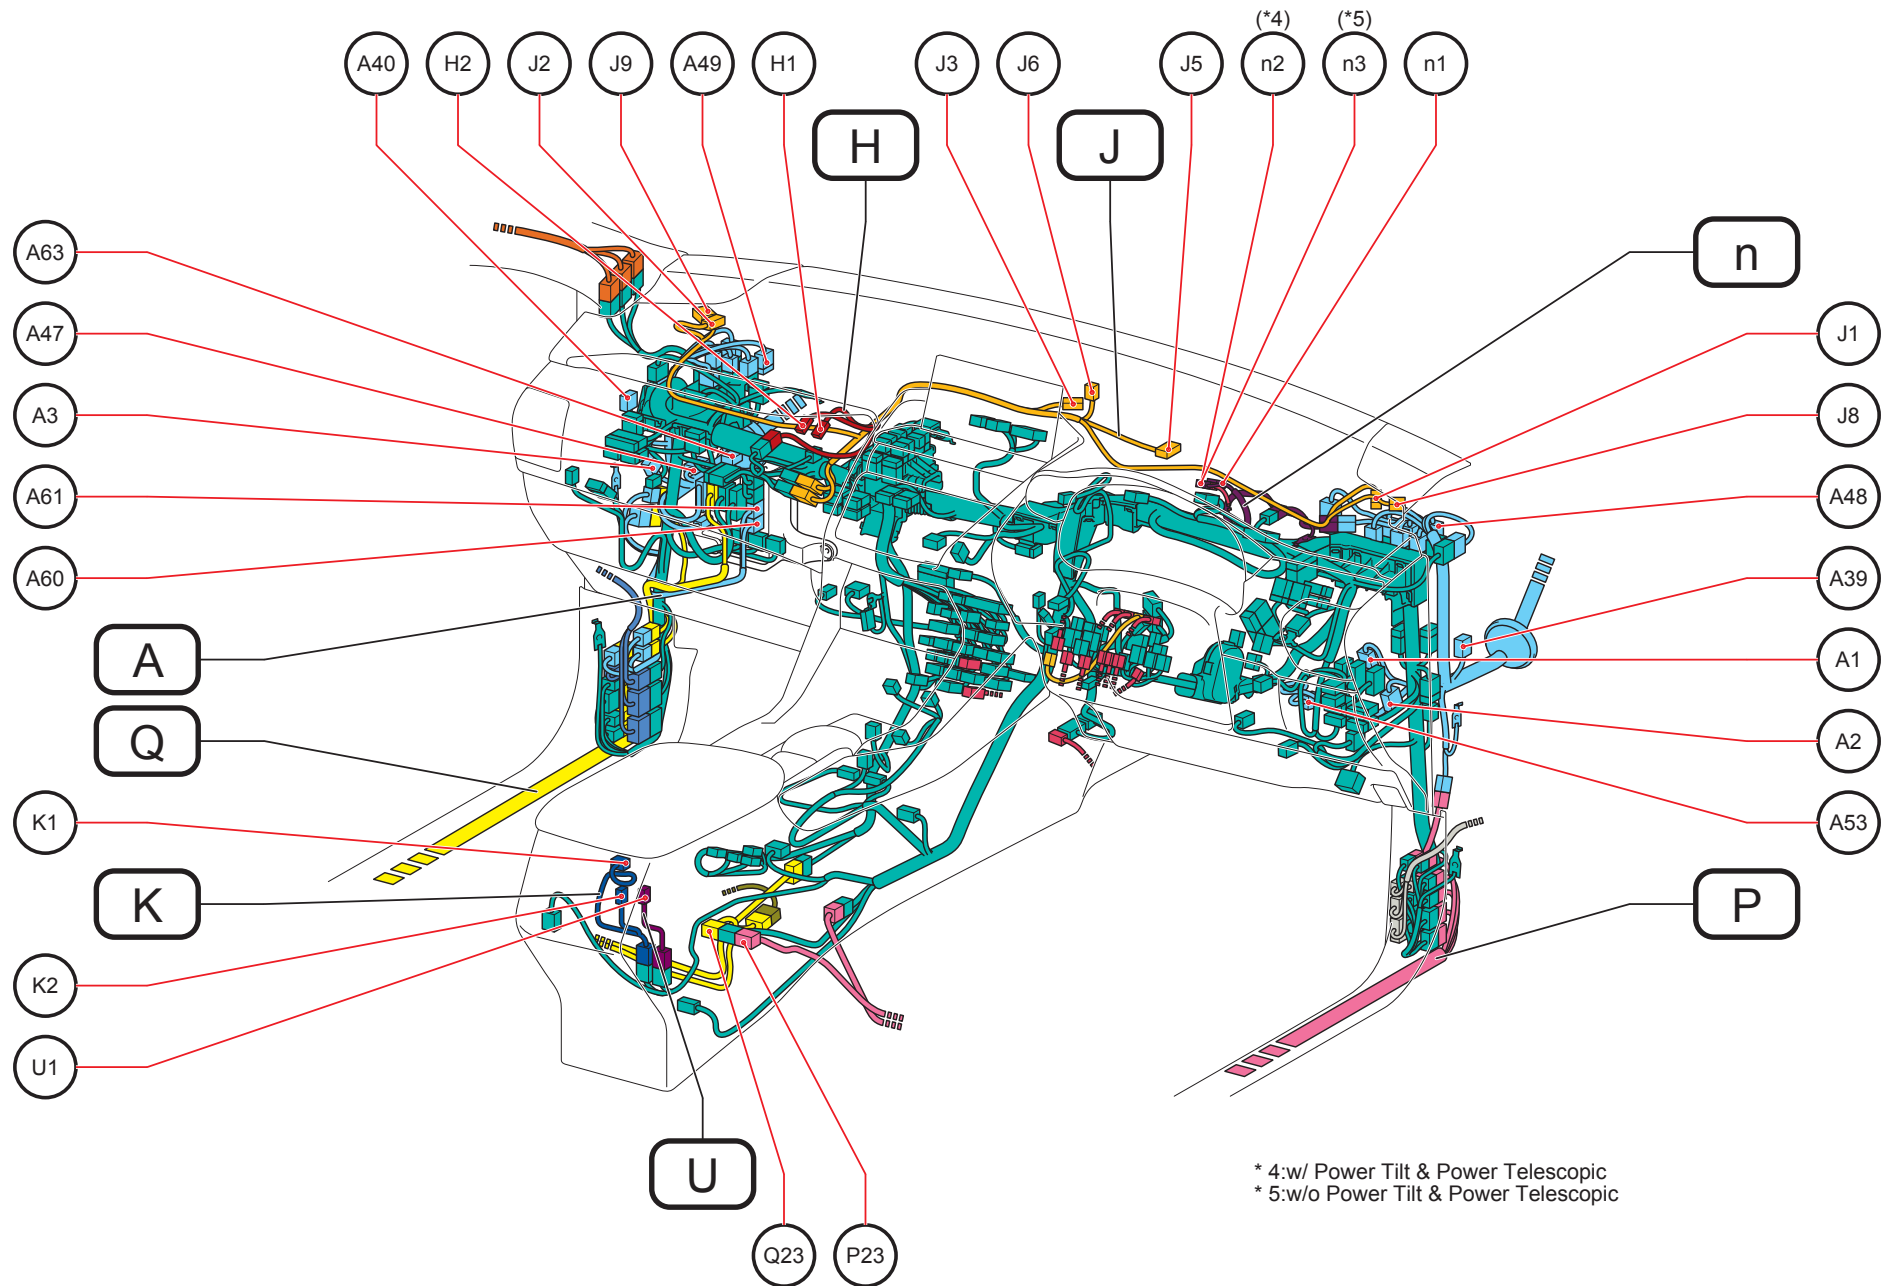


A1	Stop Light Switch Assembly
A2	Accelerator Pedal Sensor Assembly
A3	Stop Light Control ECU Assembly
A39	Front Acceleration Sensor RH
A40	Front Acceleration Sensor LH
A47	No. 2 Junction Connector
A48	No. 3 Junction Connector
A49	No. 4 Junction Connector
A53	Brake Pedal Stroke Sensor Assembly
A60	Hybrid Vehicle Control ECU
A61	Hybrid Vehicle Control ECU
A63	No. 1 CAN Junction Connector
H1	Instrument Panel Passenger Airbag without Door Assembly
H2	Instrument Panel Passenger Airbag without Door Assembly
J1	Front No. 2 Speaker Assembly RH
J2	Front No. 2 Speaker Assembly LH
J3	Front No. 3 Speaker Assembly
J5	Headup Display (Combination Meter Mirror ECU)
J6	Automatic Light Control Sensor
J8	Front No. 2 Speaker Assembly RH
J9	Front No. 2 Speaker Assembly LH
K1	Mobile Wireless Charger Cradle Assembly
K2	Console Box Illumination Light Assembly
P23	Airbag ECU Assembly
Q23	Airbag ECU Assembly
U1	Console Box Illumination Light Assembly
n1	Power Steering ECU Assembly
n2	Power Steering ECU Assembly
n3	Power Steering ECU Assembly


Position of Parts in Instrument Panel (RHD)

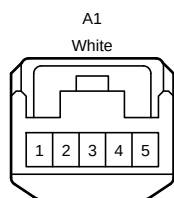


90980-12366

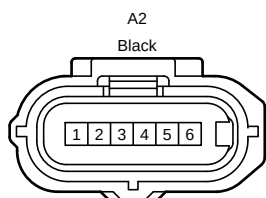


90980-12831

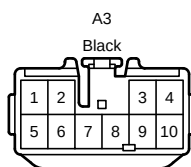


90980-10997

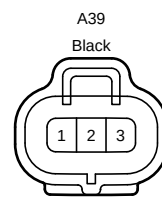


90980-10845

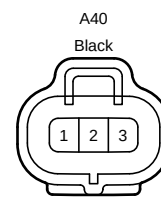


90980-10845

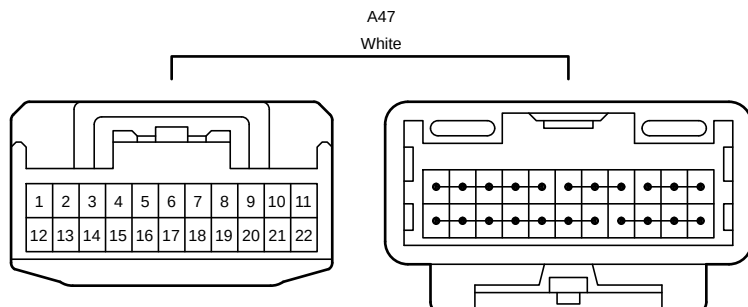


90980-12372

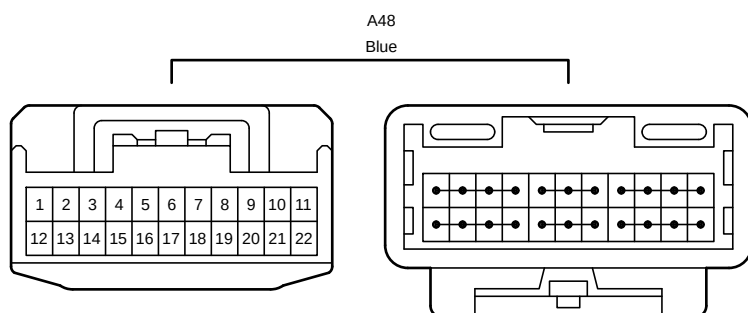


90980-12372

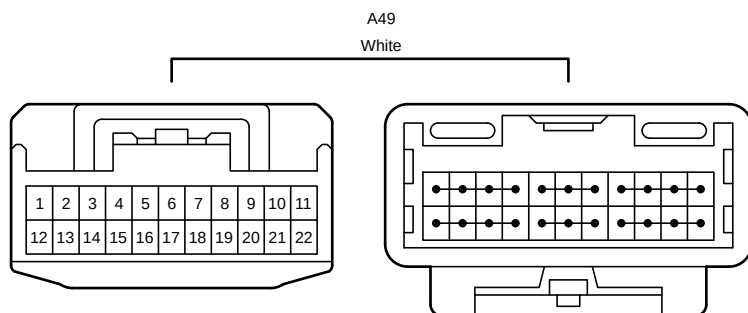


90980-12372

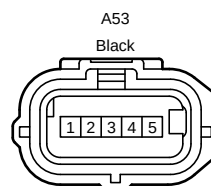

90980-12292

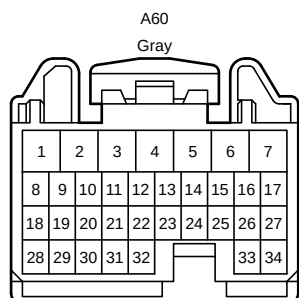

90980-12430

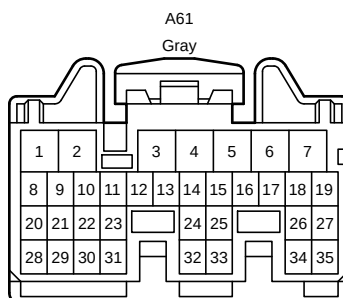

90980-12428

Position of Parts in Instrument Panel (RHD)

