


① : Engine Room R/B Assembly No. 1	Right Engine Compartment
○ : Engine Room J/B Assembly No. 1	


(LHD)

- * 1:120A ENG-AM
- * 2:120A J/B LH-AM
- * 3:150A ALT
- * 4:100A P/I-B
- * 5:50A HTR
- * 6:30A ABS NO.1
- * 7:30A TVD
- * 8:30A H-LP CLN
- * 9:80A P/I-AM
- * 10:40A VVT
- * 11:30A H-LP MAIN RH
- * 12:80A EPS
- * 13:80A J/B LH-B
- * 14:50A ABS NO.2
- * 15:30A ST
- * 16:50A ENG-B

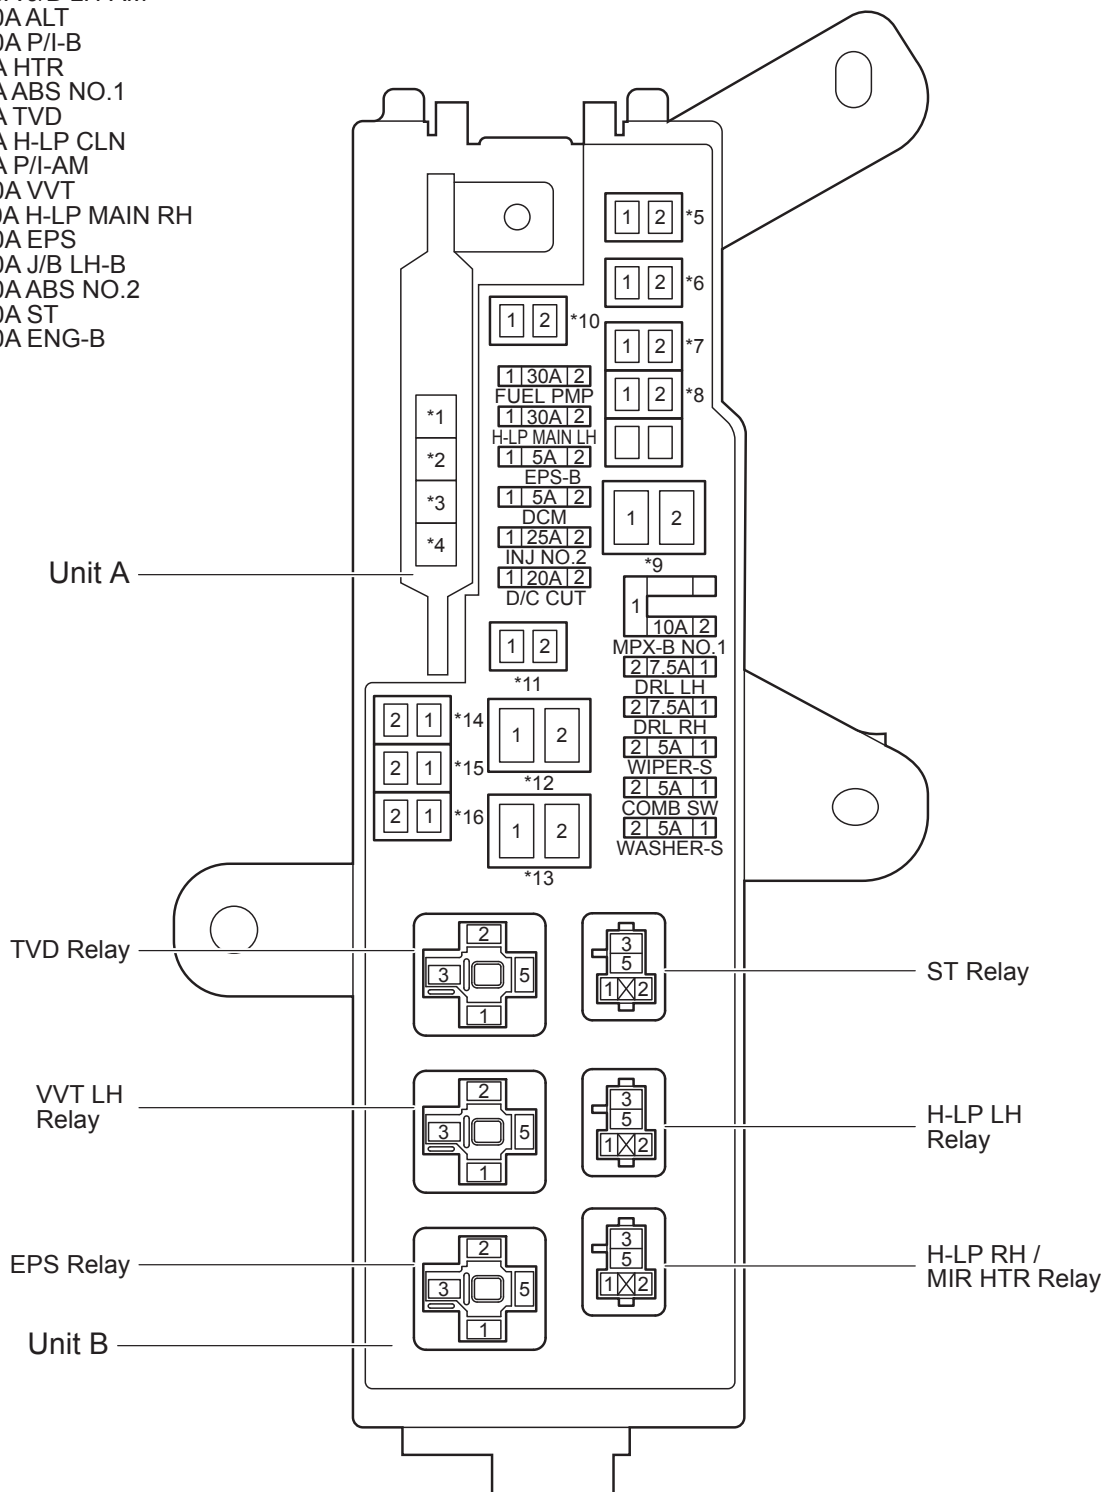


Unit A

Side View

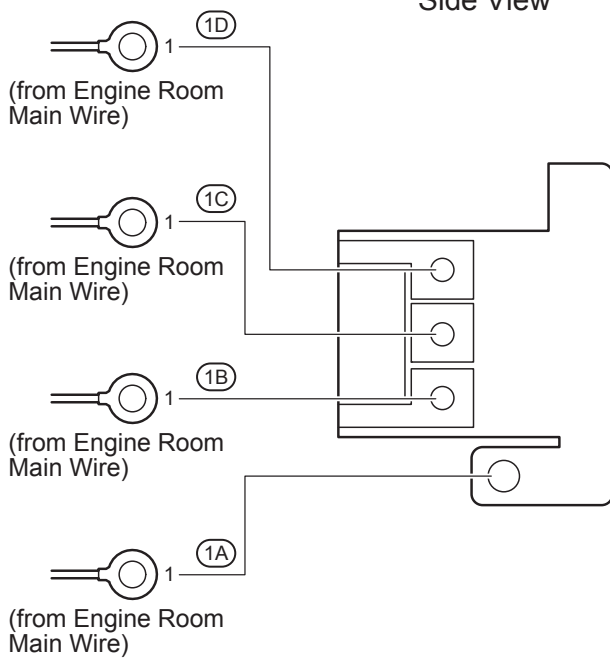


Top View

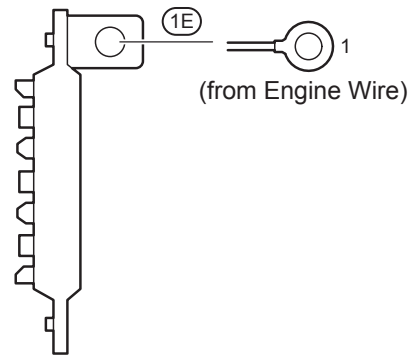

① : Engine Room R/B Assembly No. 1	Left Engine Compartment
○ : Engine Room J/B Assembly No. 1	


(RHD)

- * 1:120A ENG-AM
- * 2:120A J/B LH-AM
- * 3:150A ALT
- * 4:100A P/I-B
- * 5:50A HTR
- * 6:30A ABS NO.1
- * 7:30A H-LP CLN
- * 8:30A TVD
- * 9:80A P/I-AM
- * 10:40A VVT
- * 11:30A H-LP MAIN RH
- * 12:80A EPS
- * 13:80A J/B LH-B
- * 14:50A ABS NO.2
- * 15:30A ST
- * 16:50A ENG-B

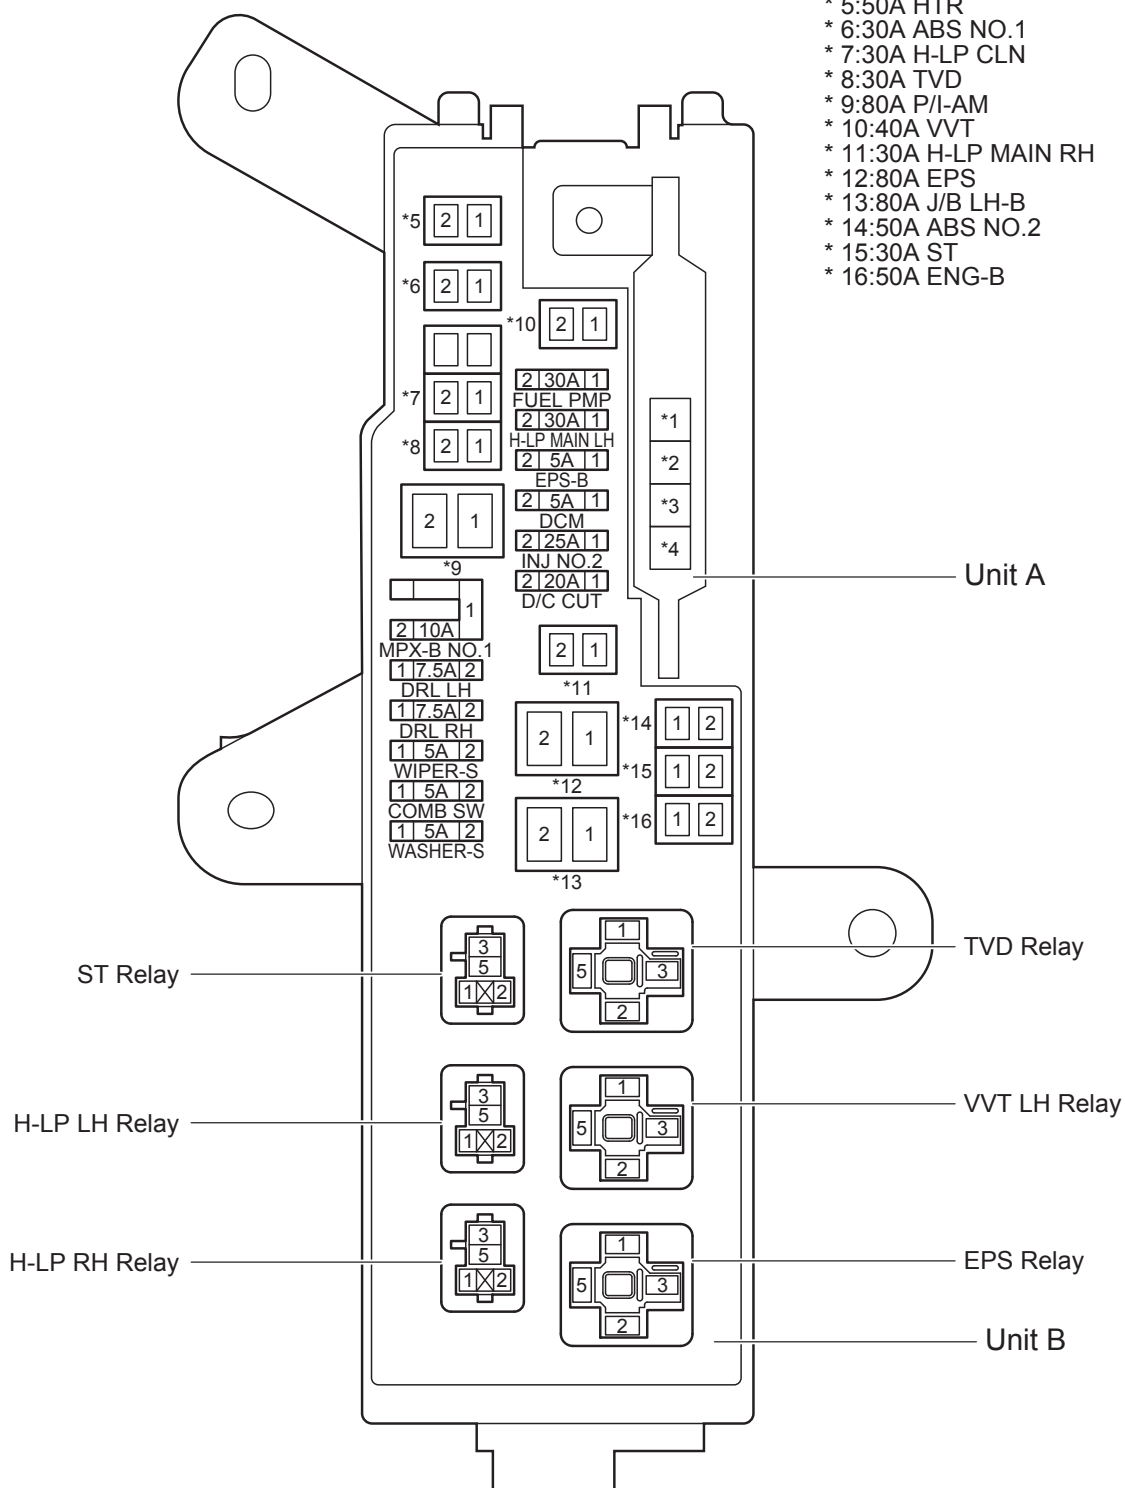

Unit A

Top View

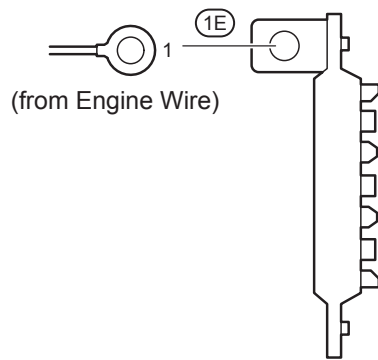

Side View

