


[Seat]

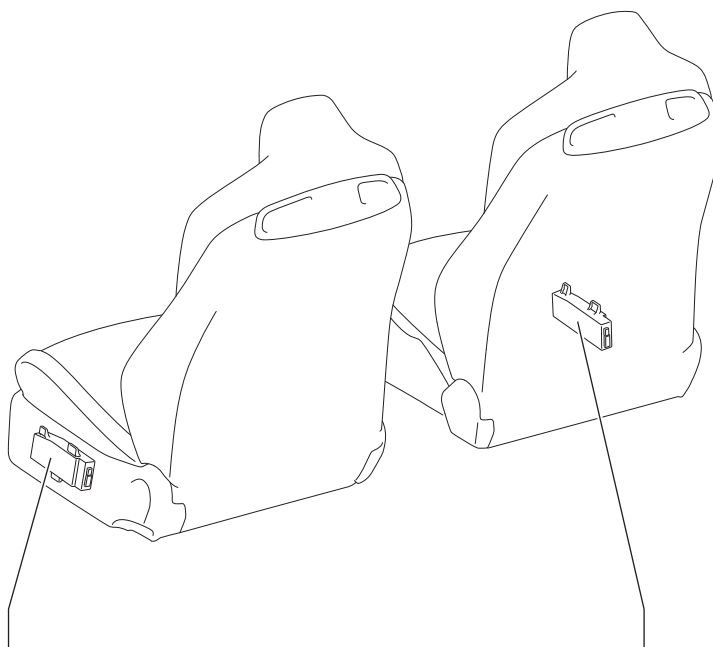

Position Control ECU and Switch Assembly LH

Position Control ECU and Switch Assembly RH