



Position of Parts in Engine Compartment (LHD)

* 1: Before Oct. 2015 Production
* 2: From Oct. 2015 Production

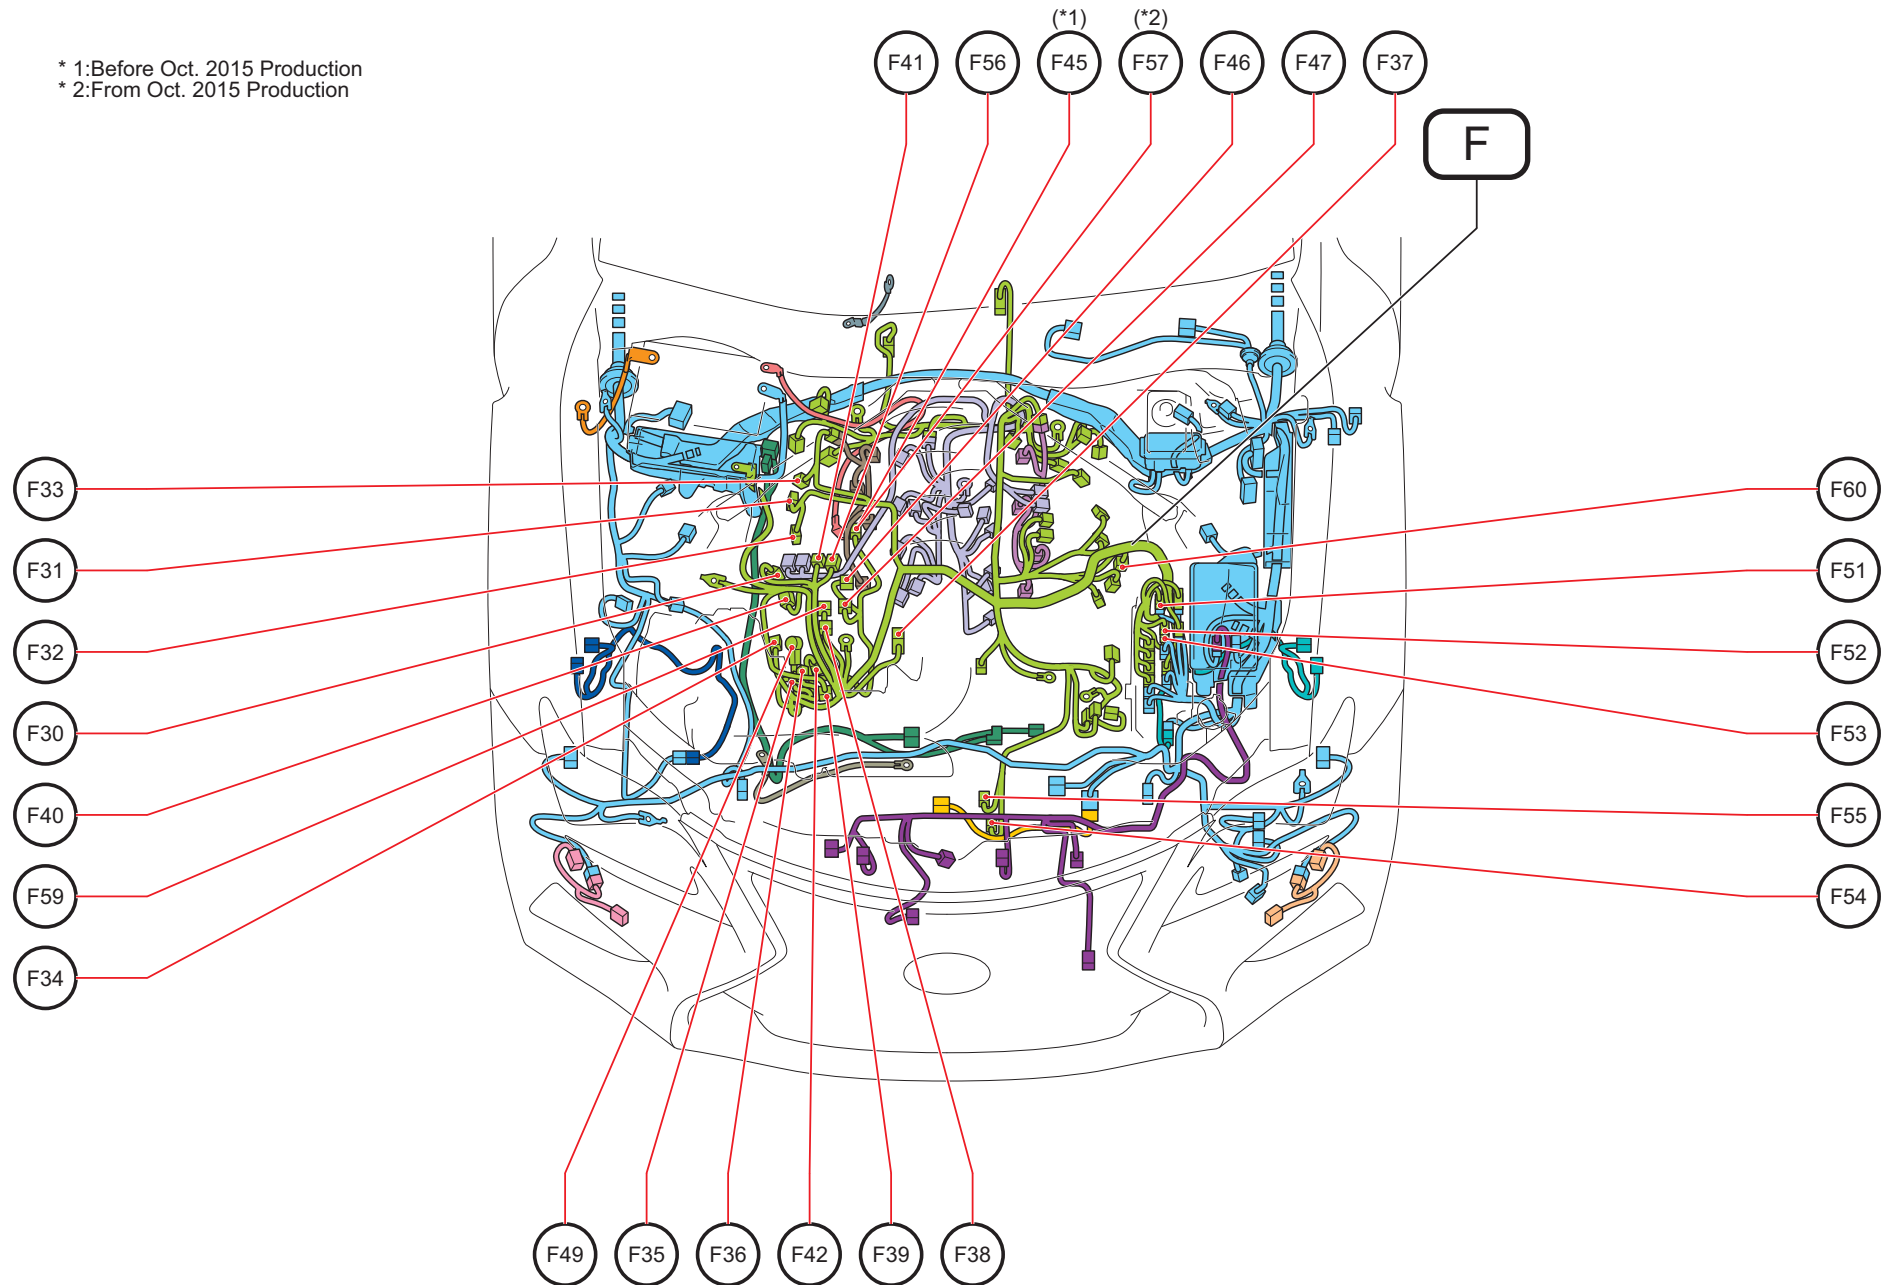

F30	VVT Sensor (Bank 2 Exhaust Side)
F31	Ignition Coil Assembly No. 6
F32	Ignition Coil Assembly No. 4
F33	Fuel Pump with Seal Sub-Assembly RH
F34	Camshaft Timing Oil Control Valve Assembly RH (Bank 1 Exhaust Side)
F35	Camshaft Timing Control with EDU Motor Assembly RH
F36	Camshaft Timing Control with EDU Motor Assembly RH
F37	Throttle Body with Motor Assembly
F38	Camshaft Position Sensor
F39	Intake Mass Air Flow Meter Sub-Assembly
F40	Ignition Coil Assembly No. 2
F41	Injector Driver No. 2
F42	Generator Assembly
F45	Starter Assembly
F46	Engine Oil Level Sensor
F47	Crank Position Sensor
F49	Generator Assembly
F51	No. 4 Junction Connector
F52	No. 5 Junction Connector
F53	No. 5 Junction Connector
F54	Engine Oil Pressure Switch Assembly
F55	Oil Temperature Sensor
F56	Injector Driver No. 2
F57	Starter Assembly
F59	Differential Pressure Sensor RH
F60	Differential Pressure Sensor LH

Position of Parts in Engine Compartment (LHD)

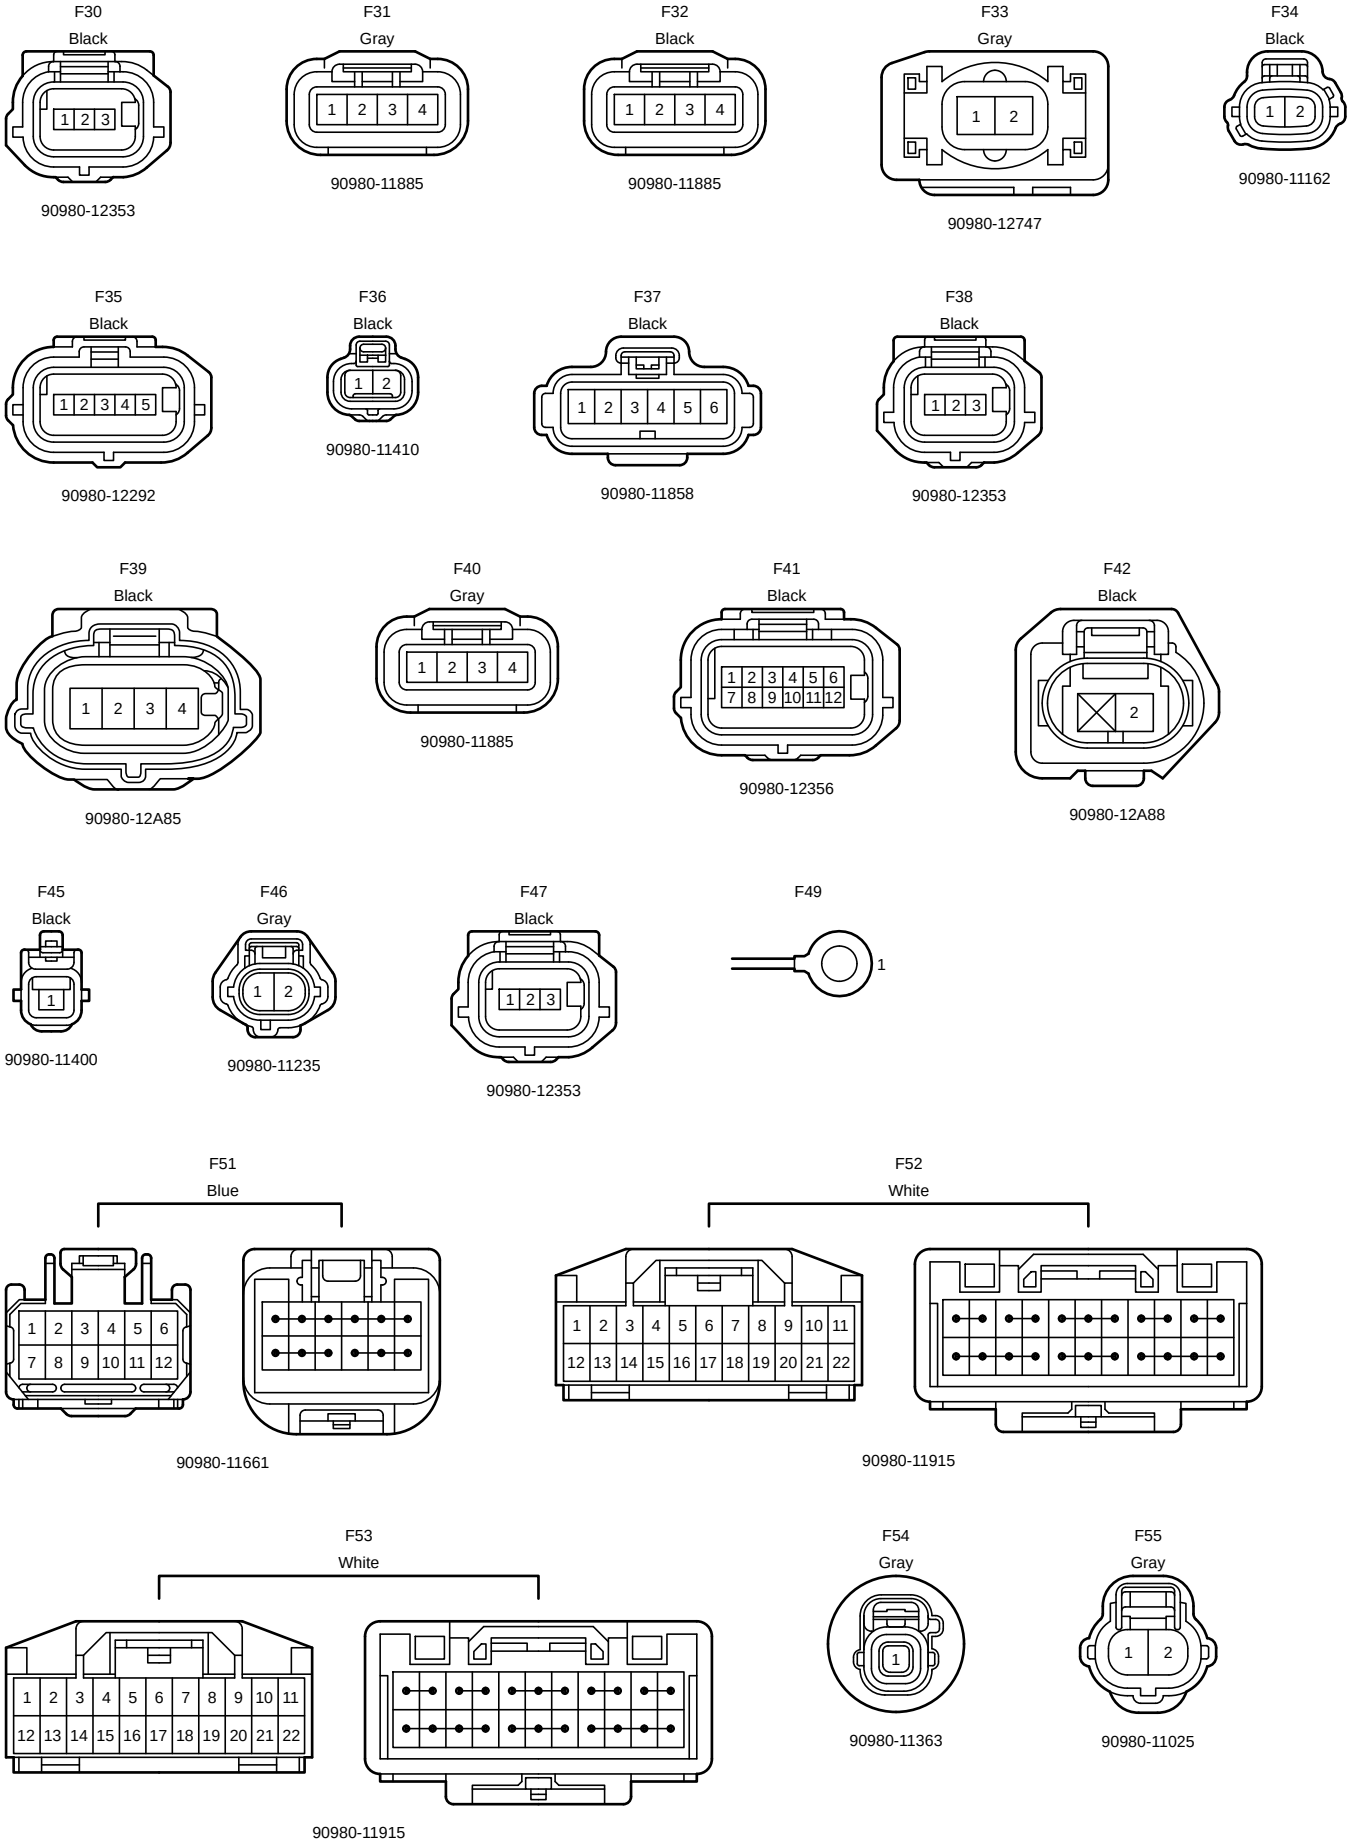

Position of Parts in Engine Compartment (LHD)

