 
 
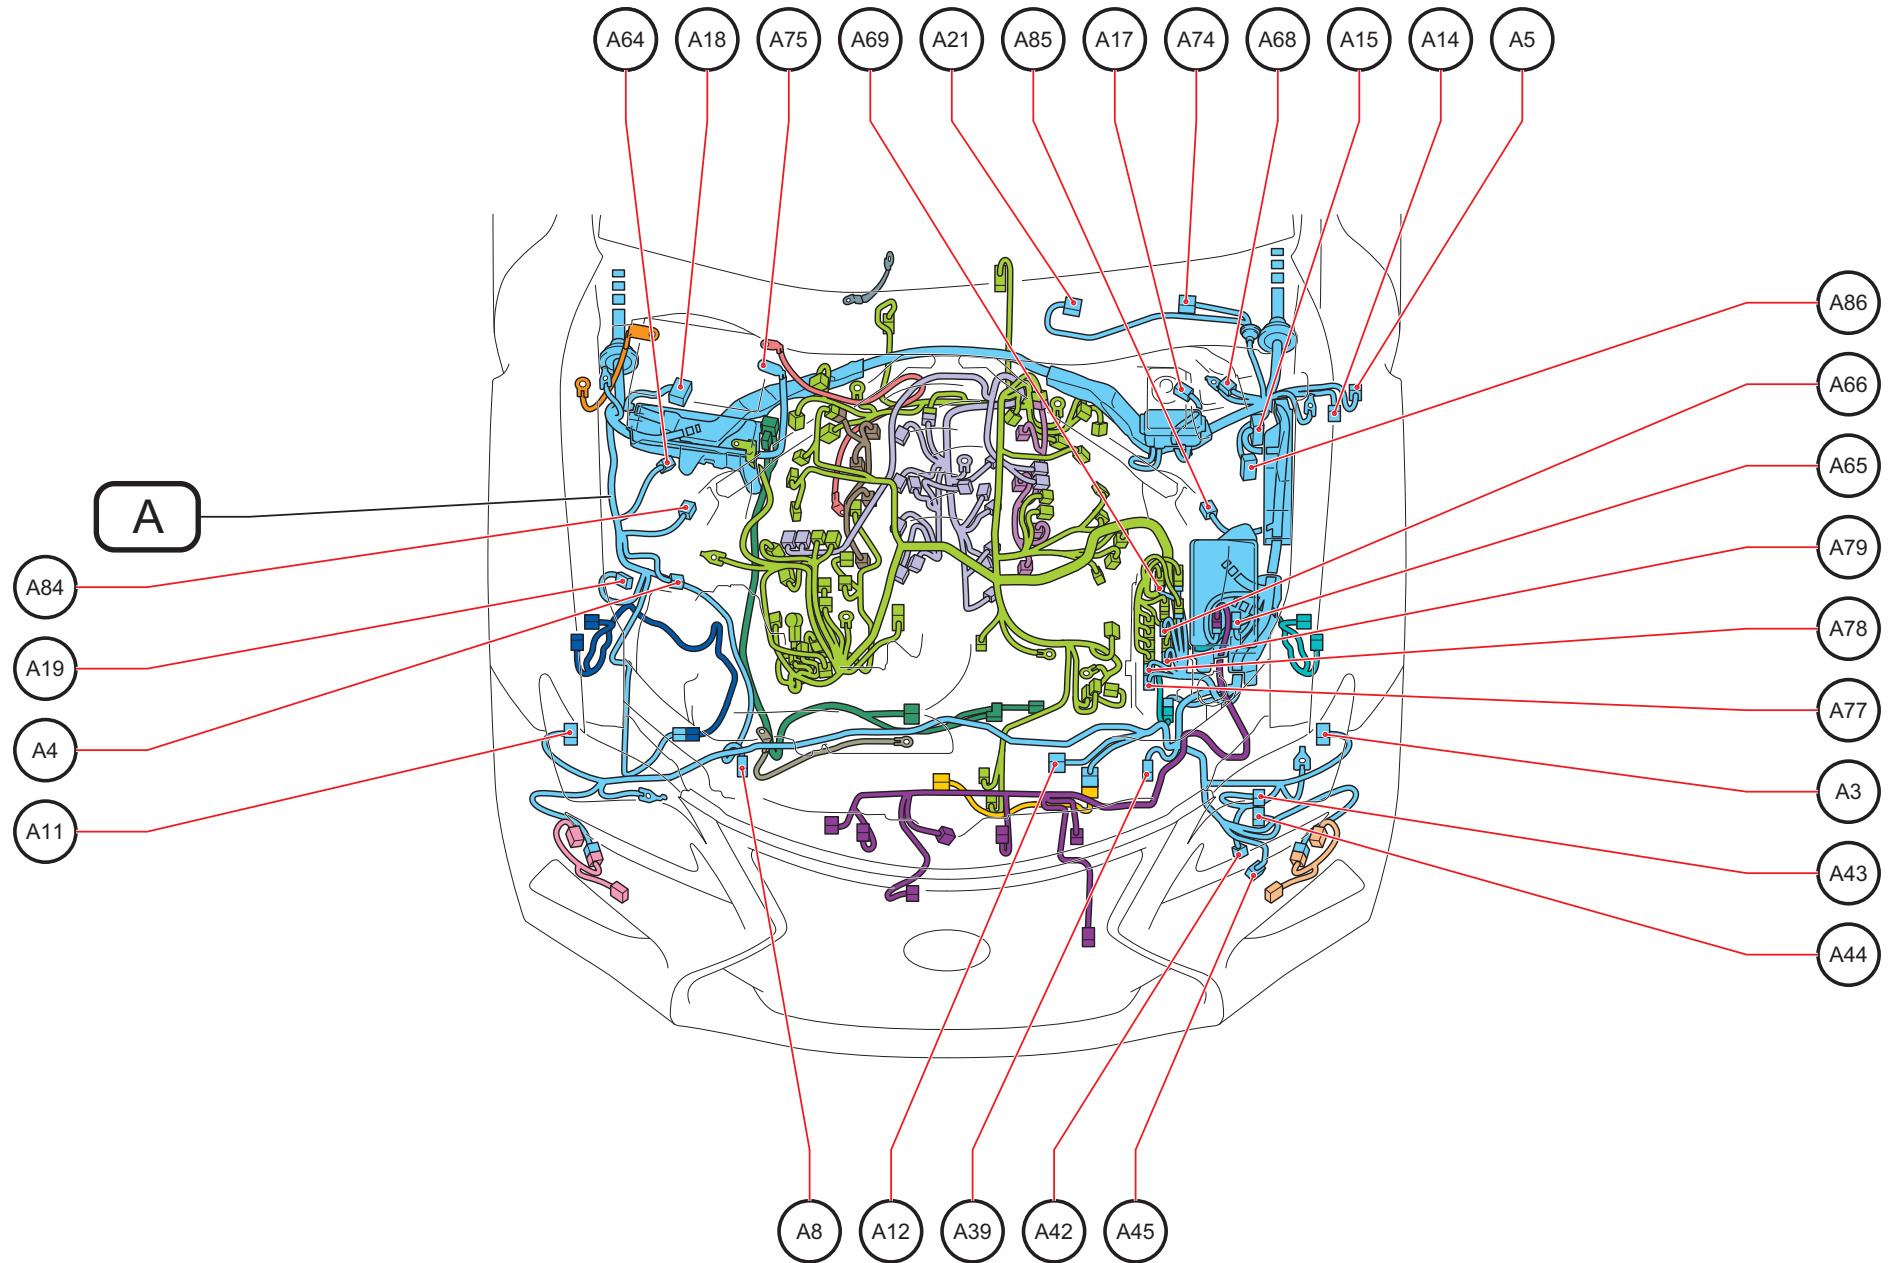 
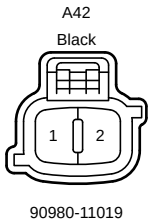 
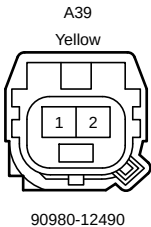 
 
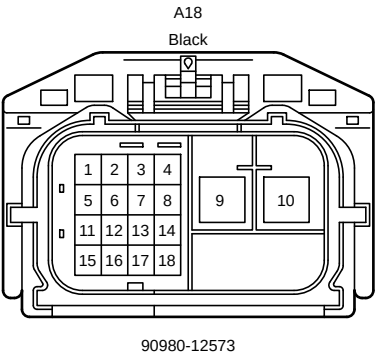 
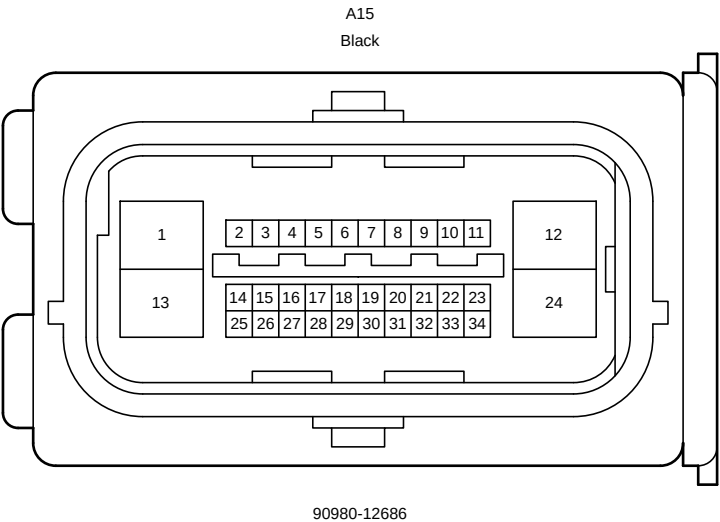 
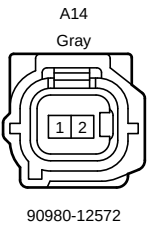 
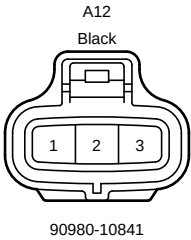 
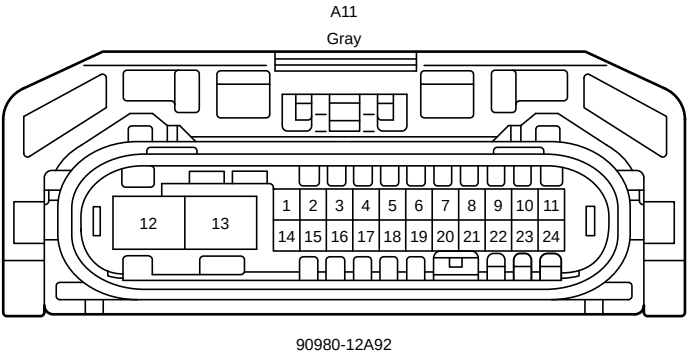 
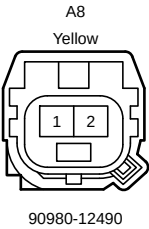 
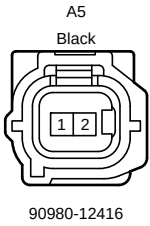 


Position of Parts in Engine Compartment (LHD)

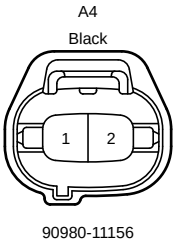


A3	Headlight Light Control ECU Sub-Assembly LH
A4	VSV (AICV)
A5	Front Tire Pressure Monitor Initiator
A8	Front Airbag Sensor RH
A11	Headlight Light Control ECU Sub-Assembly RH
A12	Cooling Fan ECU LH
A14	Wireless Door Lock Buzzer
A15	Brake Actuator Assembly
A17	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A18	Power Steering ECU Assembly
A19	Security Horn Assembly
A21	Windshield Wiper Motor Assembly
A39	Front Airbag Sensor LH
A42	Windshield Washer Motor and Pump Assembly
A43	Level Warning Switch Assembly
A44	Headlight Cleaner Control Relay
A45	Headlight Cleaner Motor and Pump Assembly
A64	No. 1 Wiring Harness Condenser Assembly
A65	No. 1 Junction Connector
A66	No. 2 Junction Connector
A68	No. 1 Ground Junction Connector
A69	No. 4 Junction Connector
A74	Front Window Deicer (Windshield Glass)
A75	Battery
A77	ECM
A78	ECM
A79	Transmission Control ECU Assembly
A84	Front Shock Absorber Assembly RH
A85	Front Shock Absorber Assembly LH
A86	Brake Actuator Assembly


Position of Parts in Engine Compartment (LHD)

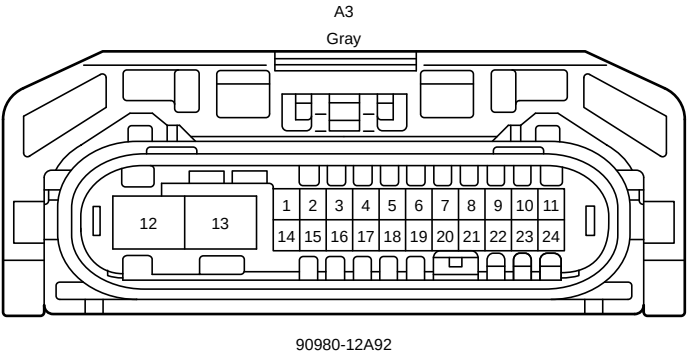

 
Position of Parts in Engine Compartment (LHD)

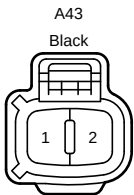


90980-11068

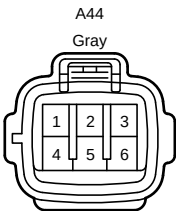 


90980-11194

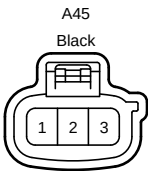 


90980-10981

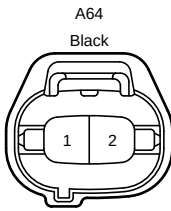 


90980-11156

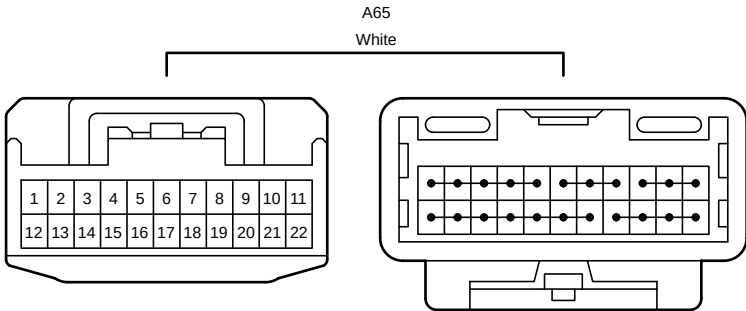 


90980-12372

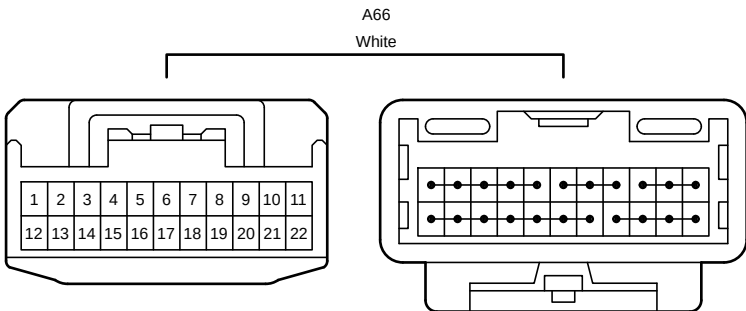 


90980-12372

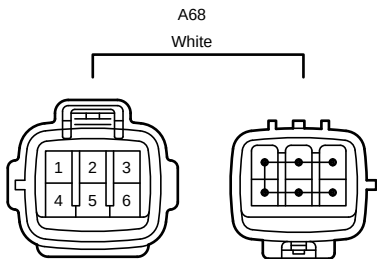 



90980-11194

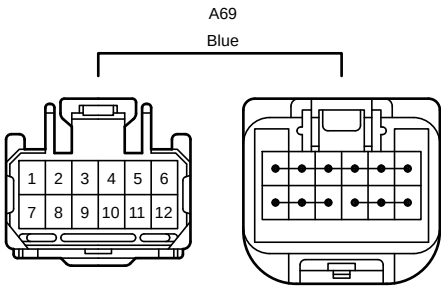 


90980-11661

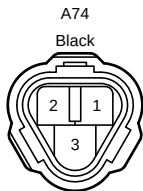 


90980-11407

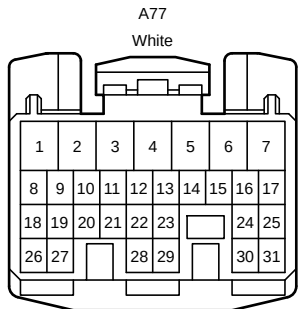  


90980-12525

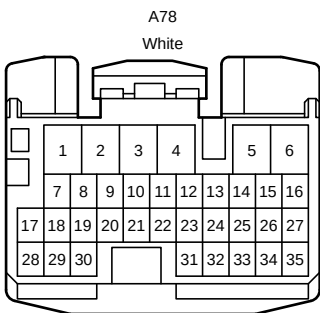 

90980-12529

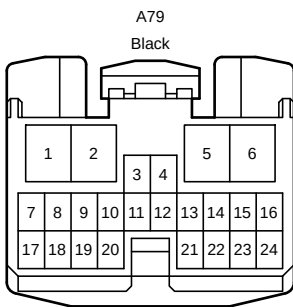 

90980-12560

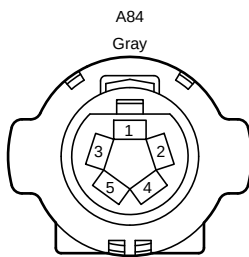 

90980-11689

Position of Parts in Engine Compartment (LHD)

