



Position of Parts in Engine Compartment (RHD)

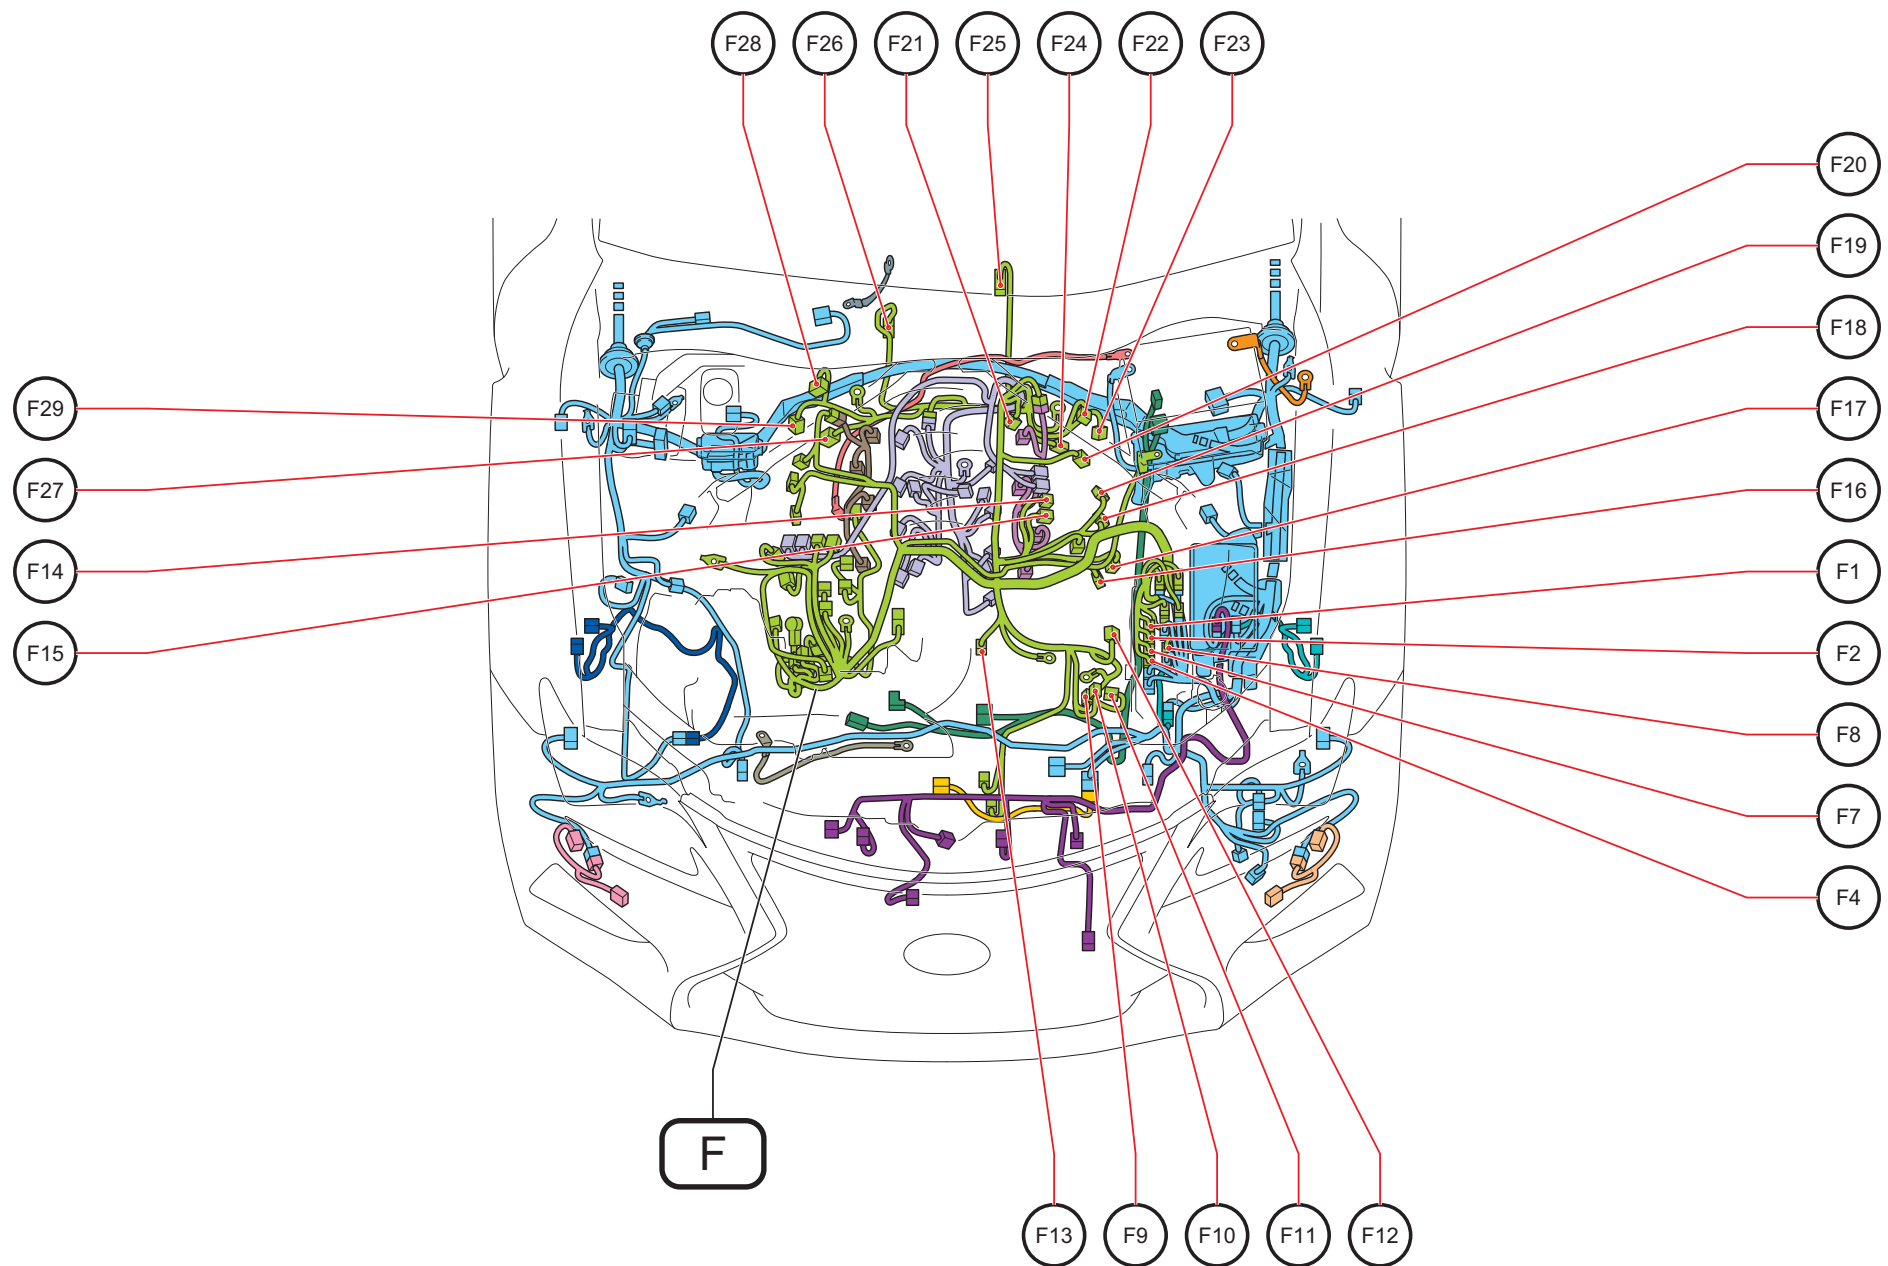


Position of Parts in Engine Compartment (RHD)

F1	ECM
F2	ECM
F4	ECM
F7	ECM
F8	Transmission Control ECU Assembly
F9	Camshaft Timing Control with EDU Motor Assembly LH
F10	Camshaft Timing Control with EDU Motor Assembly LH
F11	Cooler Compressor Assembly
F12	Camshaft Timing Oil Control Valve Assembly LH (Bank 2 Exhaust Side)
F13	E.F.I. Engine Coolant Temperature Sensor
F14	Injector Driver No. 1
F15	Injector Driver No. 1
F16	Ignition Coil Assembly No. 1
F17	VVT Sensor (Bank 1 Exhaust Side)
F18	Ignition Coil Assembly No. 3
F19	Ignition Coil Assembly No. 5
F20	Fuel Pump with Seal Sub-Assembly LH
F21	Purge VSV
F22	VVT Sensor (Bank 1 Intake Side)
F23	Ignition Coil Assembly No. 7
F24	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
F25	ECT Solenoid (Transmission Wire)
F26	Park/Neutral Position Switch Assembly
F27	No. 2 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
F28	VVT Sensor (Bank 2 Intake Side)
F29	Ignition Coil Assembly No. 8


Position of Parts in Engine Compartment (RHD)

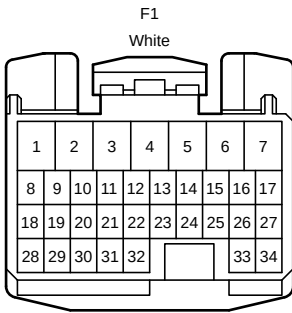


90980-12527

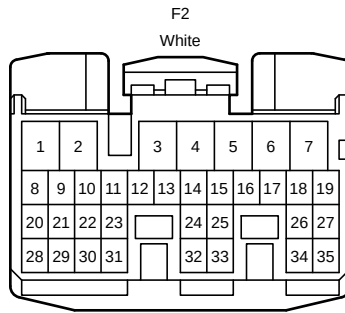


90980-12528

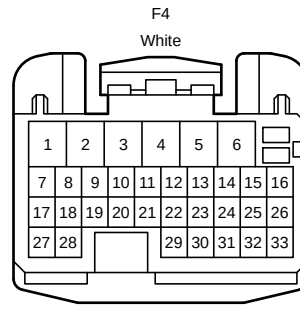

90980-12700

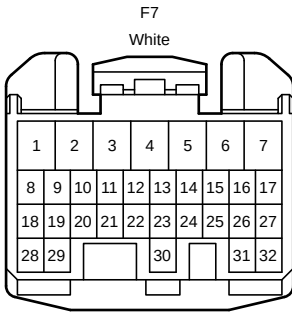


90980-12526

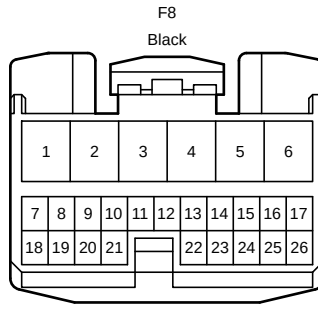


90980-12561




90980-11410

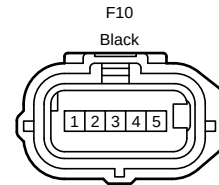

90980-12292

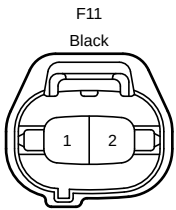


90980-11156

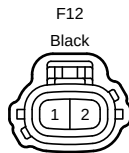


90980-11162




90980-10735

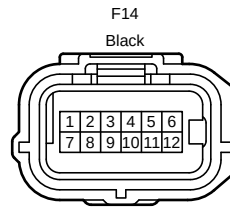


90980-12356

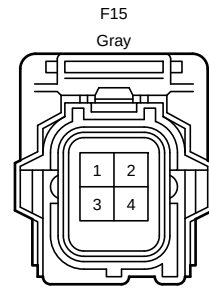


90980-12654

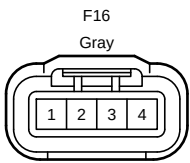


90980-11885

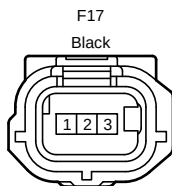


90980-12353

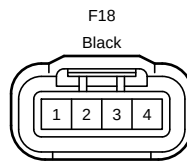


90980-11885

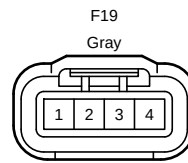


90980-11885

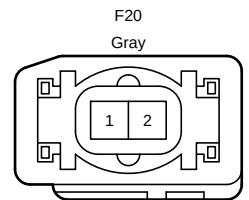


90980-12747

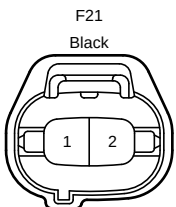

90980-11156

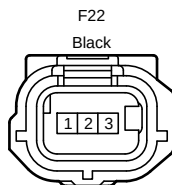

90980-12353

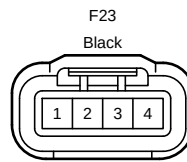

90980-11885



90980-10869

Position of Parts in Engine Compartment (RHD)

