


Position of Parts in Engine Compartment (RHD)

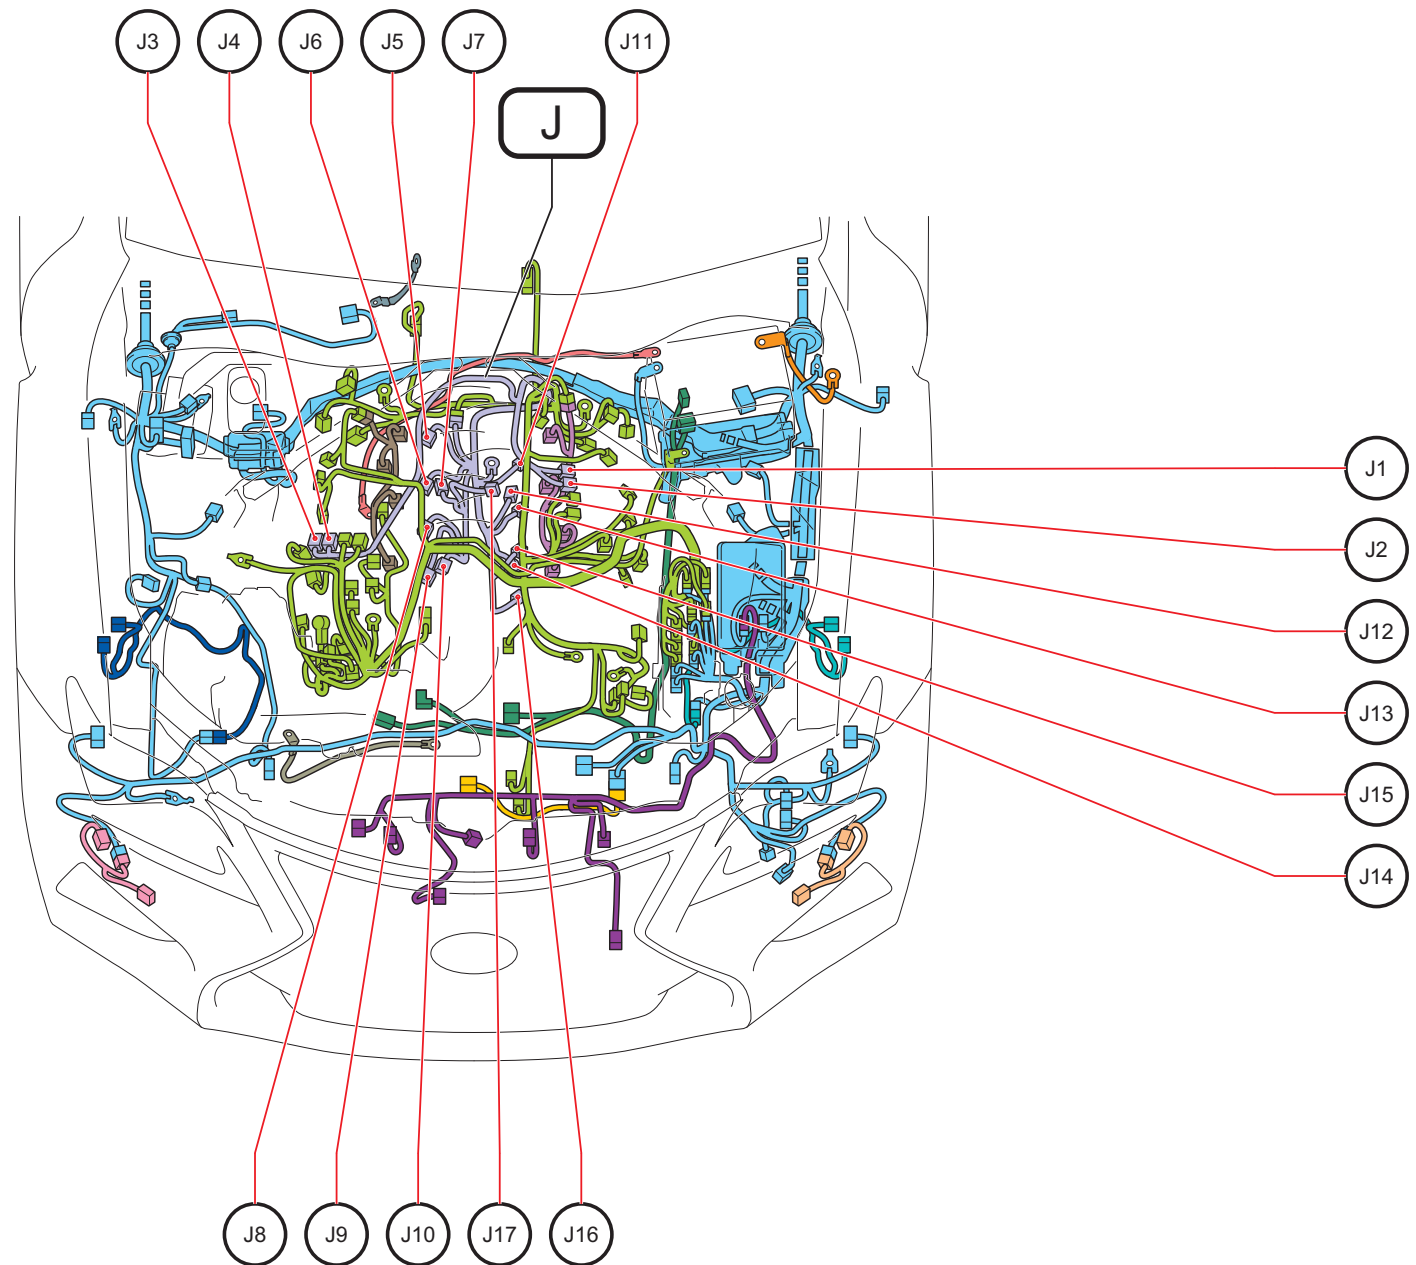

J1	Injector Driver No. 1
J2	Injector Driver No. 1
J3	Injector Driver No. 2
J4	Injector Driver No. 2
J5	Fuel Injector Assembly No. 8 (for Direct Injection)
J6	Fuel Injector Assembly No. 6 (for Direct Injection)
J7	Knock Control Sensor (Bank 2 Sensor 2)
J8	Fuel Injector Assembly No. 4 (for Direct Injection)
J9	Fuel Injector Assembly No. 2 (for Direct Injection)
J10	Knock Control Sensor (Bank 2 Sensor 1)
J11	Fuel Injector Assembly No. 7 (for Direct Injection)
J12	Knock Control Sensor (Bank 1 Sensor 2)
J13	Fuel Injector Assembly No. 5 (for Direct Injection)
J14	Knock Control Sensor (Bank 1 Sensor 1)
J15	Fuel Injector Assembly No. 3 (for Direct Injection)
J16	Fuel Injector Assembly No. 1 (for Direct Injection)
J17	Fuel Pressure Sensor

Position of Parts in Engine Compartment (RHD)

