

 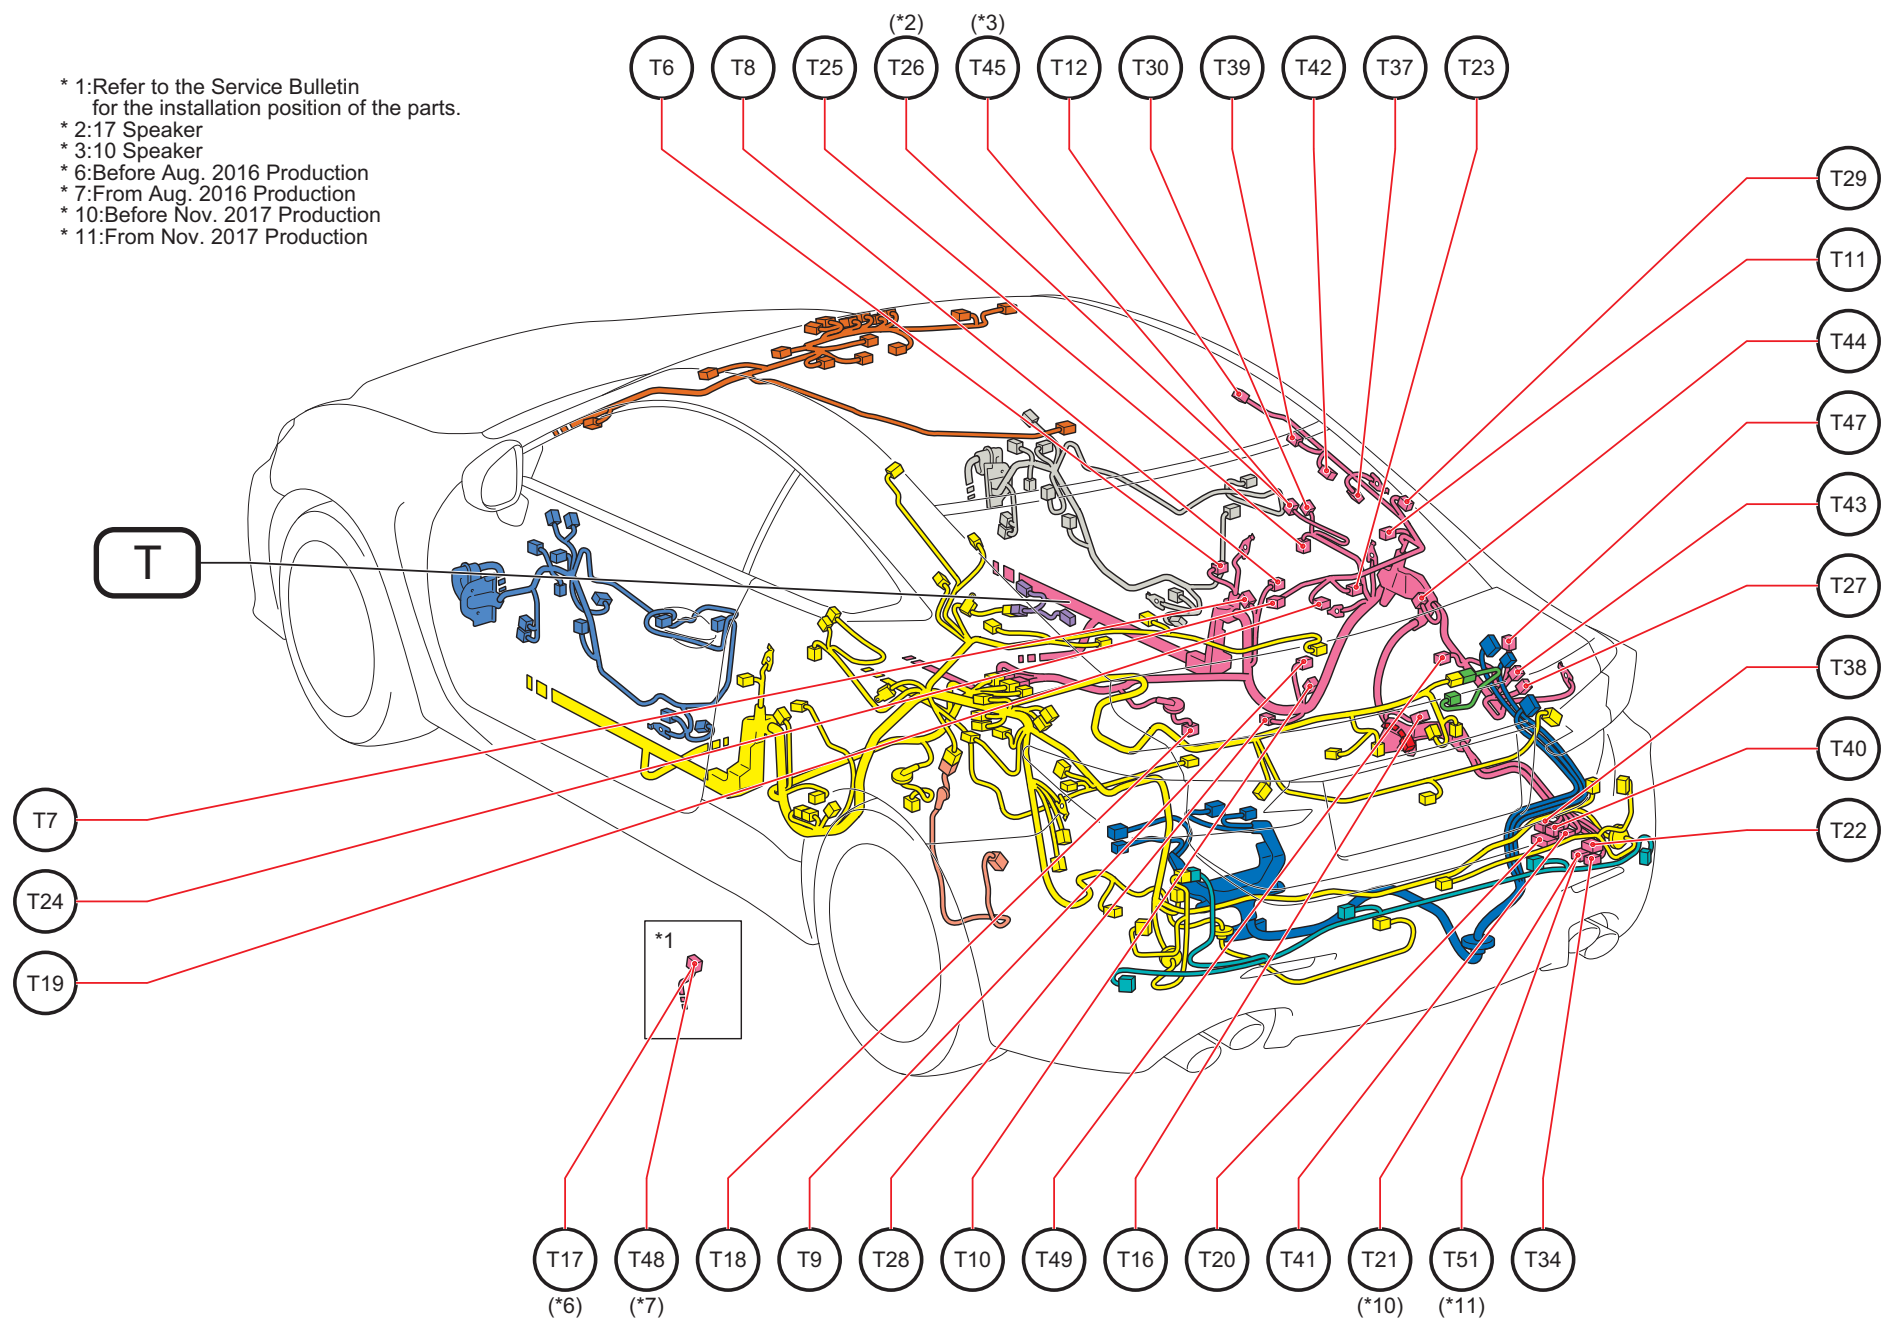
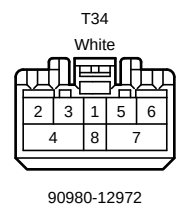

 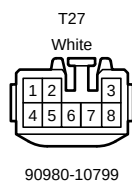
 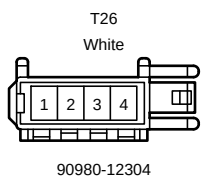


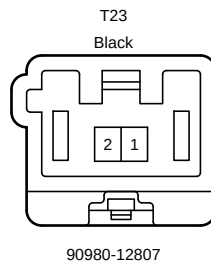
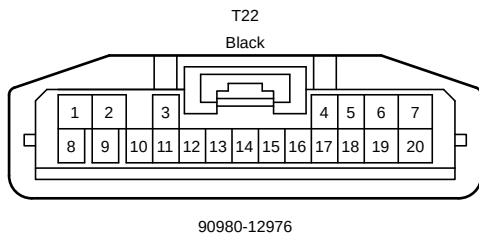
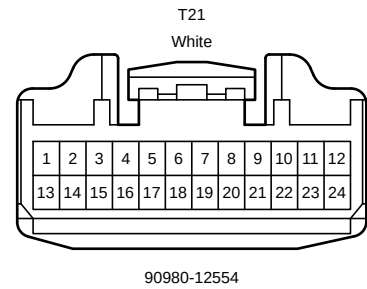
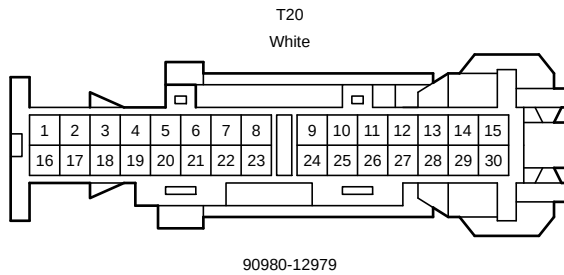
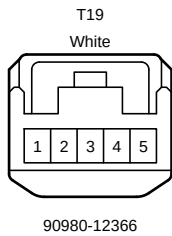
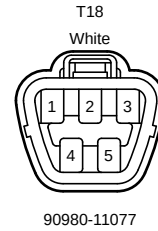
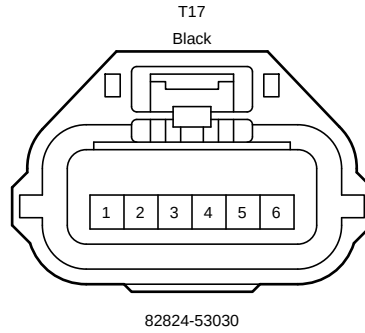
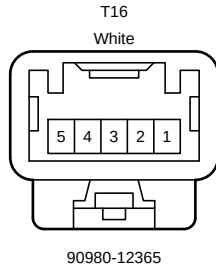
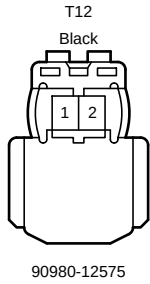
 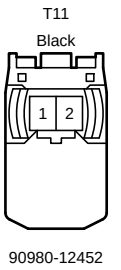
 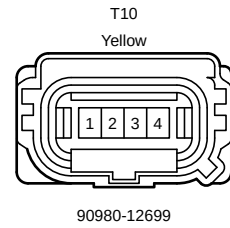



Position of Parts in Body (LHD)



T6	Front Door Courtesy Light Switch Assembly RH
T7	Side Airbag Sensor Assembly RH
T8	Front Seat Outer Belt Assembly RH
T9	Front Seat Outer Belt Assembly RH
T10	Rear Airbag Sensor RH
T11	Rear Seat 3 Point Type Outer Belt Assembly RH
T12	Curtain Shield Airbag Assembly RH
T16	Rear Speed Sensor RH
T17	Theft Warning Siren Assembly
T18	Fuel Tank Vent Tube Assembly
T19	Door Control Receiver Assembly
T20	Stereo Component Amplifier Assembly
T21	Stereo Component Amplifier Assembly
T22	Option Connector (Extension Module)
T23	Rear Header Speaker Assembly RH
T24	Rear No. 3 Speaker Assembly
T25	Rear Speaker Assembly RH
T26	Rear No. 2 Speaker Assembly RH
T27	Torque Vectoring Differential ECU Assembly
T28	Diode (Front Seat Outer Belt Assembly RH)
T29	Rear Window Defogger (Back Window Glass)
T30	Glass Breakage Sensor (Quarter Window Assembly RH)
T34	Stereo Component Amplifier Assembly
T37	No. 2 Antenna Cord Sub-Assembly
T38	Option Connector (Extension Module)
T39	No. 2 Antenna Cord Sub-Assembly
T40	Option Connector (Extension Module)
T41	Option Connector (Extension Module)
T42	No. 2 Antenna Cord Sub-Assembly
T43	Torque Vectoring Differential ECU Assembly
T44	No. 8 CAN Junction Connector
T45	Short Connector
T47	Rear Acceleration Sensor
T48	Theft Warning Siren Assembly
T49	Rear Shock Absorber Assembly RH
T51	Stereo Component Amplifier Assembly

Position of Parts in Body (LHD)

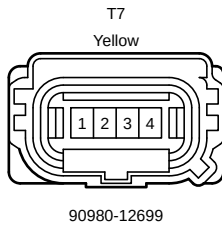

Position of Parts in Body (LHD)

