



Position of Parts in Instrument Panel (LHD)

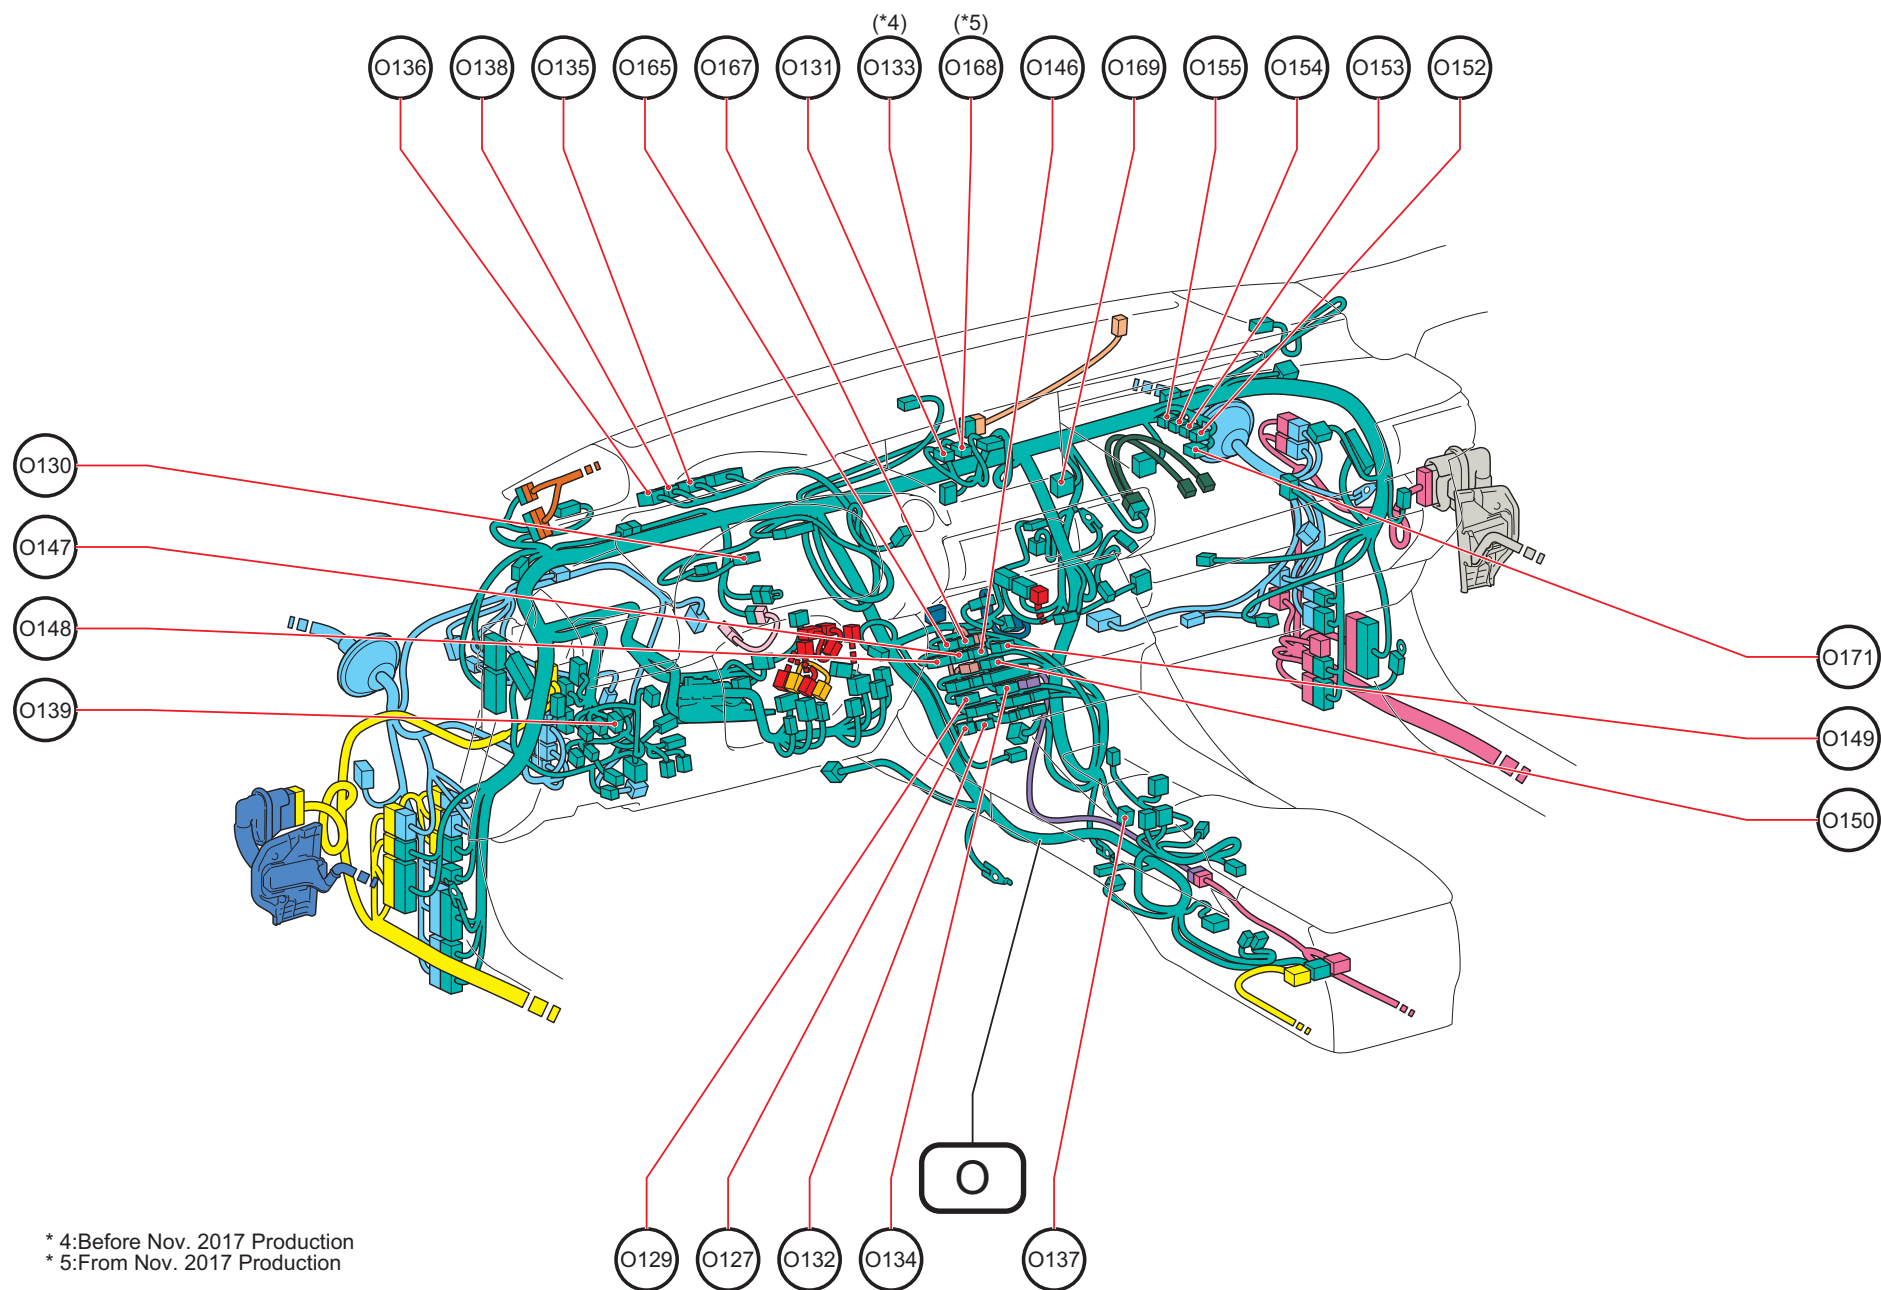


O127 Radio Receiver Assembly
O129 Radio Receiver Assembly
O130 Combination Meter Assembly
O131 Multi-Display Assembly
O132 Multi-Display Assembly
O133 Radio Receiver Assembly
O134 Radio Receiver Assembly
O135 Telematics Transceiver
O136 Telematics Transceiver
O137 No. 2 Antenna Cord Sub-Assembly
O138 Telematics Transceiver
O139 Spoiler Control Switch
O146 Radio Receiver Assembly
O147 Radio Receiver Assembly
O148 Radio Receiver Assembly
O149 Radio Receiver Assembly
O150 Navigation ECU
O152 No. 13 CAN Junction Connector
O153 No. 13 CAN Junction Connector
O154 No. 13 CAN Junction Connector
O155 No. 13 CAN Junction Connector
O165 Radio Receiver Assembly
O167 Radio Receiver Assembly
O168 Multi-Display Assembly
O169 No. 10 CAN Junction Connector
O171 No. 16 CAN Junction Connector


Position of Parts in Instrument Panel (LHD)

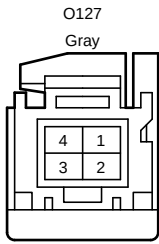


90980-12A52

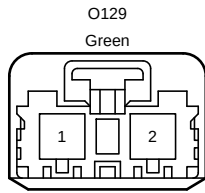


90980-12A73

 


90980-12593

 


90980-12593

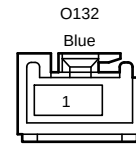


90980-12957

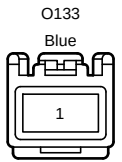


90980-12593

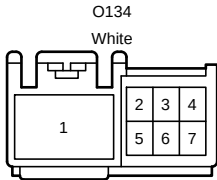


90980-12602

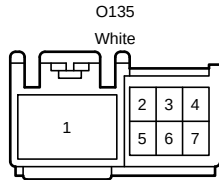


90980-12602

 


90980-50024

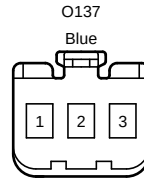


90980-50036

 


90980-50022

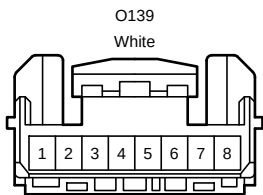


90980-12558

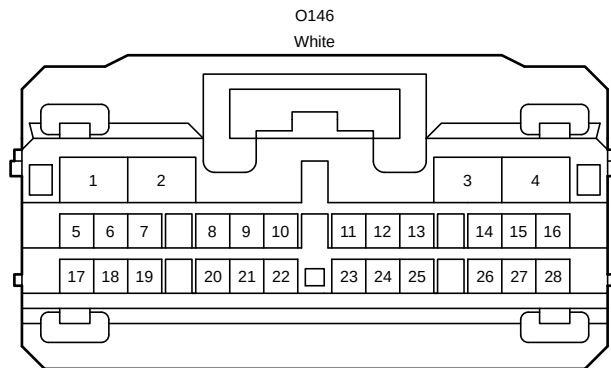


82824-52380

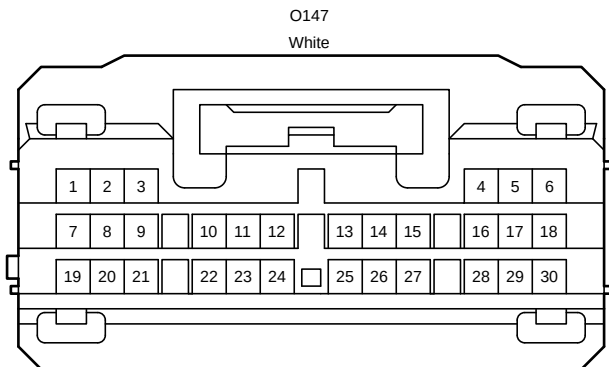


90980-12761

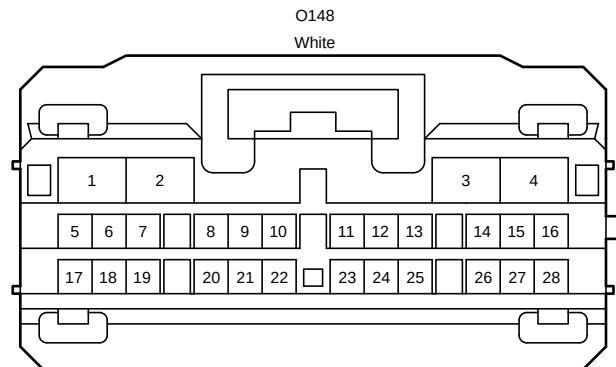


90980-12760

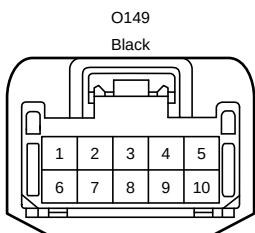


90980-12C39

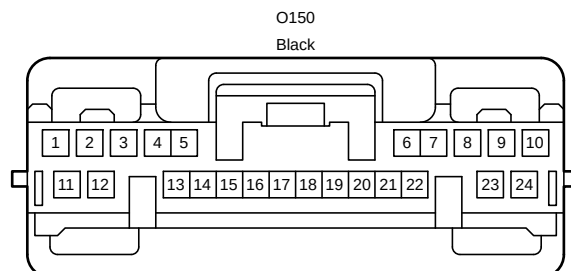

90980-12912

 

90980-12827

 

90980-12827

Position of Parts in Instrument Panel (LHD)

