

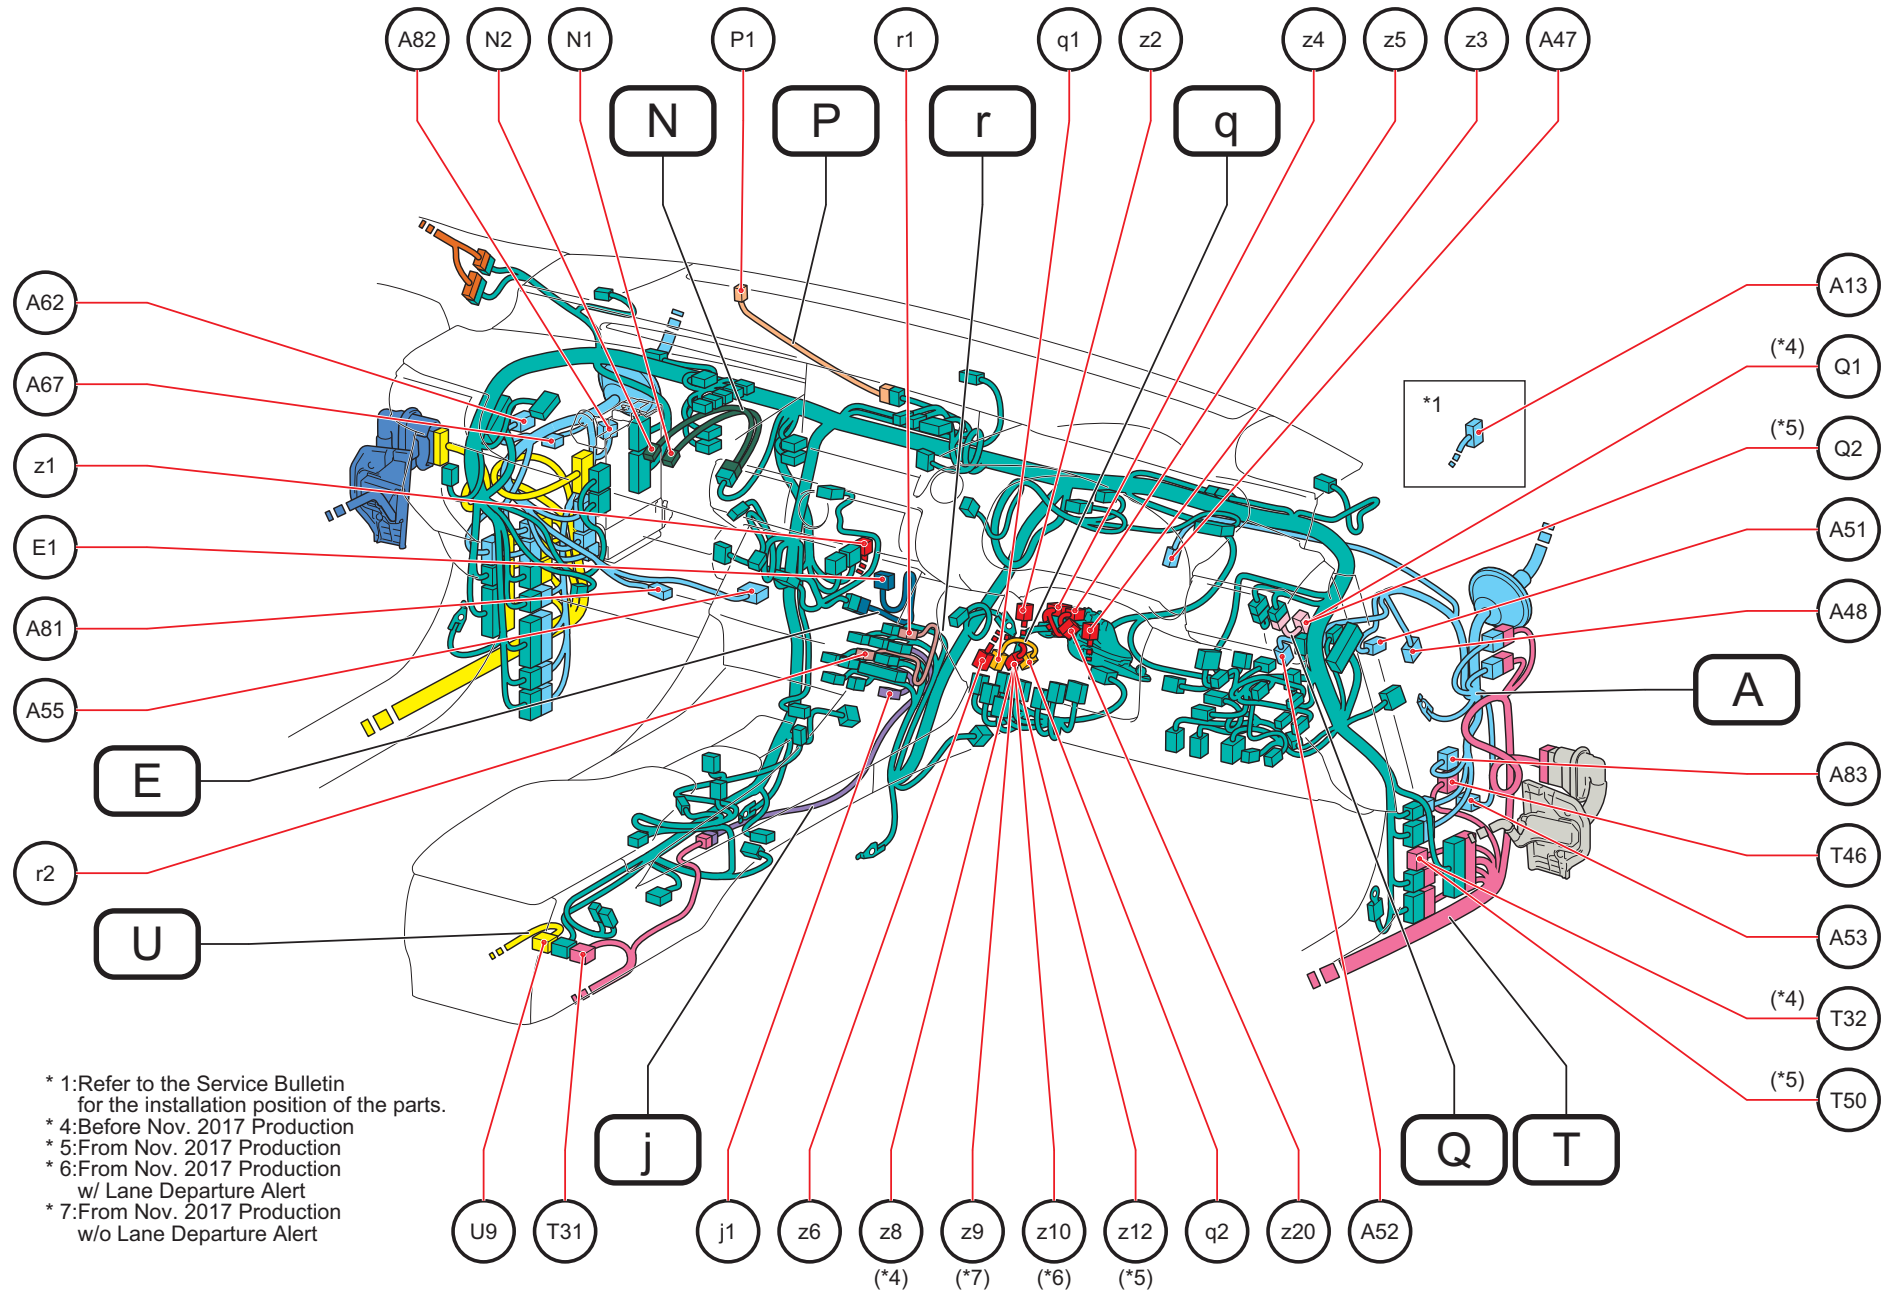
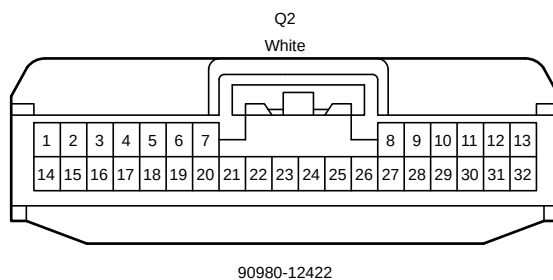
 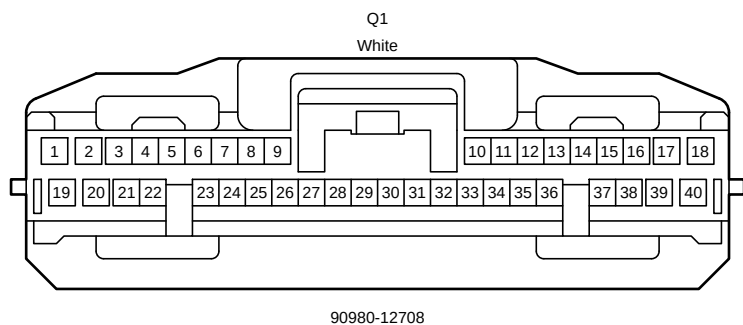
 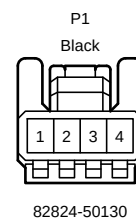


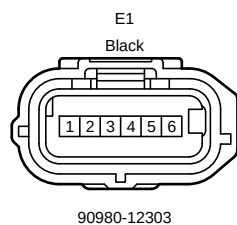
 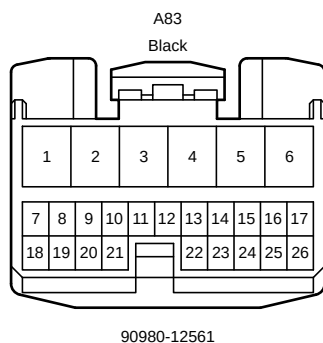
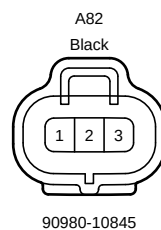

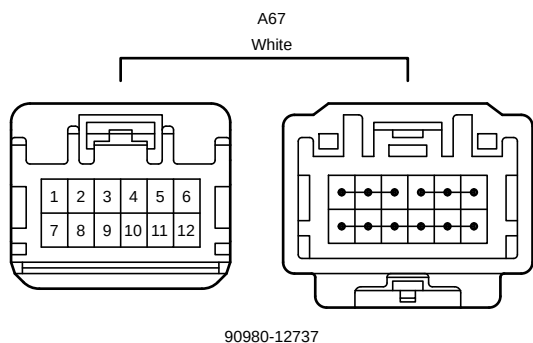
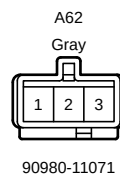
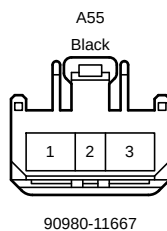
 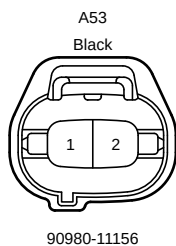
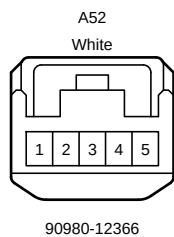



Position of Parts in Instrument Panel (RHD)

 

 
 
 
 

 
 



 






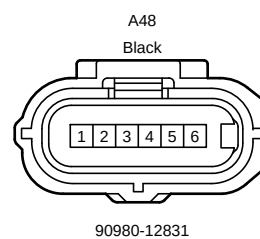


A13	Certification ECU
A47	Parking Brake Switch Assembly
A48	Accelerator Pedal Sensor Assembly
A51	Brake Pedal Load Sensing Switch (Brake Pedal Support Assembly)
A52	Stop Light Switch Assembly
A53	Kick Down Switch Assembly
A55	Blower Motor with Fan Sub-Assembly
A62	Diode (Park/Neutral Position Switch Assembly)
A67	No. 3 Junction Connector
A81	Front Foot Light LH (No. 1 Interior Illumination Light Assembly LH)
A82	Front Acceleration Sensor LH
A83	Absorber Control ECU
E1	Yaw Rate Sensor No. 2
N1	Instrument Panel Passenger Airbag without Door Assembly
N2	Instrument Panel Passenger Airbag without Door Assembly
P1	Automatic Light Control Sensor
Q1	Driving Support ECU Assembly
Q2	Driving Support ECU Assembly
T31	Airbag ECU Assembly
T32	No. 7 CAN Junction Connector
T46	Absorber Control ECU
T50	No. 11 CAN Junction Connector
U9	Airbag ECU Assembly
j1	Radio Receiver Assembly
q1	No. 1 Switch Wire
q2	Spiral Cable with Sensor Sub-Assembly
r1	Radio Receiver Assembly
r2	Navigation ECU
z1	A/C Harness Assembly , A/C Amplifier Assembly
z2	Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable with Sensor Sub-Assembly
z3	Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable with Sensor Sub-Assembly
z4	Steering Pad Switch Assembly , Spiral Cable with Sensor Sub-Assembly
z5	Cruise Control Switch Wire , Spiral Cable with Sensor Sub-Assembly
z6	No. 1 Switch Wire , Steering Pad Switch Assembly
z8	Steering Wheel Heater Control Assembly , Spiral Cable with Sensor Sub-Assembly
z9	Steering Wheel Heater Control Assembly , Spiral Cable with Sensor Sub-Assembly
z10	Steering Wheel Heater Control Assembly , Spiral Cable with Sensor Sub-Assembly
z12	Spiral Cable with Sensor Sub-Assembly , No. 1 Switch Wire
z20	Cruise Control Main Switch ,,, Spiral Cable with Sensor Sub-Assembly

Position of Parts in Instrument Panel (RHD)

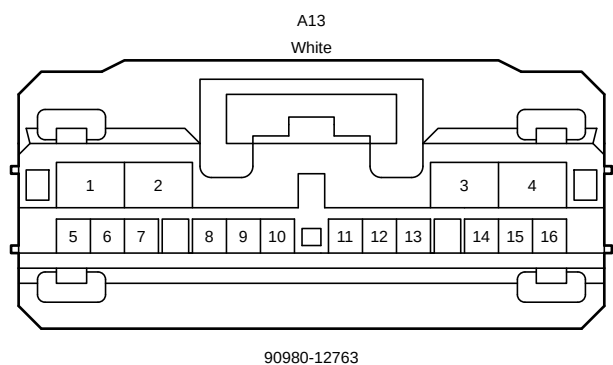

Position of Parts in Instrument Panel (RHD)

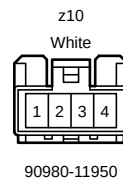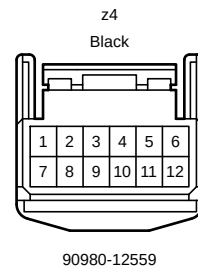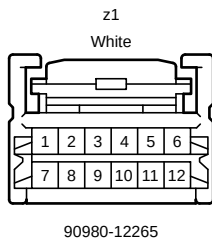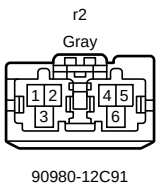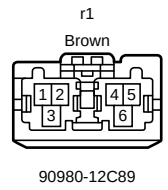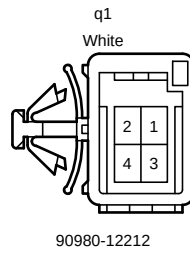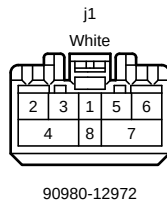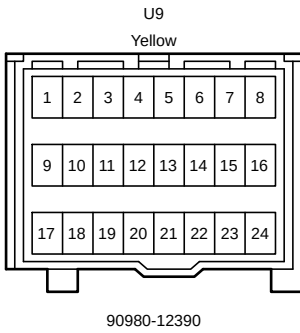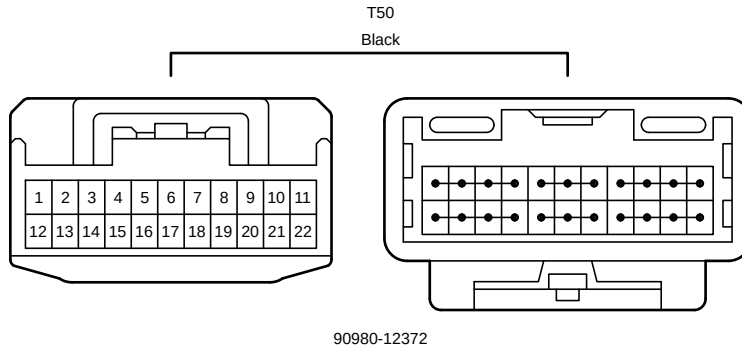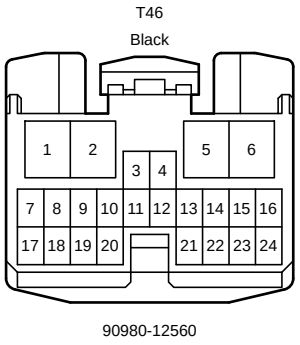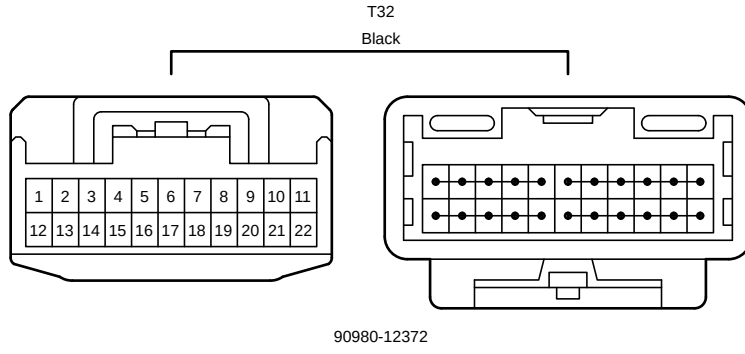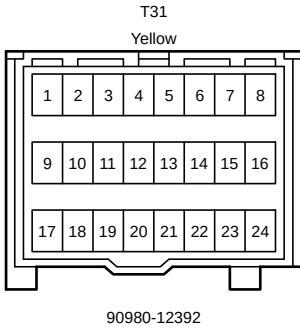

Position of Parts in Instrument Panel (RHD)

