 
 


Position of Parts in Engine Compartment (RHD 2GR-FKS)

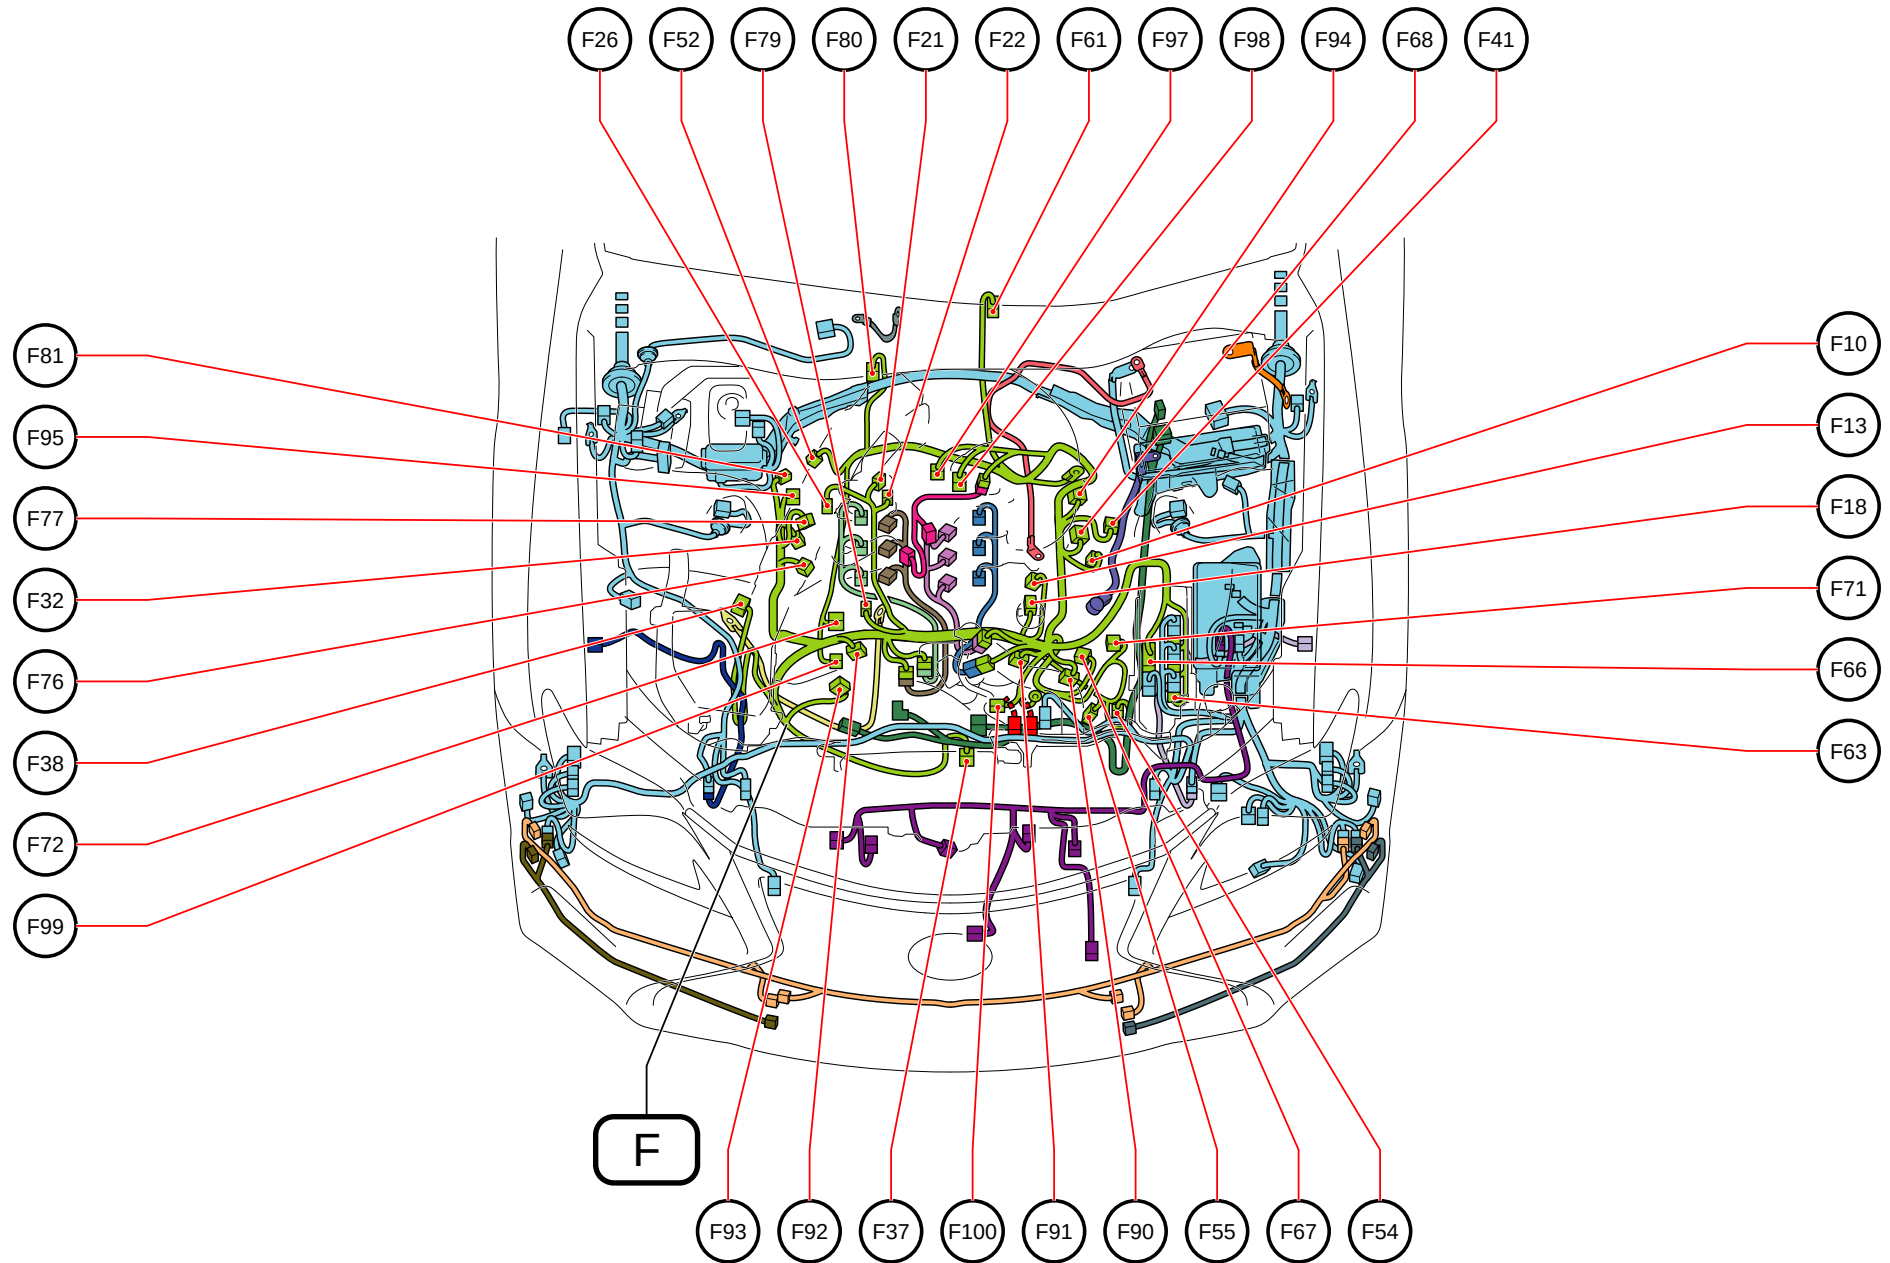


F10	VVT Sensor (Bank 2 Exhaust Side)
F13	VVT Sensor (Bank 2 Intake Side)
F18	Starter Assembly
F21	Throttle Body with Motor Assembly
F22	Purge VSV
F26	VVT Sensor (Bank 1 Intake Side)
F32	VVT Sensor (Bank 1 Exhaust Side)
F37	Engine Oil Pressure Switch Assembly
F38	Intake Mass Air Flow Meter Sub-Assembly
F41	No. 2 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
F52	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
F54	Cooler Compressor Assembly
F55	Cooler Compressor Assembly
F61	ECT Solenoid (Transmission Wire)
F63	No. 5 Junction Connector
F66	ECM
F67	Ignition Coil Assembly No. 2
F68	Ignition Coil Assembly No. 4
F71	Generator Assembly
F72	Crank Position Sensor
F76	Ignition Coil Assembly No. 1
F77	Ignition Coil Assembly No. 3
F79	Fuel Pressure Sensor (Low Pressure Side)
F80	Park/Neutral Position Switch Assembly
F81	Fuel Pump Assembly
F90	Cam Timing Oil Control Valve Assembly LH (Bank 2 Exhaust Side)
F91	Cam Timing Oil Control Valve Assembly LH (Bank 2 Intake Side)
F92	Cam Timing Oil Control Valve Assembly RH (Bank 1 Intake Side)
F93	Cam Timing Oil Control Valve Assembly RH (Bank 1 Exhaust Side)
F94	Ignition Coil Assembly No. 6
F95	Ignition Coil Assembly No. 5
F97	Fuel Pressure Sensor (High Pressure Side)
F98	E.F.I. Engine Coolant Temperature Sensor
F99	Engine Oil Level Sensor
F100	Water Inlet with Thermostat Sub-Assembly


Position of Parts in Engine Compartment (RHD 2GR-FKS)

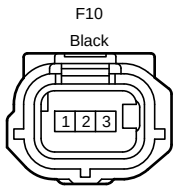

 
90980-12353

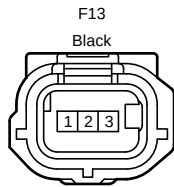


90980-12353

 


90980-11400

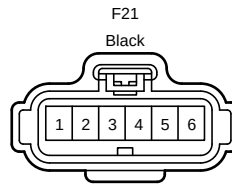 


90980-11858

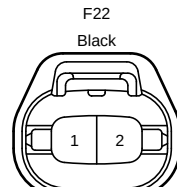 

90980-11156

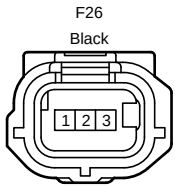 


90980-12353

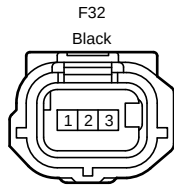 

90980-12353



 90980-11363

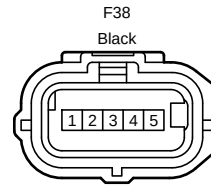


90980-12292




90980-10869



 
90980-10869

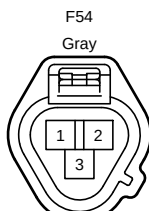


90980-11016

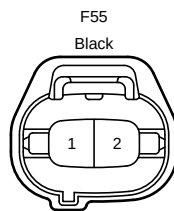 


90980-11156

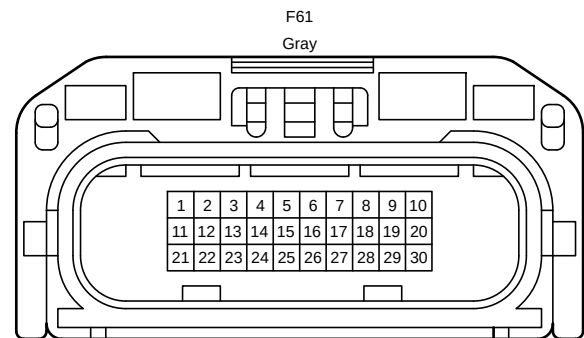 

90980-12712

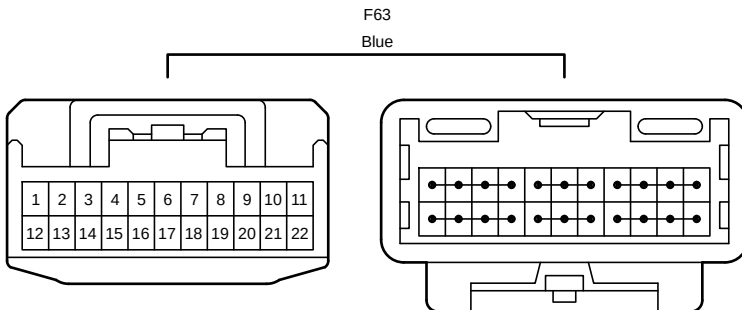 


90980-12372
(From Aug. 2016 Production)

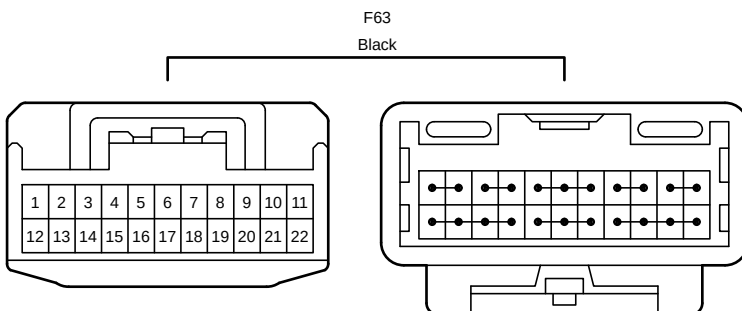 


90980-12372
(Before Aug. 2016 Production)

 
Position of Parts in Engine Compartment (RHD 2GR-FKS)

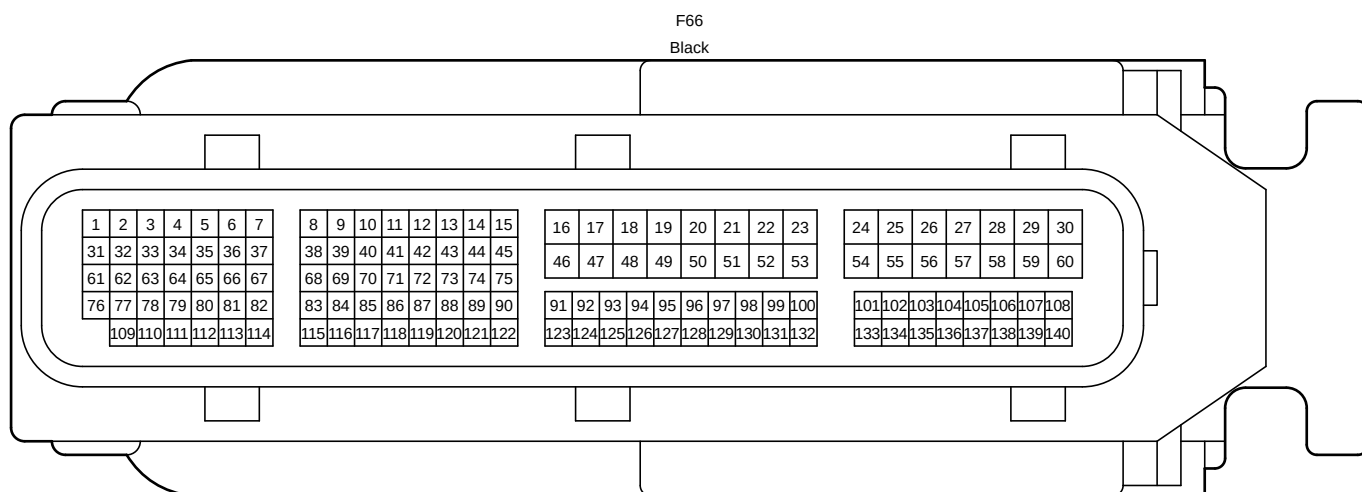


90980-12836

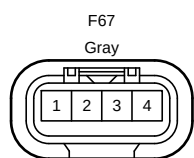 


90980-12A29

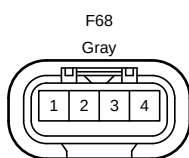 


90980-12A29
(8AR-FTS)

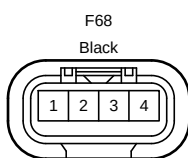 


90980-12A29
(2GR-FKS)

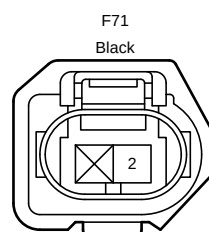 


90980-12A88

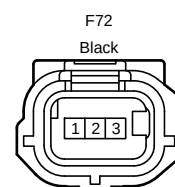 


90980-12353

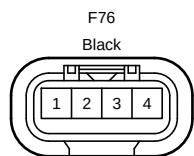 


90980-12A29
(8AR-FTS)

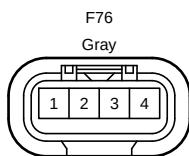 


90980-12A29
(2GR-FKS)

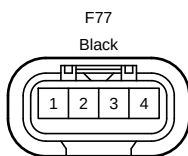 


90980-12A29

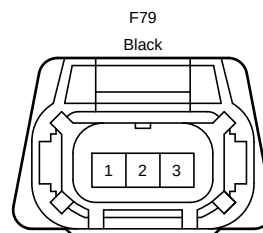 


90980-12A19

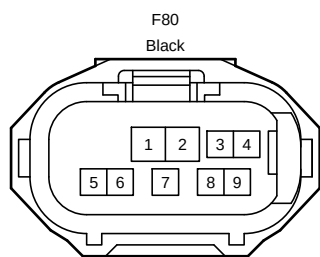 


90980-12A23

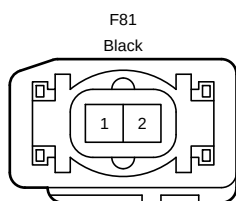 


90980-12747
(8AR-FTS)

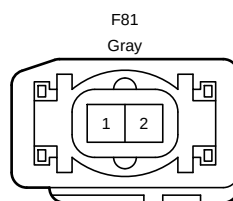 


90980-12747
(2GR-FKS)

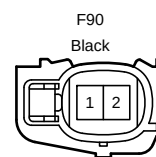 


90980-11875

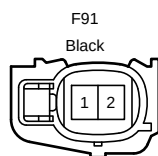 


90980-11875

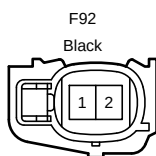 

90980-11875

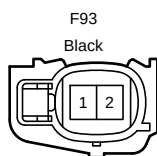 

90980-11875

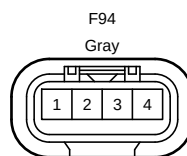 

90980-12A29

 


90980-12A29

Position of Parts in Engine Compartment (RHD 2GR-FKS)

F97


Black

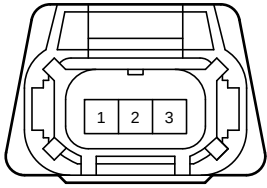

90980-12A19

F98

 Black

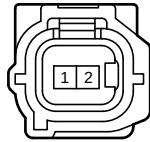

90980-12416

F99

 
Gray



90980-11166

F100

Black

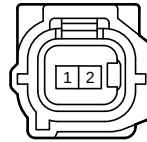

90980-12572