


Position of Parts in Engine Compartment (LHD 2GR-FSE)

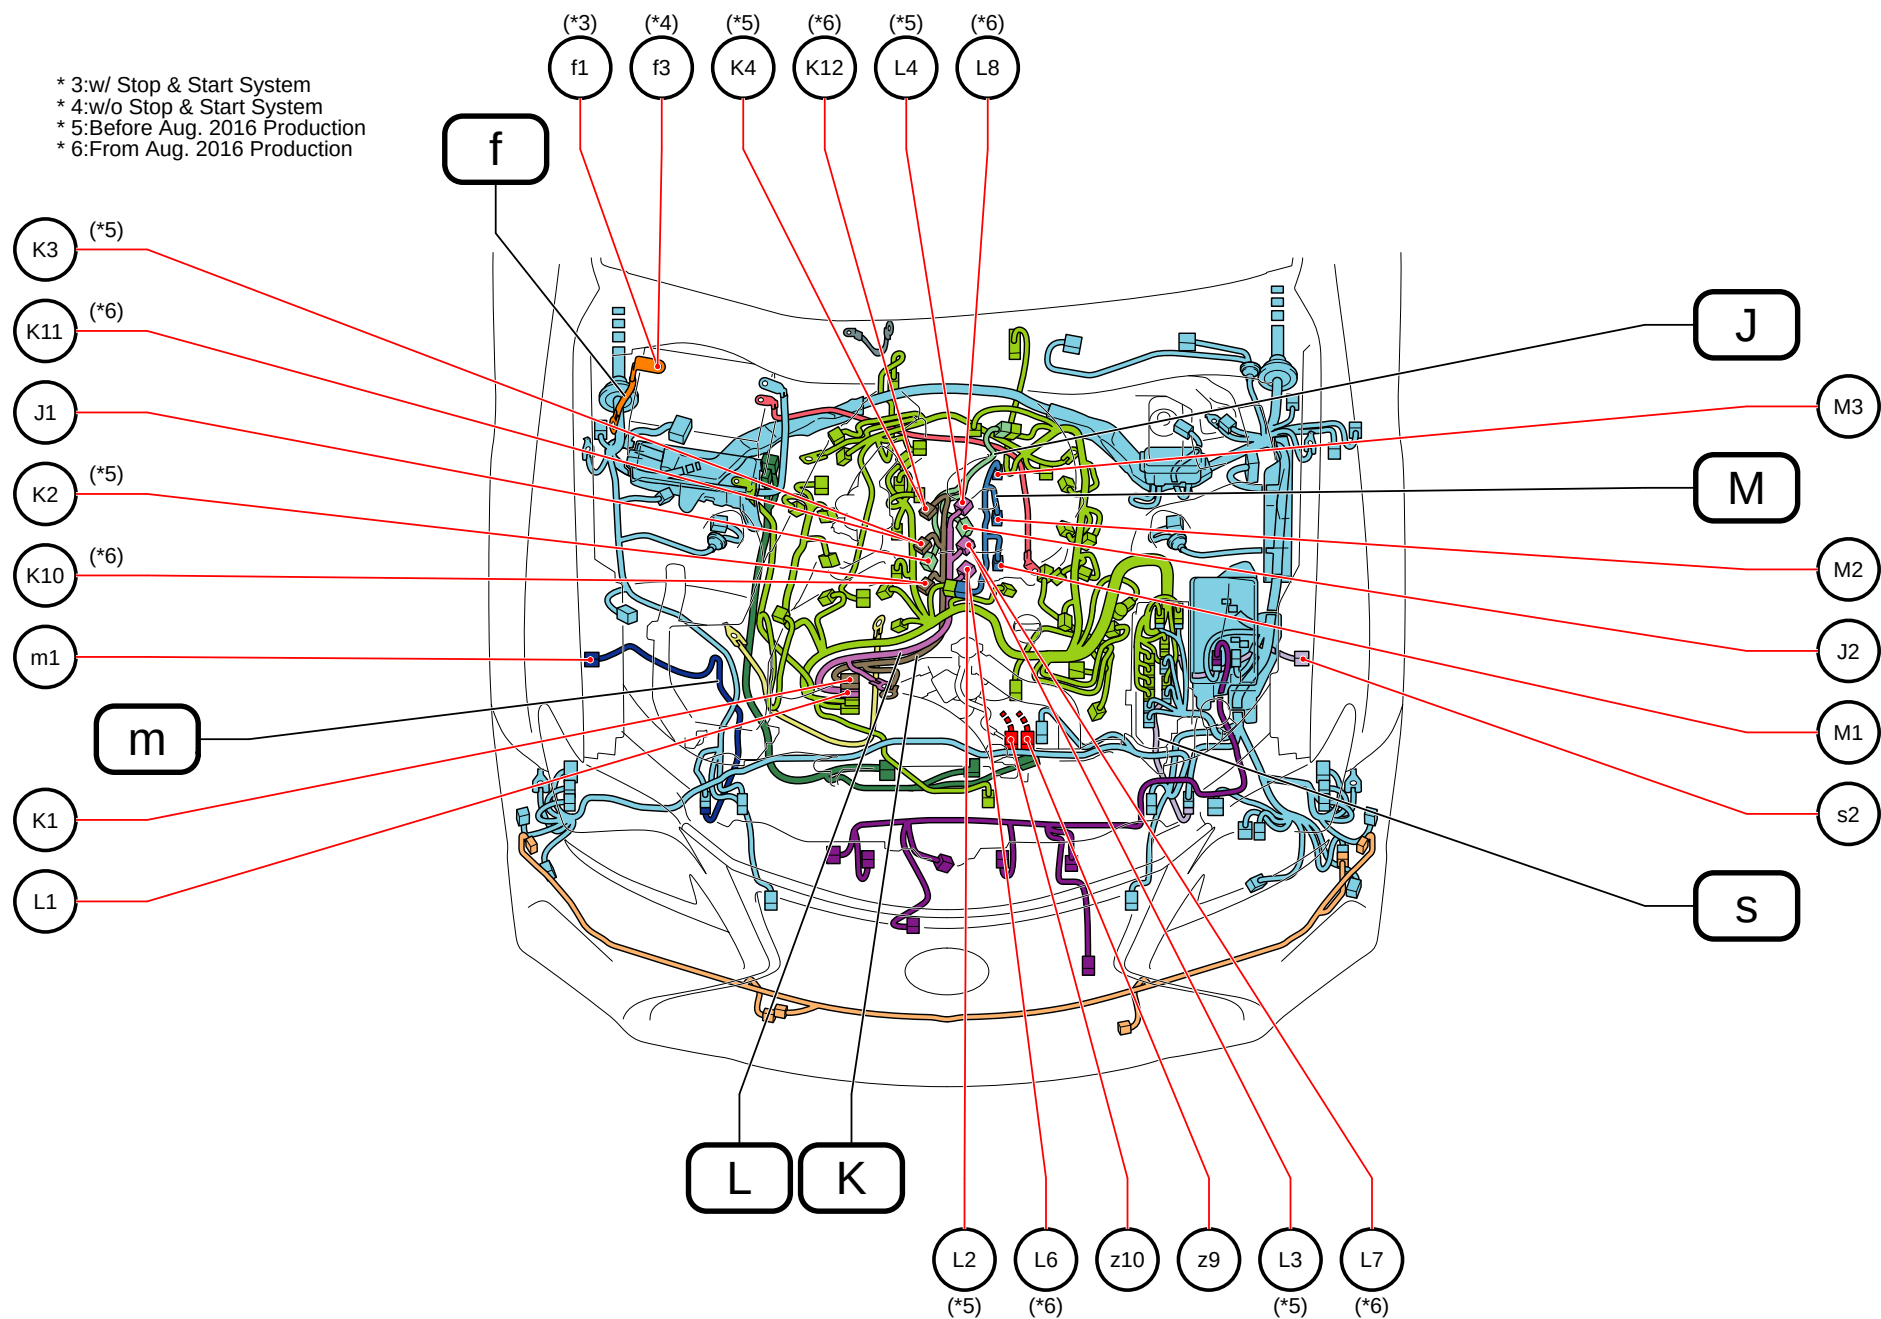

J1	Knock Control Sensor (Bank 1)
J2	Knock Control Sensor (Bank 2)
K1	Injector Driver
K2	Fuel Injector Assembly No. 1 (for Direct Injection)
K3	Fuel Injector Assembly No. 3 (for Direct Injection)
K4	Fuel Injector Assembly No. 5 (for Direct Injection)
K10	Fuel Injector Assembly No. 1 (for Direct Injection)
K11	Fuel Injector Assembly No. 3 (for Direct Injection)
K12	Fuel Injector Assembly No. 5 (for Direct Injection)
L1	Injector Driver
L2	Fuel Injector Assembly No. 2 (for Direct Injection)
L3	Fuel Injector Assembly No. 4 (for Direct Injection)
L4	Fuel Injector Assembly No. 6 (for Direct Injection)
L6	Fuel Injector Assembly No. 2 (for Direct Injection)
L7	Fuel Injector Assembly No. 4 (for Direct Injection)
L8	Fuel Injector Assembly No. 6 (for Direct Injection)
M1	Fuel Injector Assembly No. 2 (for Port Injection)
M2	Fuel Injector Assembly No. 4 (for Port Injection)
M3	Fuel Injector Assembly No. 6 (for Port Injection)
f1	Battery
f3	Battery
m1	Front Speed Sensor RH
s2	Front Speed Sensor LH
z9	Cooling Fan ECU , No. 2 Cooling Fan Motor
z10	Cooling Fan ECU , Cooling Fan Motor

Position of Parts in Engine Compartment (LHD 2GR-FSE)

