



Position of Parts in Engine Compartment (LHD 8AR-FTS)


* 5: Before Aug. 2016 Production
* 6: From Aug. 2016 Production

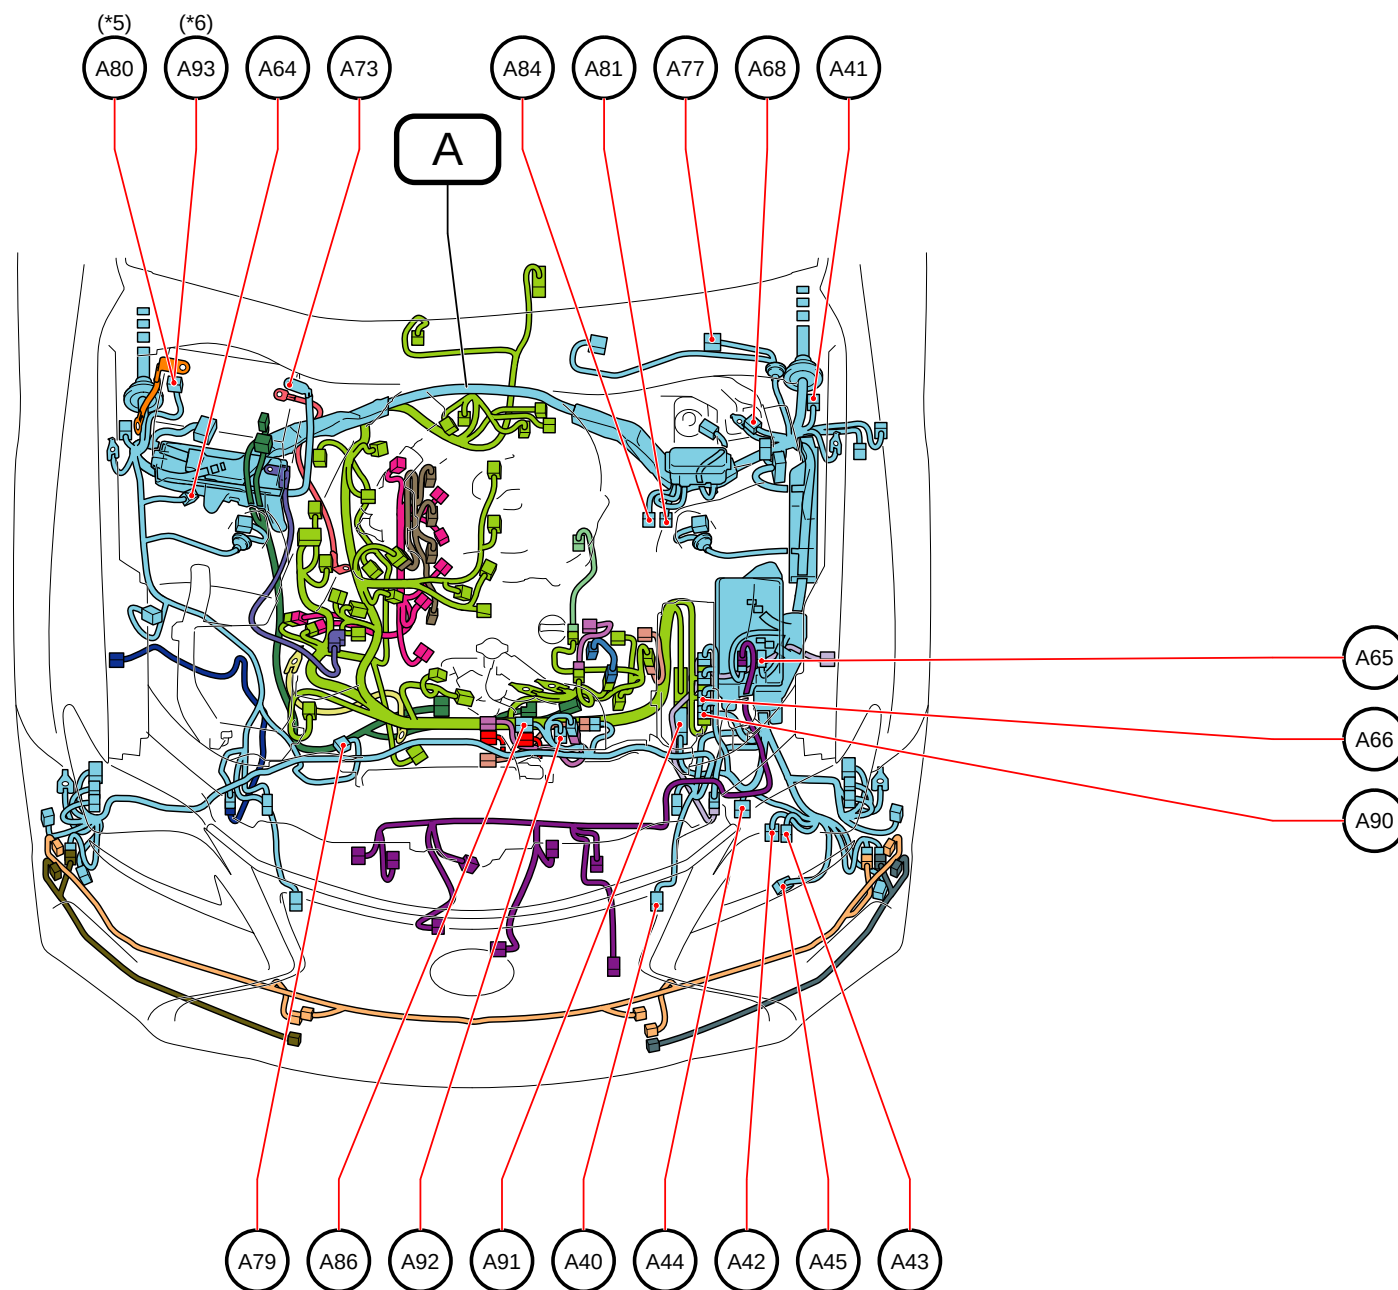


A40	Pedestrian Protection Sensor LH
A41	Pop Up Hood Lifter Assembly LH
A42	Windshield Washer Motor and Pump Assembly
A43	Level Warning Switch Assembly
A44	Headlight Cleaner Control Relay
A45	Headlight Cleaner Motor and Pump Assembly
A64	No. 1 Wiring Harness Condenser Assembly
A65	No. 1 Junction Connector
A66	No. 2 Junction Connector
A68	No. 1 Ground Junction Connector
A73	Battery
A77	Front Wiper Deicer (Windshield Glass)
A79	Electric Water Pump Assembly
A80	Battery Current Sensor Assembly
A81	Vacuum Warning Switch Assembly
A84	Brake Booster Pressure Sensor (Vacuum Sensor Assembly)
A86	No. 1 Cooling Fan ECU
A90	No. 14 Junction Connector
A91	ECM
A92	No. 1 Cooling Fan Motor
A93	Battery Current Sensor Assembly

Position of Parts in Engine Compartment (LHD 8AR-FTS)

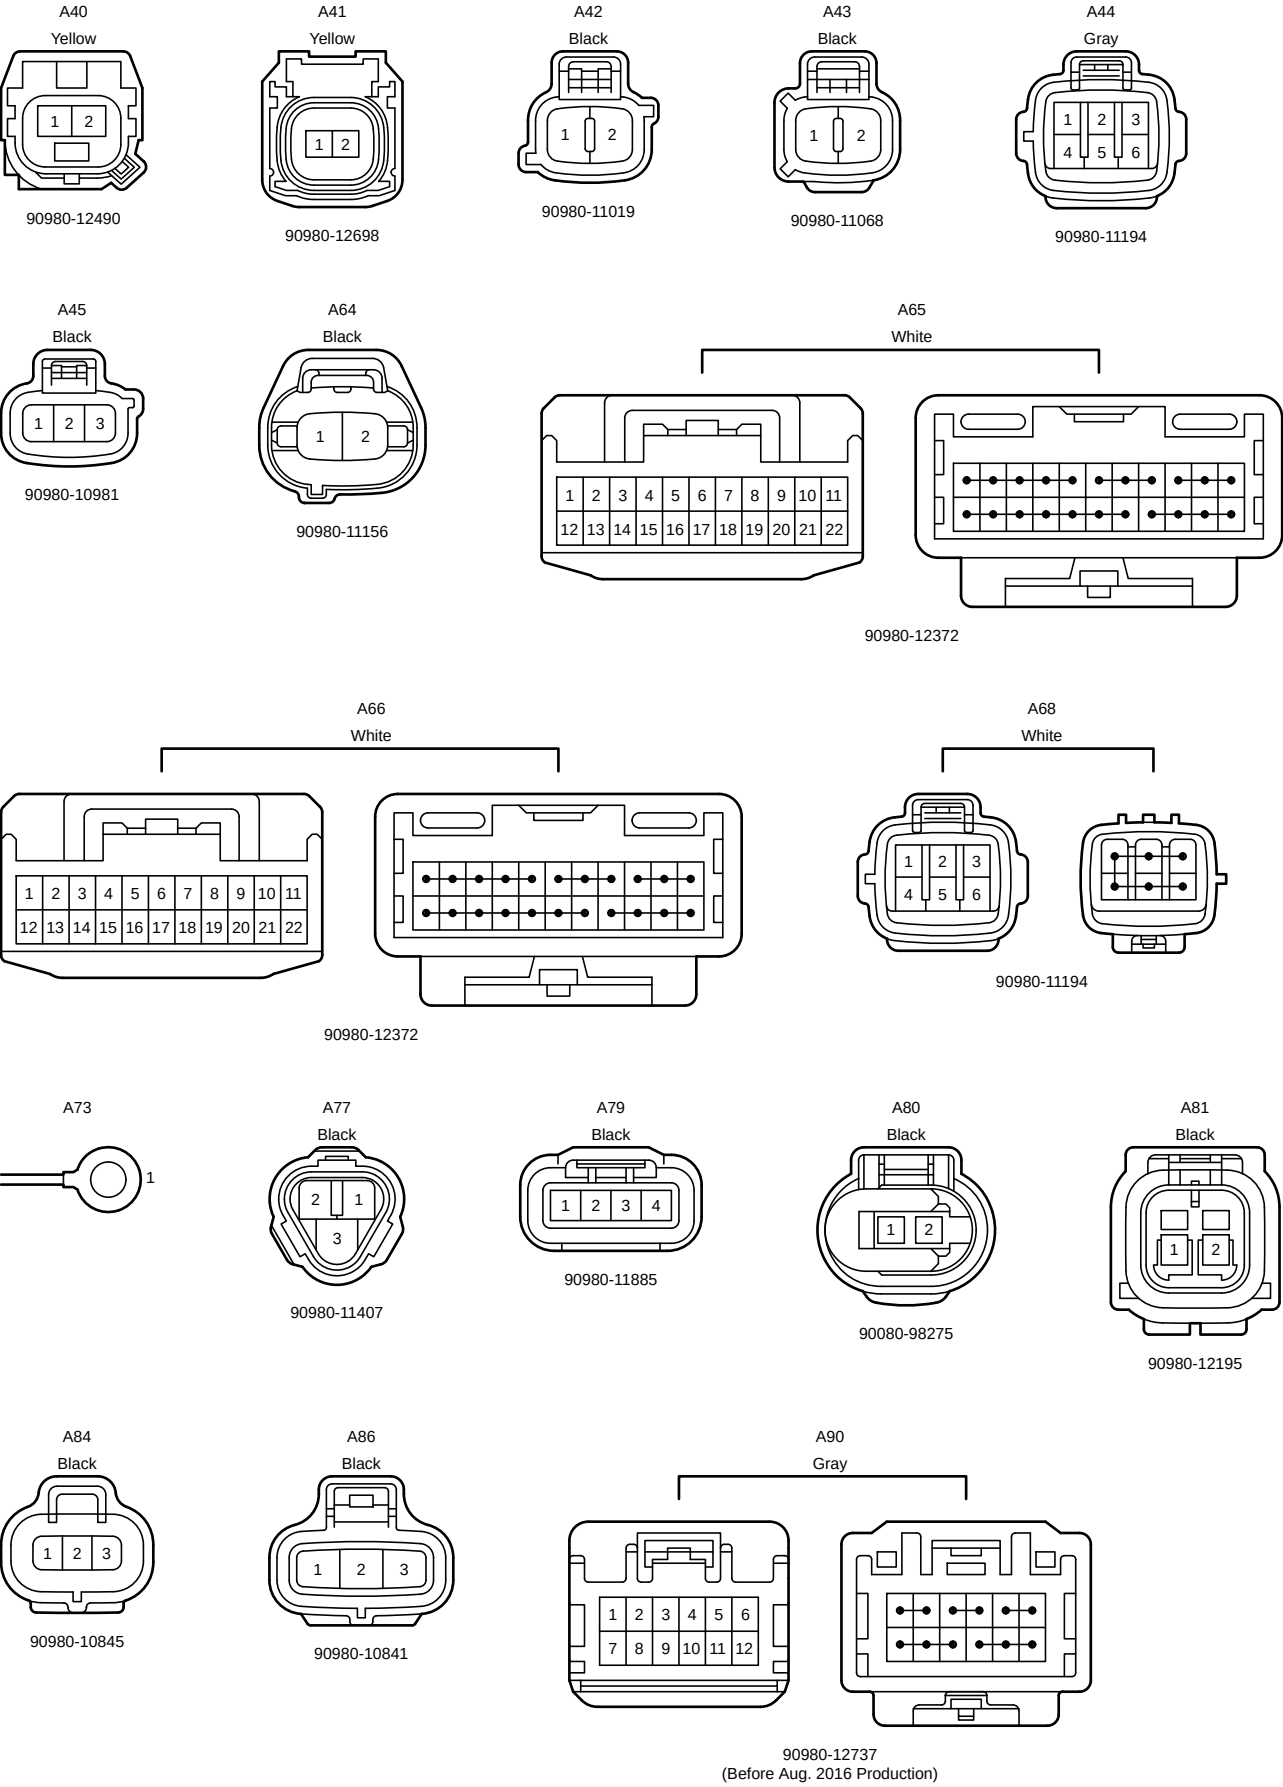


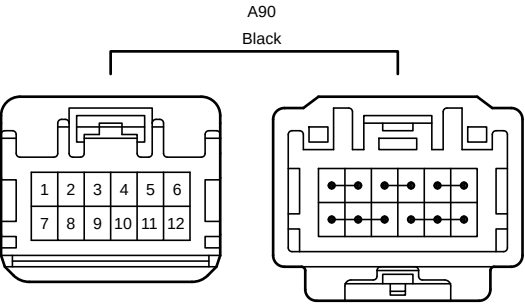


90980-12737
(From Aug. 2016 Production)

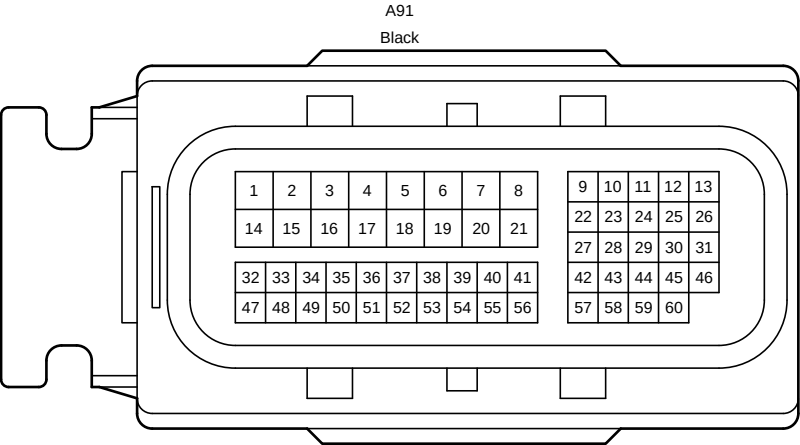

90980-12931

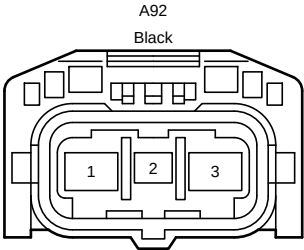

90980-12928

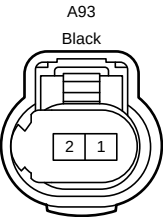

82824-30690