


# Position of Parts in Engine Compartment (LHD 8AR-FTS)

- \* 10: Before Oct. 2018 Production
- \* 11: From Oct. 2018 Production
- \* 12: w/ Adaptive Variable Suspension Before Oct. 2018 Production
- \* 13: w/o Adaptive Variable Suspension Before Oct. 2018 Production

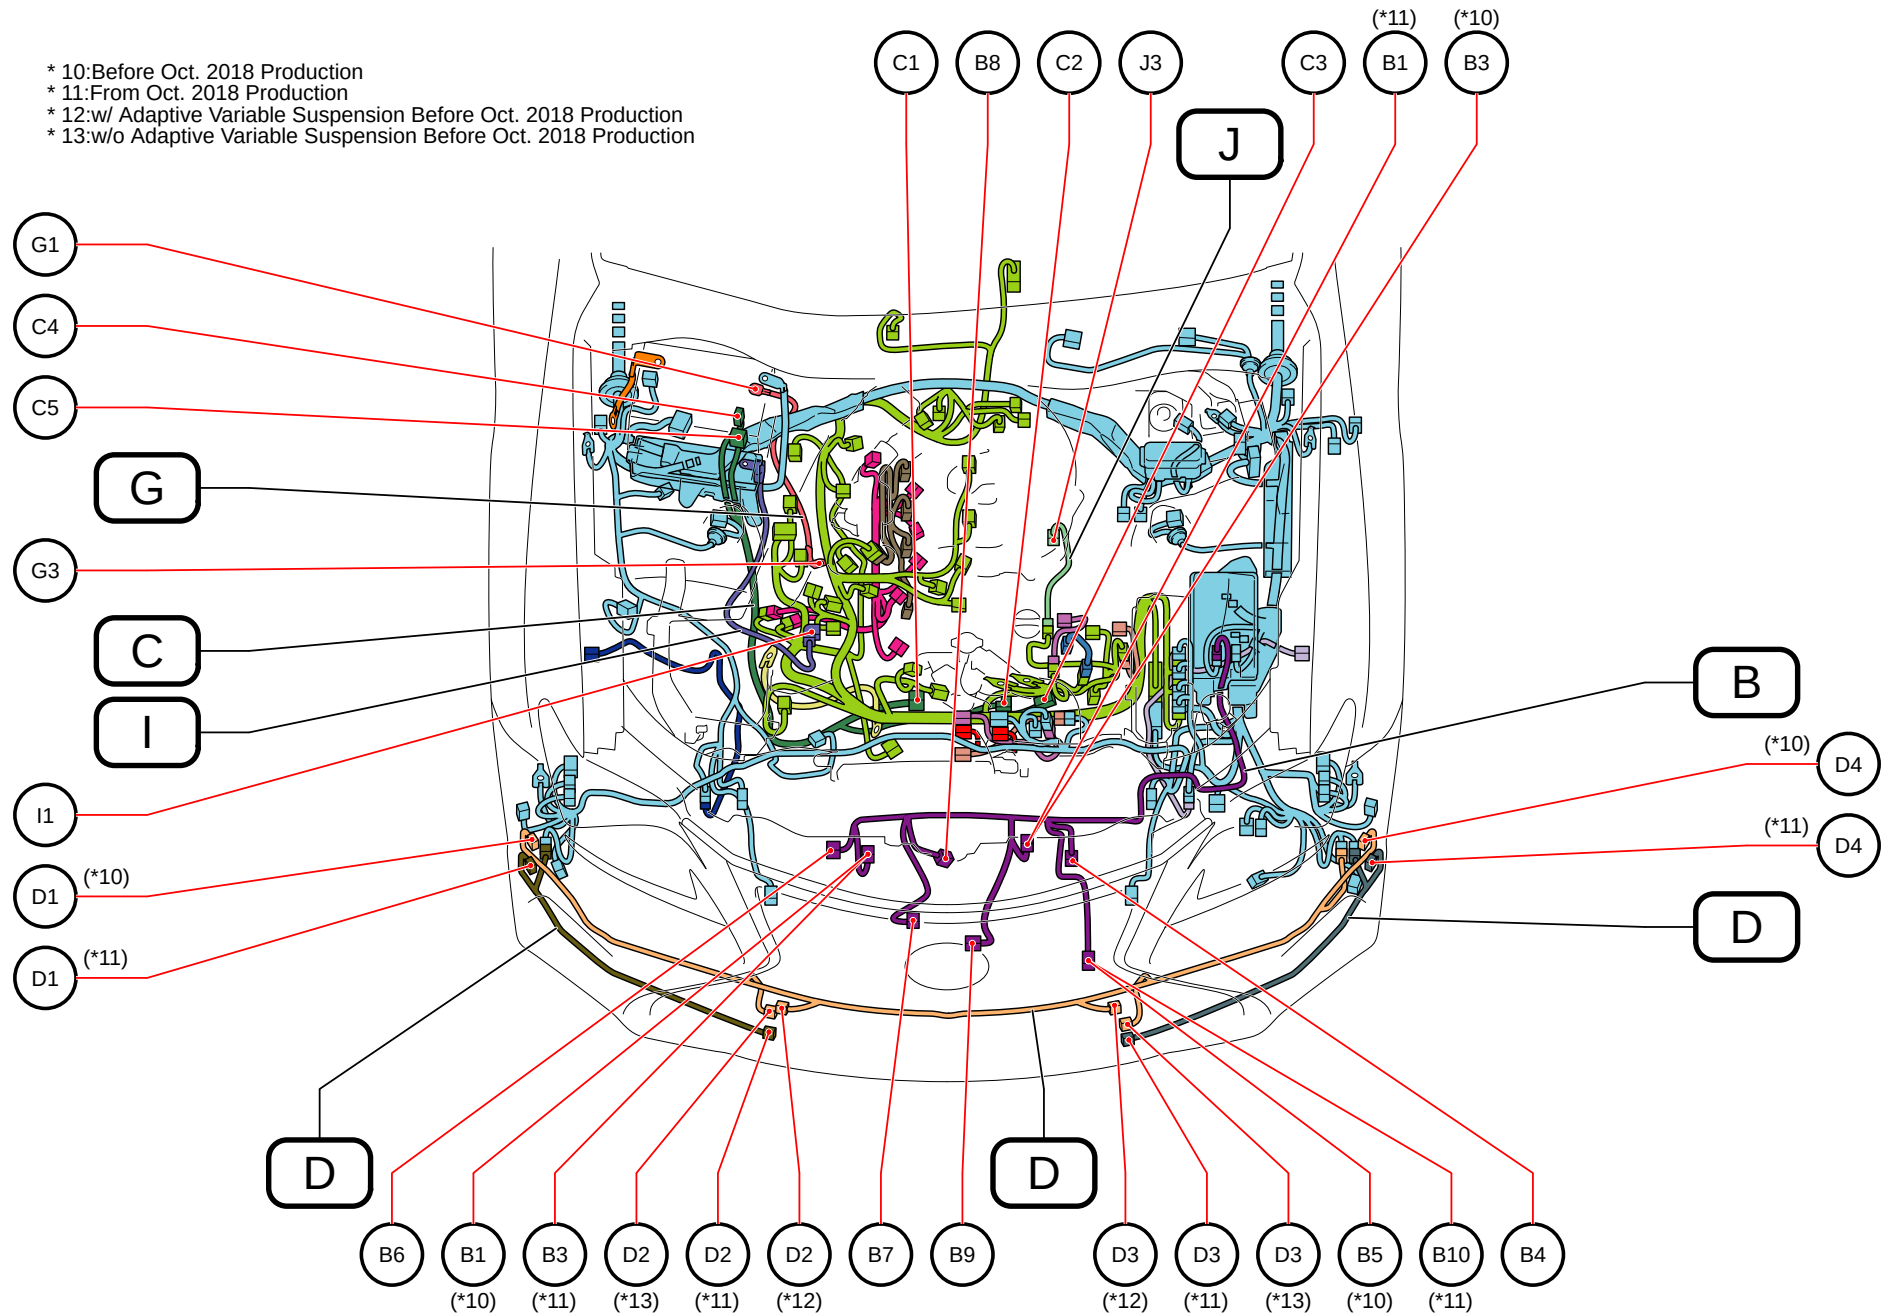

|     |                                                    |
|-----|----------------------------------------------------|
| B1  | High Pitched Horn Assembly                         |
| B3  | Low Pitched Horn Assembly                          |
| B4  | A/C Pressure Sensor (Liquid Tube Sub-Assembly A)   |
| B5  | Cooler (Ambient Temperature Sensor) Thermistor     |
| B6  | Smog Ventilation Sensor                            |
| B7  | Millimeter Wave Radar Sensor Assembly              |
| B8  | Hood Courtesy Switch (Hood Lock Assembly)          |
| B9  | Millimeter Wave Radar Sensor Assembly              |
| B10 | Cooler (Ambient Temperature Sensor) Thermistor     |
|     |                                                    |
| C1  | Power Steering Link Assembly                       |
| C2  | Power Steering Link Assembly                       |
| C3  | Power Steering Link Assembly                       |
| C4  | Power Steering ECU Assembly                        |
| C5  | Power Steering ECU Assembly                        |
|     |                                                    |
| D1  | Front No. 1 Ultrasonic Sensor RH                   |
| D2  | Front No. 2 Ultrasonic Sensor Center RH            |
| D3  | Front No. 2 Ultrasonic Sensor Center LH            |
| D4  | Front No. 1 Ultrasonic Sensor LH                   |
|     |                                                    |
| G1  | Battery                                            |
| G3  | Starter Assembly                                   |
|     |                                                    |
| I1  | Generator Assembly                                 |
|     |                                                    |
| J3  | Engine Oil Temperature Sensor (Temperature Sensor) |

Position of Parts in Engine Compartment (LHD 8AR-FTS)

