


Position of Parts in Engine Compartment (LHD 8AR-FTS)

* 3:w/ Stop & Start System
* 4:w/o Stop & Start System

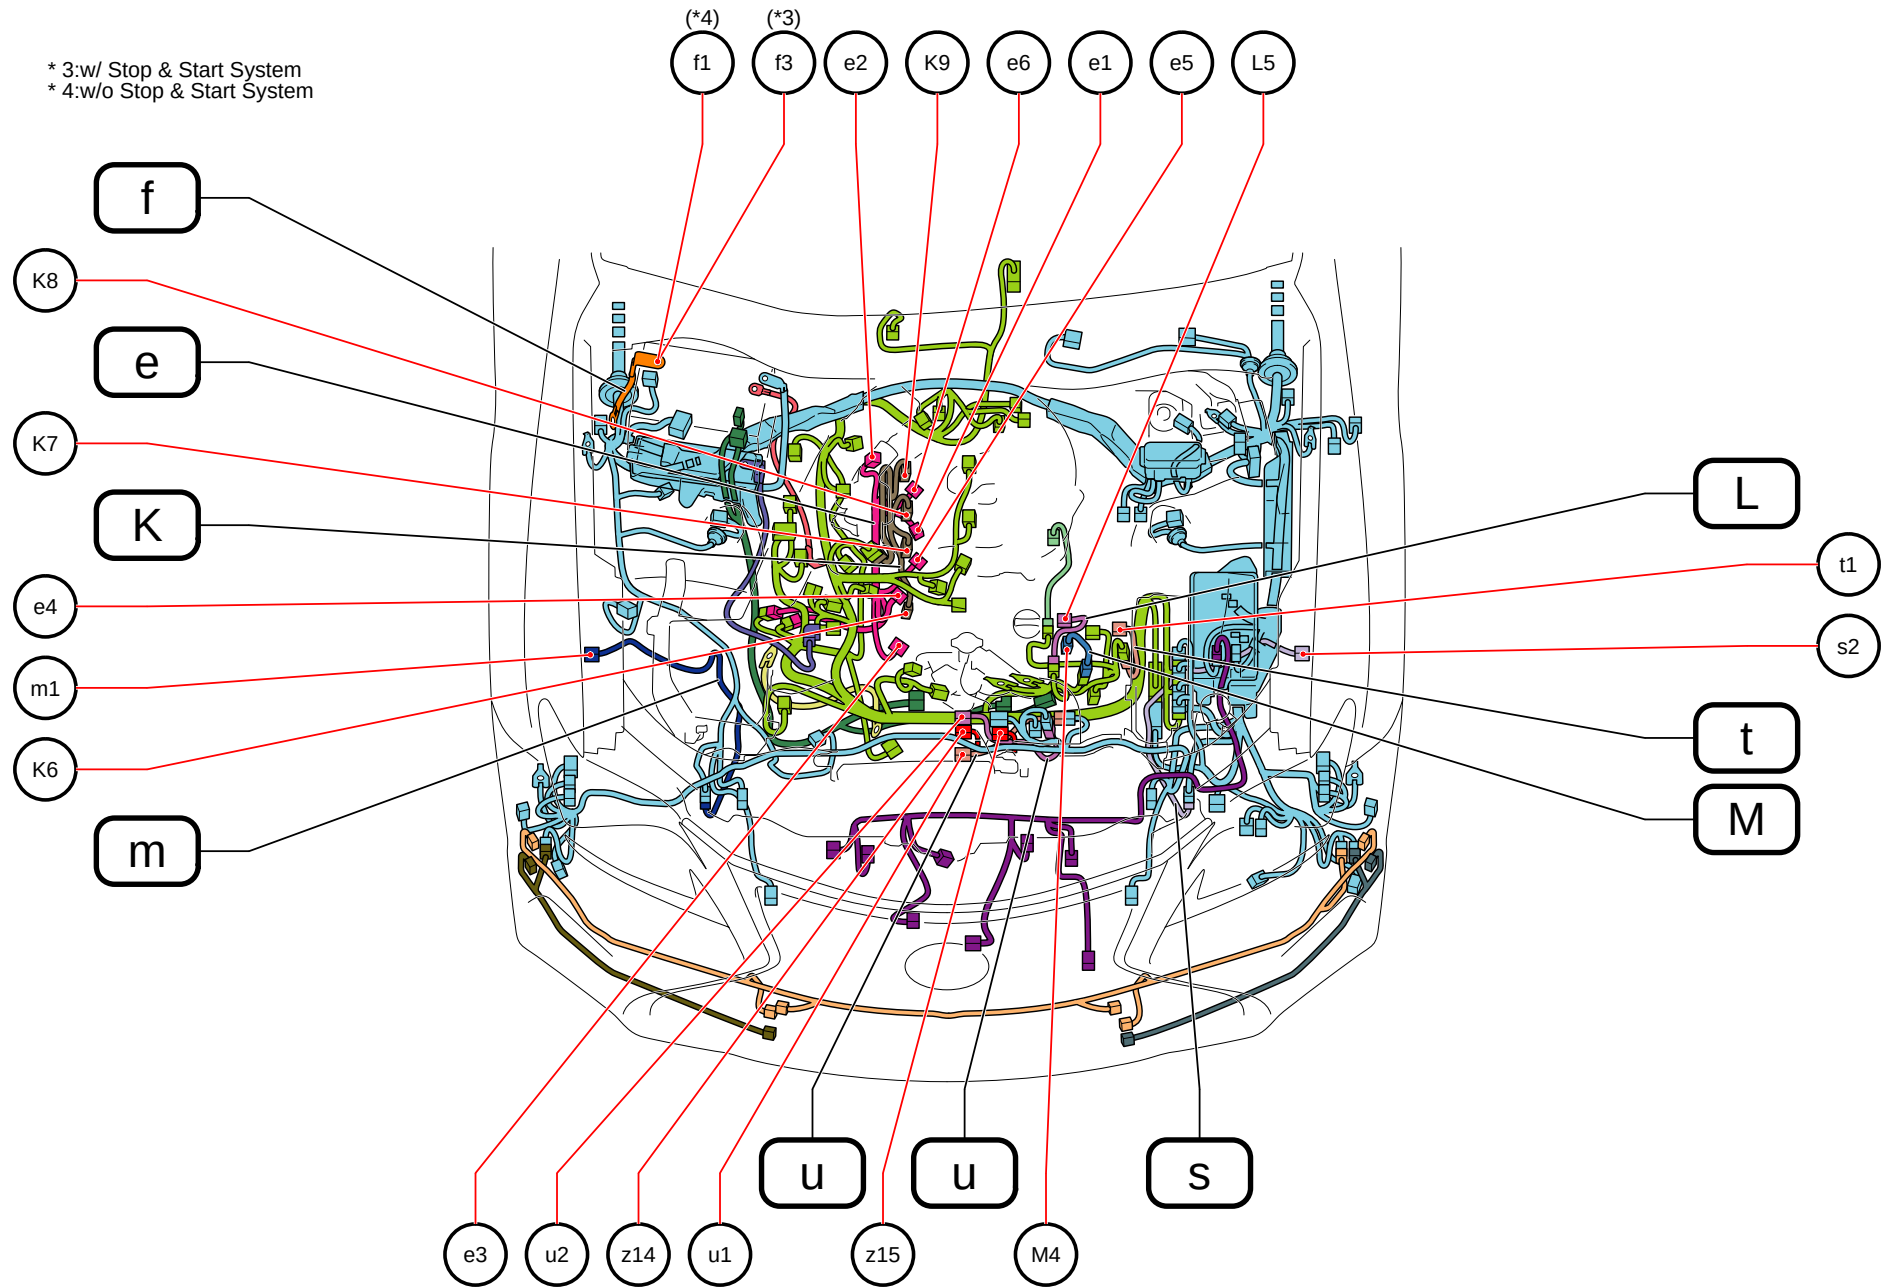

Position of Parts in Engine Compartment (LHD 8AR-FTS)

K6	Port Fuel Injector Assembly No. 1
K7	Port Fuel Injector Assembly No. 2
K8	Port Fuel Injector Assembly No. 3
K9	Port Fuel Injector Assembly No. 4
L5	Engine Oil Pressure Switch Assembly
M4	No. 2 Vacuum Switching Valve Assembly
e1	Knock Control Sensor (Bank 1)
e2	Fuel Pressure Sensor (High Pressure Side)
e3	Direct Fuel Injector Assembly No. 1
e4	Direct Fuel Injector Assembly No. 2
e5	Direct Fuel Injector Assembly No. 3
e6	Direct Fuel Injector Assembly No. 4
f1	Battery
f3	Battery
m1	Front Speed Sensor RH
s2	Front Speed Sensor LH
t1	Oil Pressure Switching Valve Assembly
u1	No. 2 Cooling Fan Motor
u2	No. 2 Cooling Fan ECU
z14	No. 1 Cooling Fan Motor
z15	No. 2 Cooling Fan Motor

Position of Parts in Engine Compartment (LHD 8AR-FTS)

