




















Position of Parts in Body (LHD)

- * 1:10 Speaker
- * 2:17 Speaker
- * 5:Before Oct. 2015 Production
- * 6:From Oct. 2015 Production
- * 7:Refer to the Service Bulletin for the installation position of the parts.
- * 8:Before Aug. 2016 Production
- * 9:From Aug. 2016 Production
- * 10:Before Nov. 2017 Production
- * 11:From Nov. 2017 Production

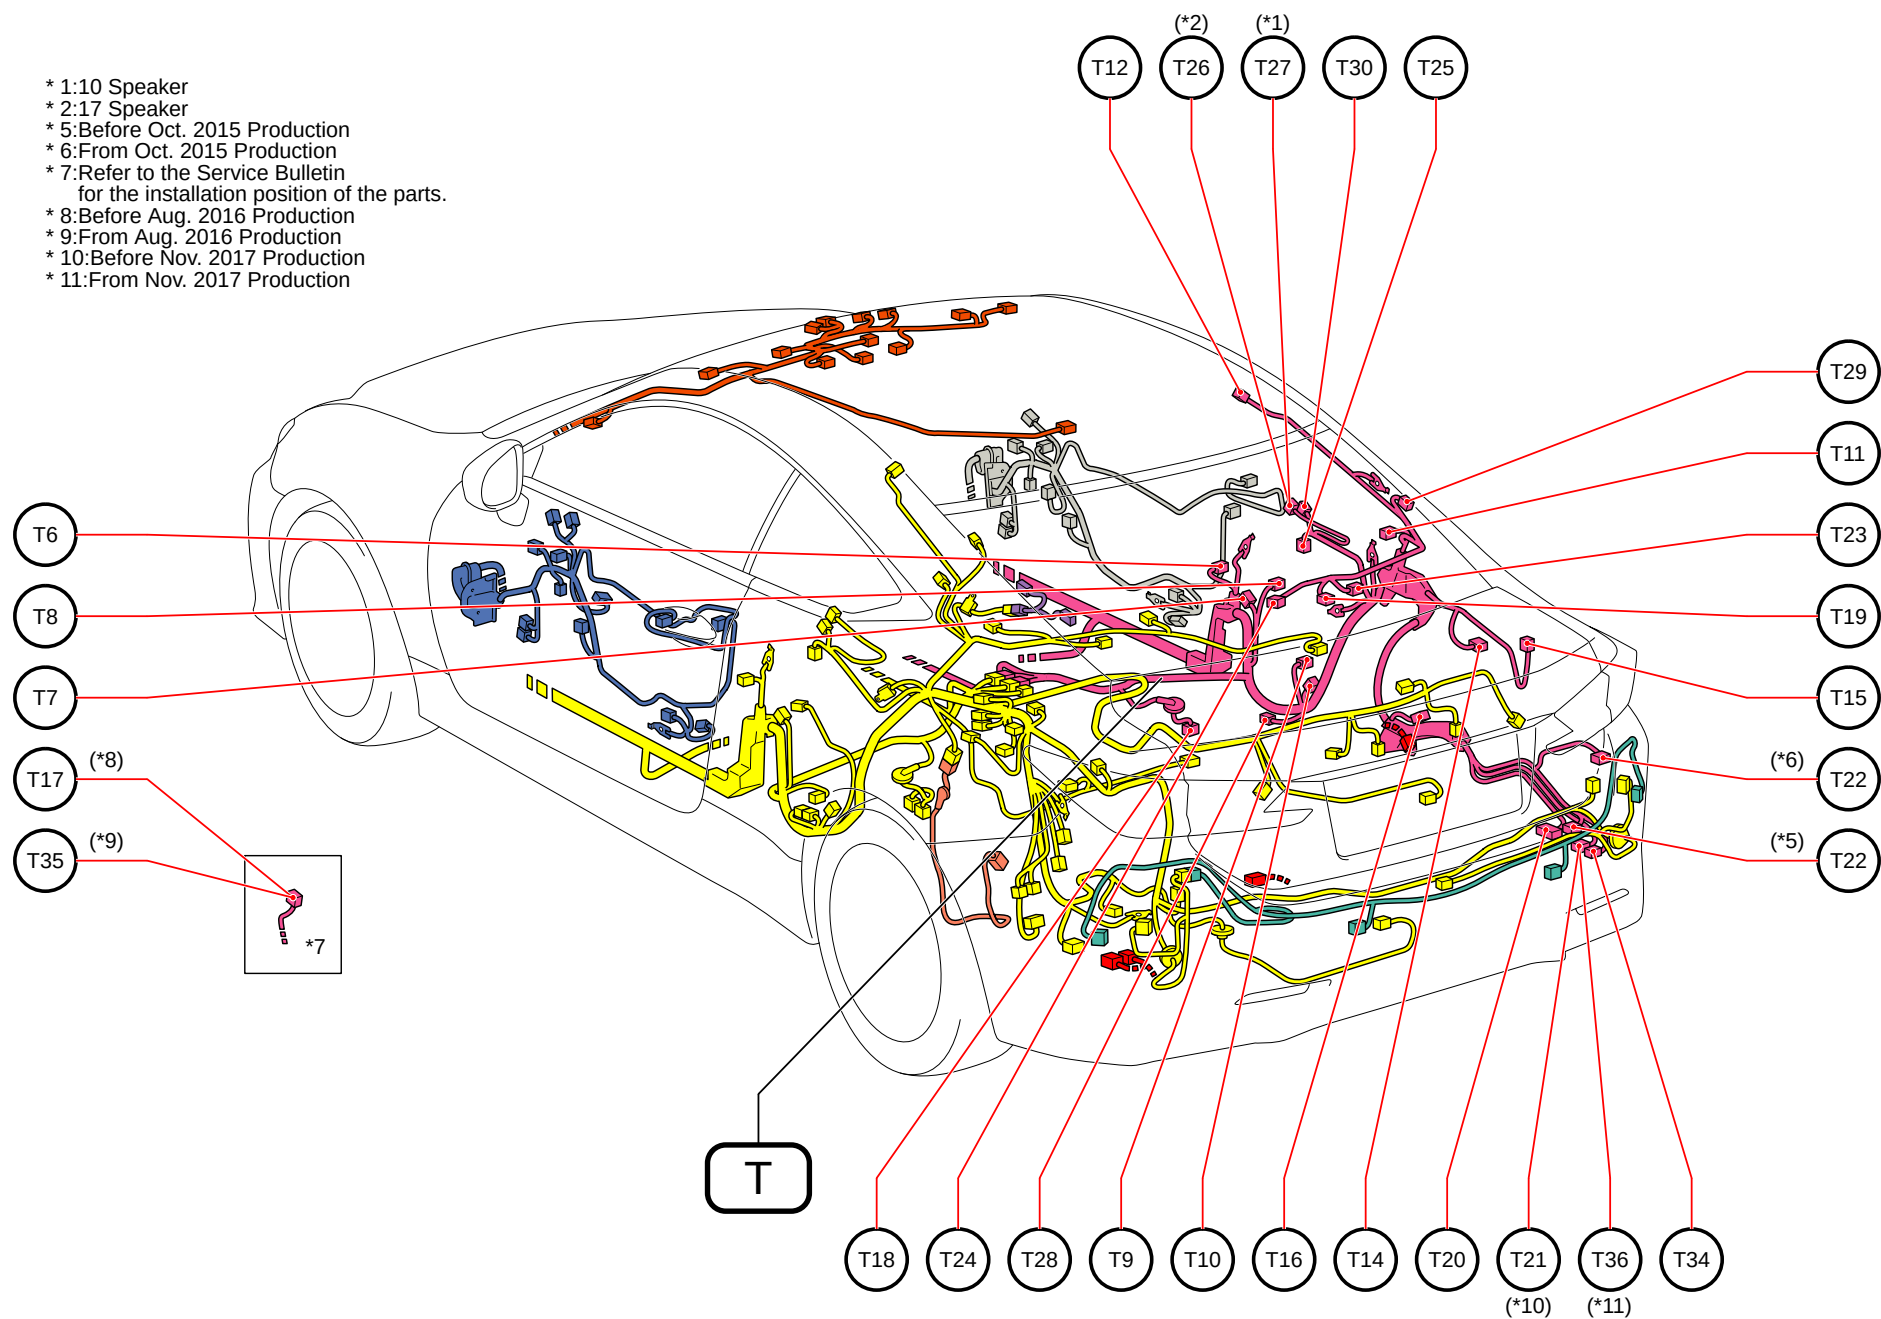

T6	Front Door Courtesy Light Switch Assembly RH
T7	Side Airbag Sensor Assembly RH
T8	Front Seat Outer Belt Assembly RH
T9	Front Seat Outer Belt Assembly RH
T10	Rear Airbag Sensor RH
T11	Rear Seat 3 Point Type Outer Belt Assembly RH
T12	Curtain Shield Airbag Assembly RH
T14	Rear Absorber Control Actuator RH
T15	Rear Acceleration Sensor RH
T16	Rear Speed Sensor RH
T17	Theft Warning Siren Assembly
T18	Fuel Tank Vent Tube Assembly
T19	Smart Door Control Receiver Assembly
T20	Stereo Component Amplifier Assembly
T21	Stereo Component Amplifier Assembly
T22	Option Connector (Extension Module)
T23	Rear Header Speaker Assembly RH
T24	Rear No. 3 Speaker Assembly
T25	Rear Speaker Assembly RH
T26	Rear No. 2 Speaker Assembly RH
T27	Short Connector
T28	Diode (Front Seat Outer Belt Assembly RH)
T29	Rear Window Defogger (Back Window Glass)
T30	Glass Breakage Sensor (Quarter Window Assembly RH)
T34	Stereo Component Amplifier Assembly
T35	Theft Warning Siren Assembly
T36	Stereo Component Amplifier Assembly

    Position of Parts in Body (LHD)

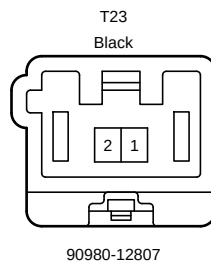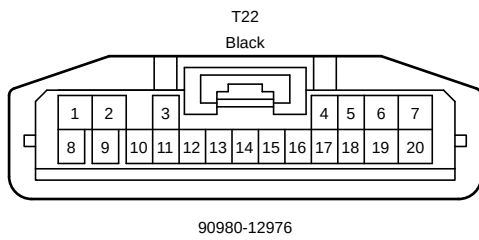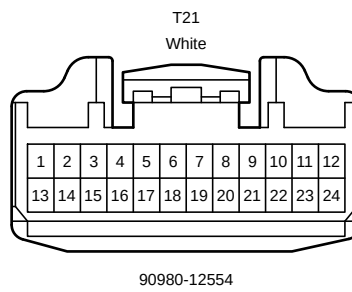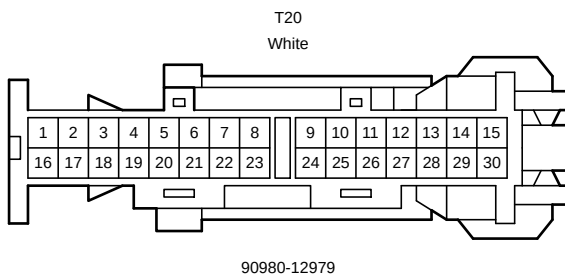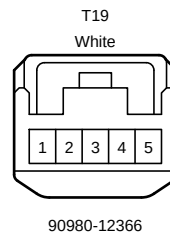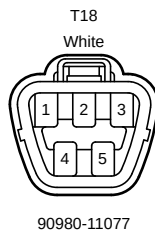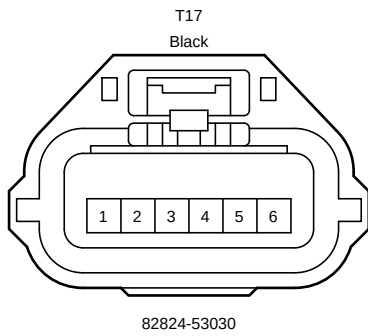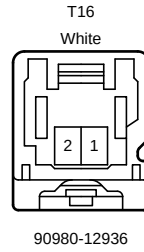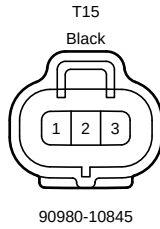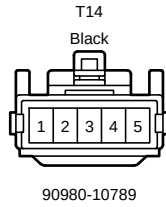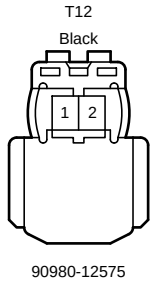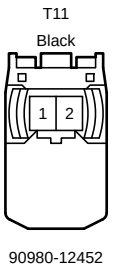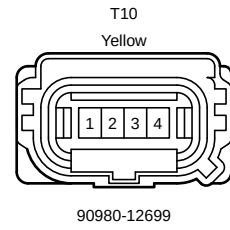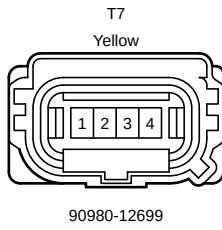

Position of Parts in Body (LHD)

