

























Position of Parts in Body (RHD)

- * 1:10 Speaker
- * 2:17 Speaker
- * 3:ECE-R64 Type
- * 4:FMVSS138 Type

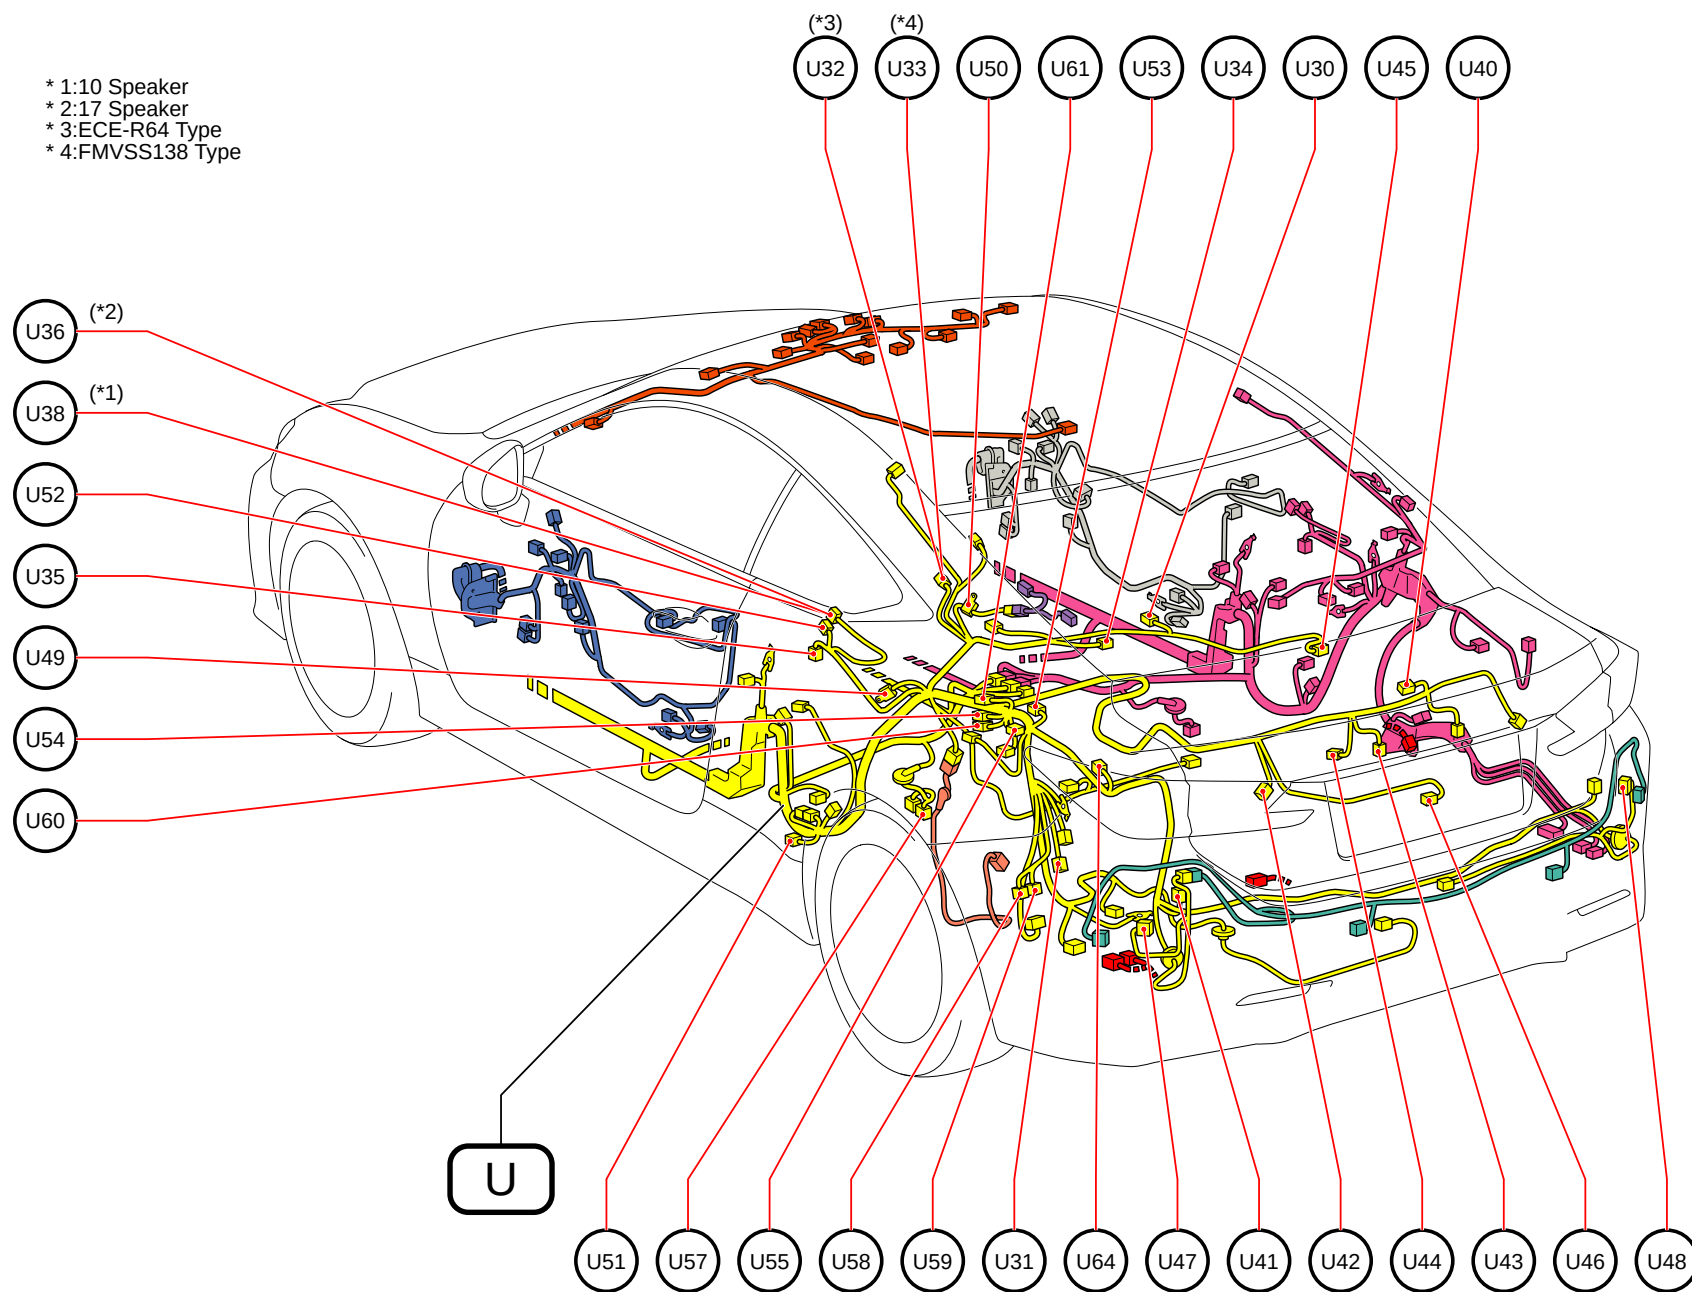

U30	Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
U31	Rear Tire Pressure Monitor Initiator
U32	Tire Pressure Warning ECU and Receiver (Tire Pressure Monitor Receiver Assembly)
U33	Tire Pressure Warning ECU and Receiver (Electrical Key and Tire Pressure Monitoring System Receiver Assembly)
U34	Rear Header Speaker Assembly LH
U35	Rear Speaker Assembly LH
U36	Rear No. 2 Speaker Assembly LH
U38	Short Connector
U40	Luggage Electrical Key Switch
U41	Rear Combination Light Assembly LH
U42	Rear Light Assembly LH
U43	License Plate Light Assembly LH
U44	Door Unlock Switch Sub-Assembly
U45	No. 1 Luggage Compartment Light Assembly
U46	Luggage Compartment Door Lock Assembly
U47	Blind Spot Monitor Sensor LH
U48	Blind Spot Monitor Sensor RH
U49	Radio Setting Condenser (Center Stop Light Assembly and No. 1 Luggage Compartment Light Assembly)
U50	Radio Setting Condenser (Rear Window Defogger)
U51	Diode (Front Seat Outer Belt Assembly LH)
U52	Glass Breakage Sensor (Quarter Window Assembly LH)
U53	No. 9 CAN Junction Connector
U54	No. 10 Junction Connector
U55	No. 3 CAN Junction Terminal
U57	Fuel Suction Tube with Pump and Gauge Assembly
U58	Fuel Pump Control ECU
U59	Fuel Pump Control ECU
U60	No. 17 CAN Junction Connector
U61	No. 18 CAN Junction Connector
U64	Security Warning Relay

     Position of Parts in Body (RHD)

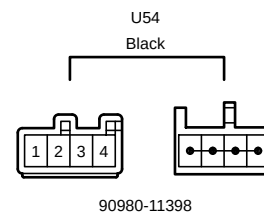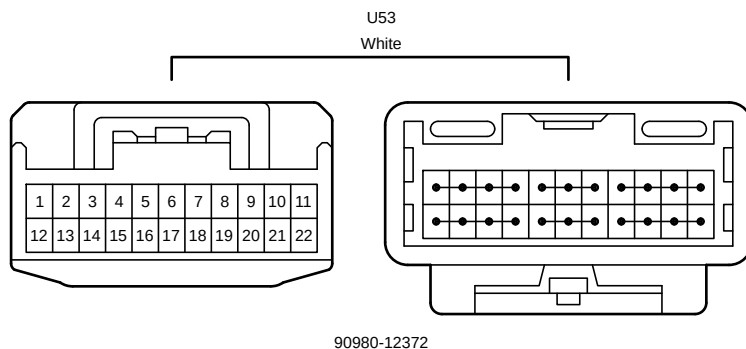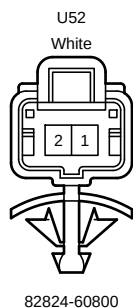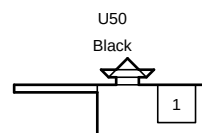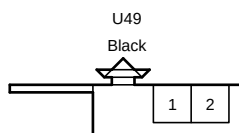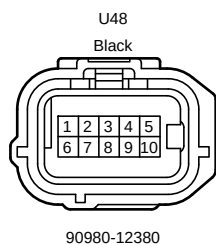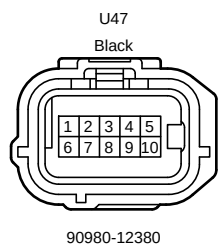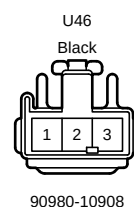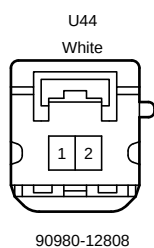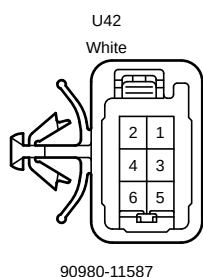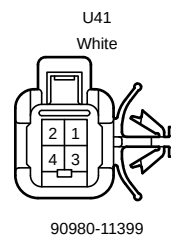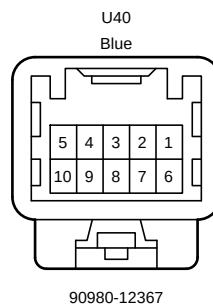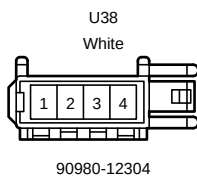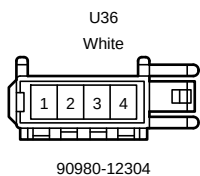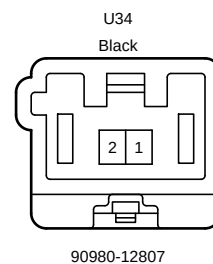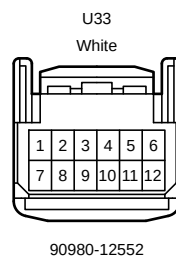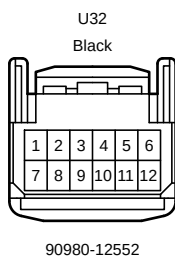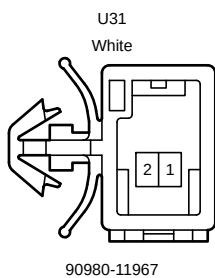

Position of Parts in Body (RHD)

