



Position of Parts in Instrument Panel (LHD)

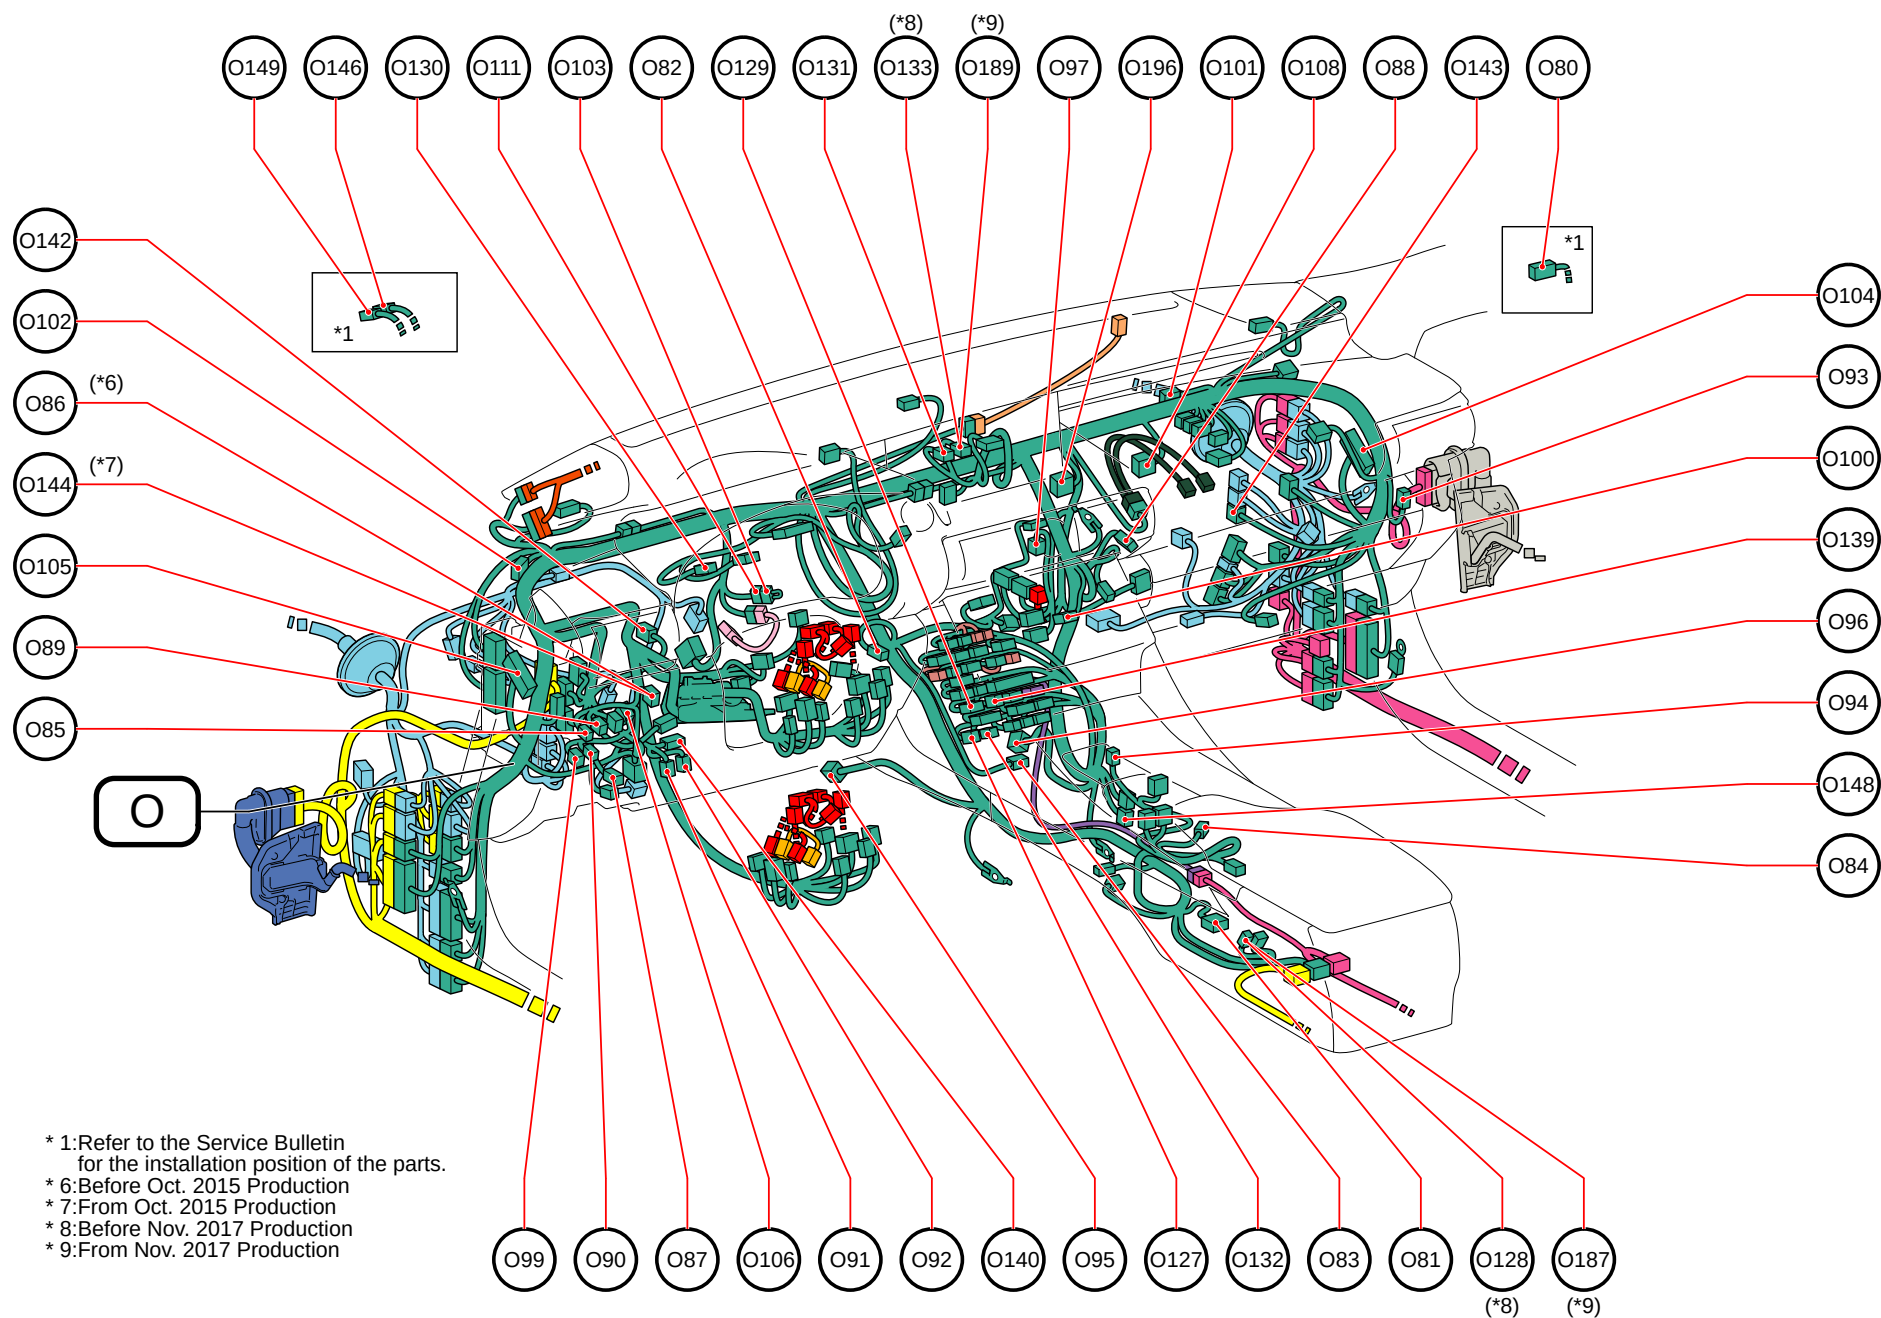


Position of Parts in Instrument Panel (LHD)

O80	ID Code Box
O81	Yaw Rate Sensor
O82	Cooler (Room Temperature Sensor) Thermistor
O83	Front No. 1 Indoor Electrical Key Antenna Assembly
O84	Shift Position Indicator
O85	Auto High Beam Switch
O86	Trip Switch
O87	Luggage Door Opening Switch Assembly
O88	Luggage Door Opening Cancel Switch Assembly
O89	Front Wiper Deicer Switch
O90	Back Sonar or Clearance Sonar Switch Assembly
O91	Tire Pressure Warning Reset Switch (Tire Pressure Warning Switch)
O92	Pre-Crash System Cancel Switch Assembly
O93	Airbag Cut Off Switch Cylinder Sub-Assembly
O94	Refreshing Seat Switch
O95	No. 2 Oxygen Sensor (Bank 2 Sensor 2)
O96	Oxygen Sensor (Bank 1 Sensor 2)
O97	Option Connector (Remote Engine Starter)
O99	Blind Spot Monitor Main Switch (Warning Canceling Switch Assembly)
O100	No. 6 Junction Connector
O101	No. 1 CAN Junction Terminal
O102	No. 2 CAN Junction Terminal
O103	Short Connector
O104	No. 1 CAN Junction Connector
O105	No. 2 CAN Junction Connector
O106	No. 5 CAN Junction Connector
O108	No. 7 CAN Junction Connector
O111	Short Connector
O127	Radio Receiver Assembly
O128	No. 1 Stereo Jack Adapter Assembly
O129	Radio Receiver Assembly
O130	Combination Meter Assembly
O131	Multi-Display Assembly
O132	Radio Receiver Assembly
O133	Multi-Display Assembly
O139	Radio Receiver Assembly
O140	Front Foot Light LH (No. 1 Interior Illumination Light Assembly LH)
O142	Engine Stop & Start Solenoid Filter
O143	Engine Stop and Start ECU
O144	Trip Switch
O146	Telematics Transceiver
O148	Antenna Cord Sub-Assembly
O149	Telematics Transceiver
O187	No. 1 Stereo Jack Adapter Assembly
O189	Multi-Display Assembly
O196	No. 15 CAN Junction Connector


Position of Parts in Instrument Panel (LHD)

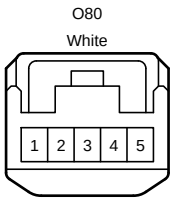


90980-12366

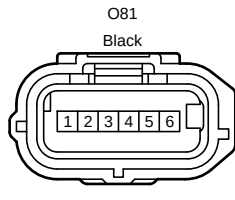


90980-12303

 


90980-11918

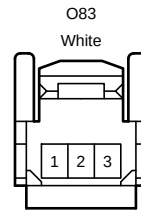


90980-12795

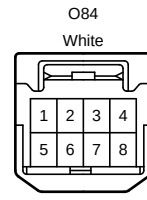


90980-12910

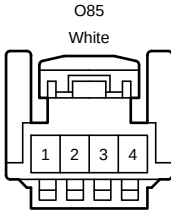


90980-12876

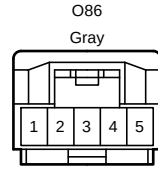


90980-11909

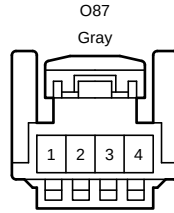


90980-12876

 


90980-10825

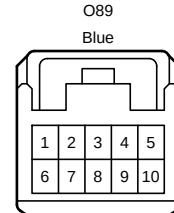


90980-12368

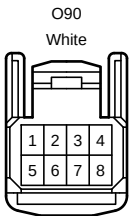


90980-12551

 


90980-10906

 

90980-10860

 

90980-12063

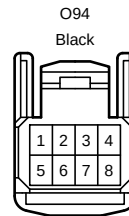


90980-12551




90980-11028




90980-11028

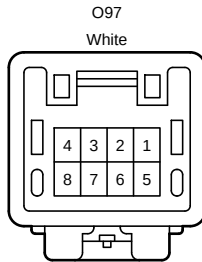


90980-12734

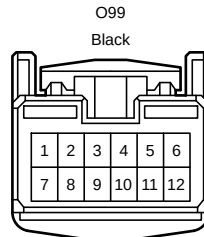


90980-12614

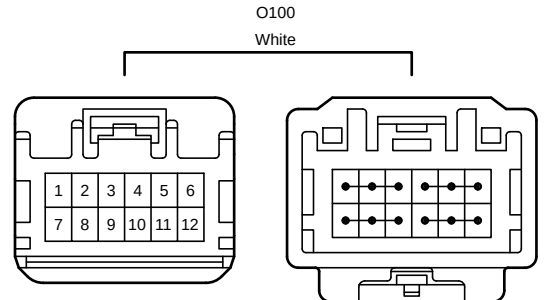


90980-12737

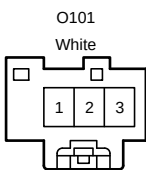

82824-30470

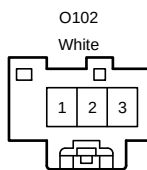



82824-30470

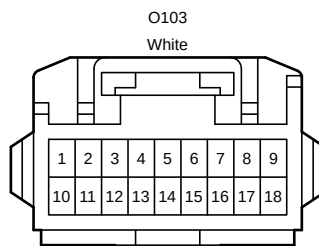

82824-53070



Position of Parts in Instrument Panel (LHD)

O104
White

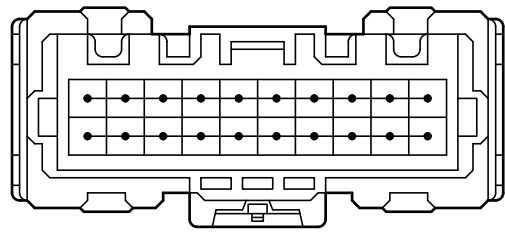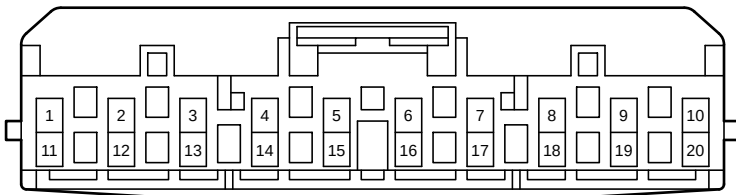



90980-12A58

O105
White

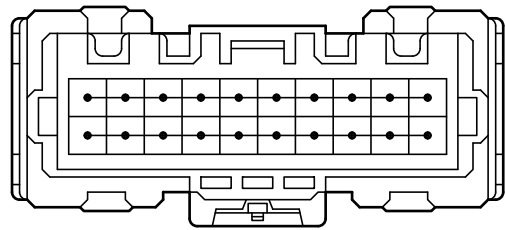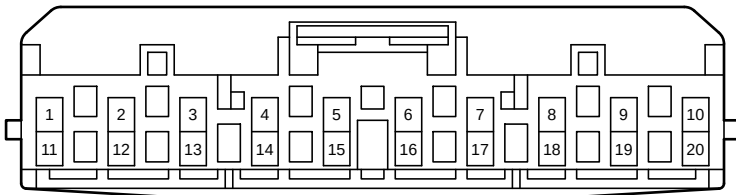



90980-12A58

O106
Black

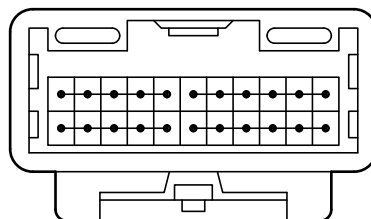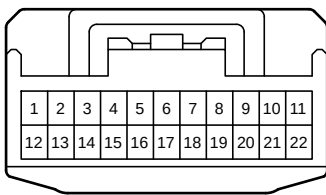


90980-12372

O108
Black

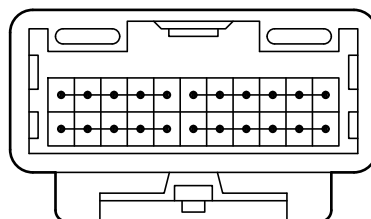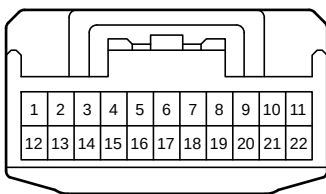


90980-12372

O111
White

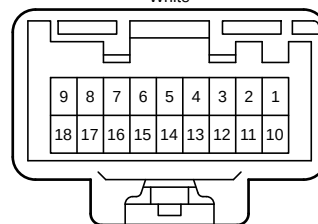


82824-53060


Position of Parts in Instrument Panel (LHD)

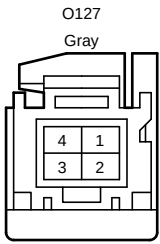


90980-12A52

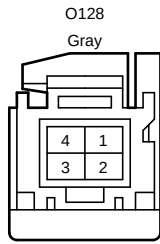


90980-12A52

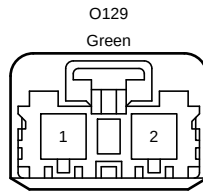


90980-12A73

 


90980-12593

 


90980-12593

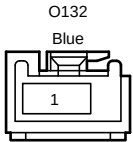


90980-12957

 


90980-12593

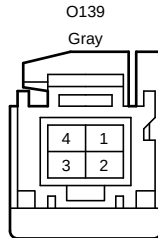


90980-12A52

 


90980-11148

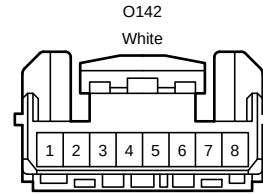


90980-12558

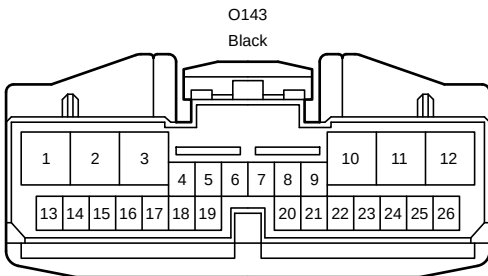


82824-12510

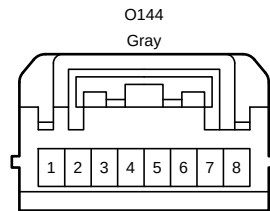

90980-12550

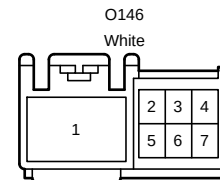


90980-12602

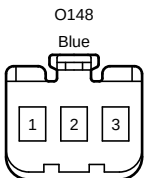


90980-50036



 
90980-50022



90980-12C98

 

90980-12C80

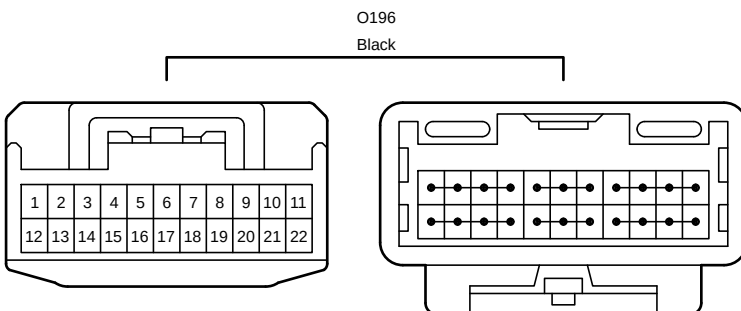

90980-12372