
 
 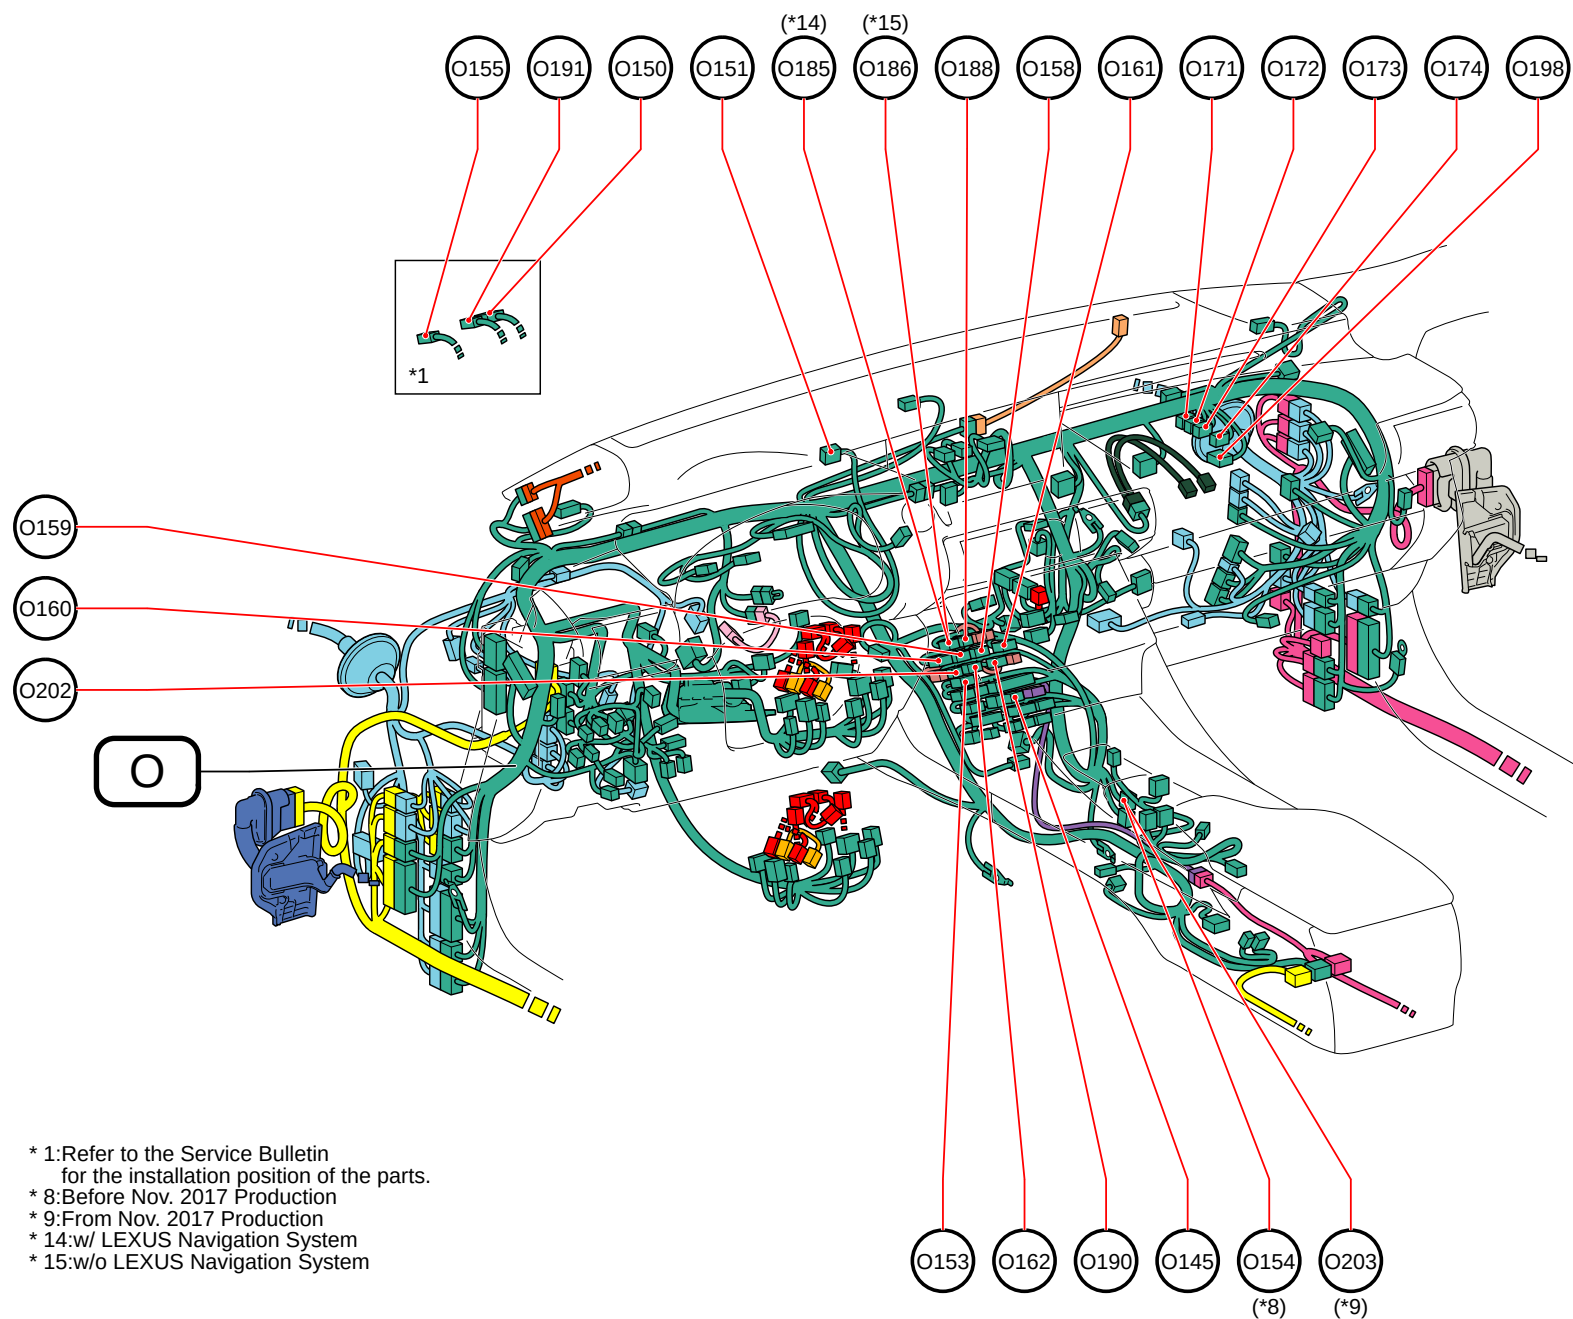


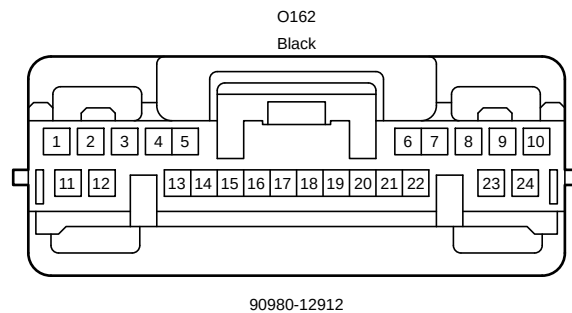
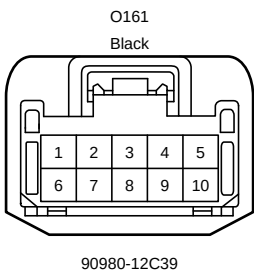
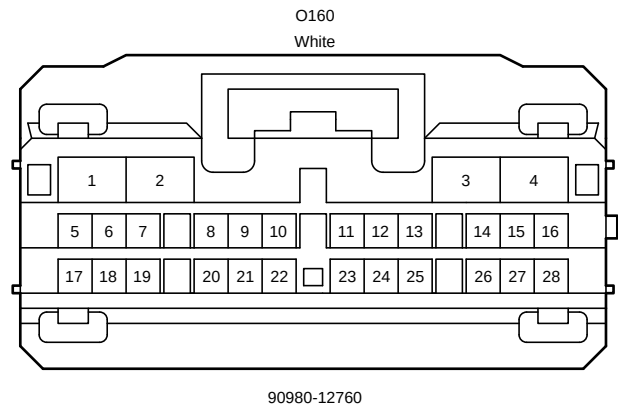
 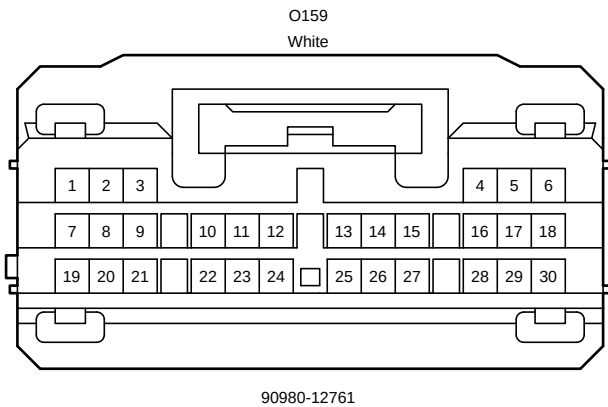
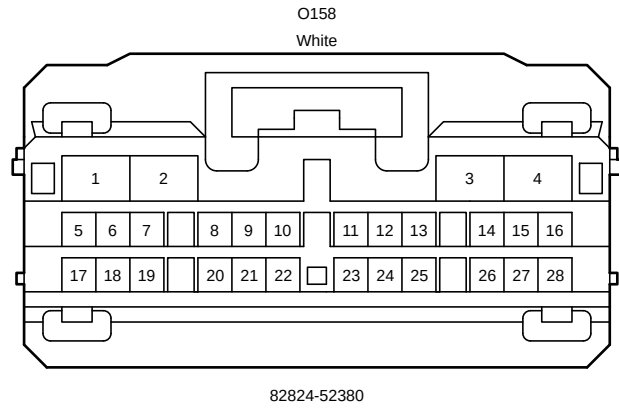
 
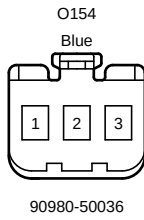

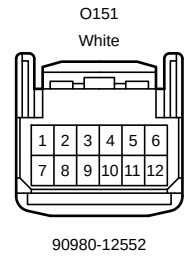


Position of Parts in Instrument Panel (LHD)

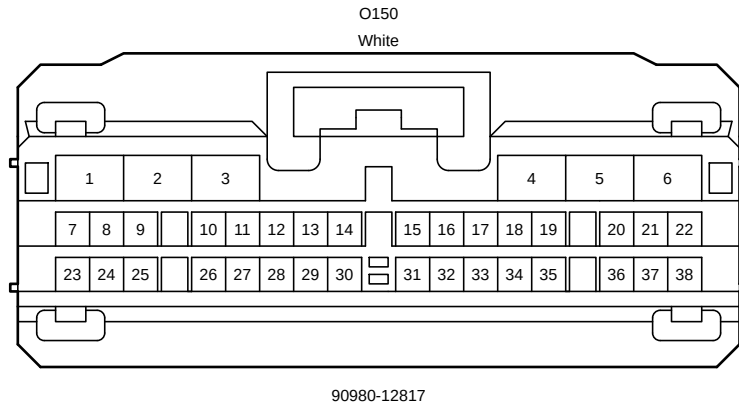

O145 Radio Receiver Assembly
O150 Telematics Transceiver
O151 Telephone Transceiver Assembly
O153 Radio Receiver Assembly
O154 Antenna Cord Sub-Assembly
O155 Telematics Transceiver
O158 Radio Receiver Assembly
O159 Radio Receiver Assembly
O160 Radio Receiver Assembly
O161 Radio Receiver Assembly
O162 Navigation ECU
O171 No. 12 CAN Junction Connector
O172 No. 12 CAN Junction Connector
O173 No. 12 CAN Junction Connector
O174 No. 12 CAN Junction Connector
O185 Radio Receiver Assembly
O186 Radio Receiver Assembly
O188 Radio Receiver Assembly
O190 Navigation ECU
O191 Telematics Transceiver
O198 No. 20 CAN Junction Connector
O202 Navigation ECU
O203 Antenna Cord Sub-Assembly

Position of Parts in Instrument Panel (LHD)

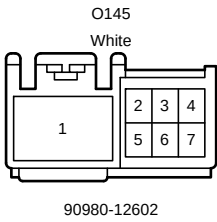

Position of Parts in Instrument Panel (LHD)

