


Position of Parts in Seat (RHD)

* 1:Before Nov. 2017 Production
 * 2:From Nov. 2017 Production

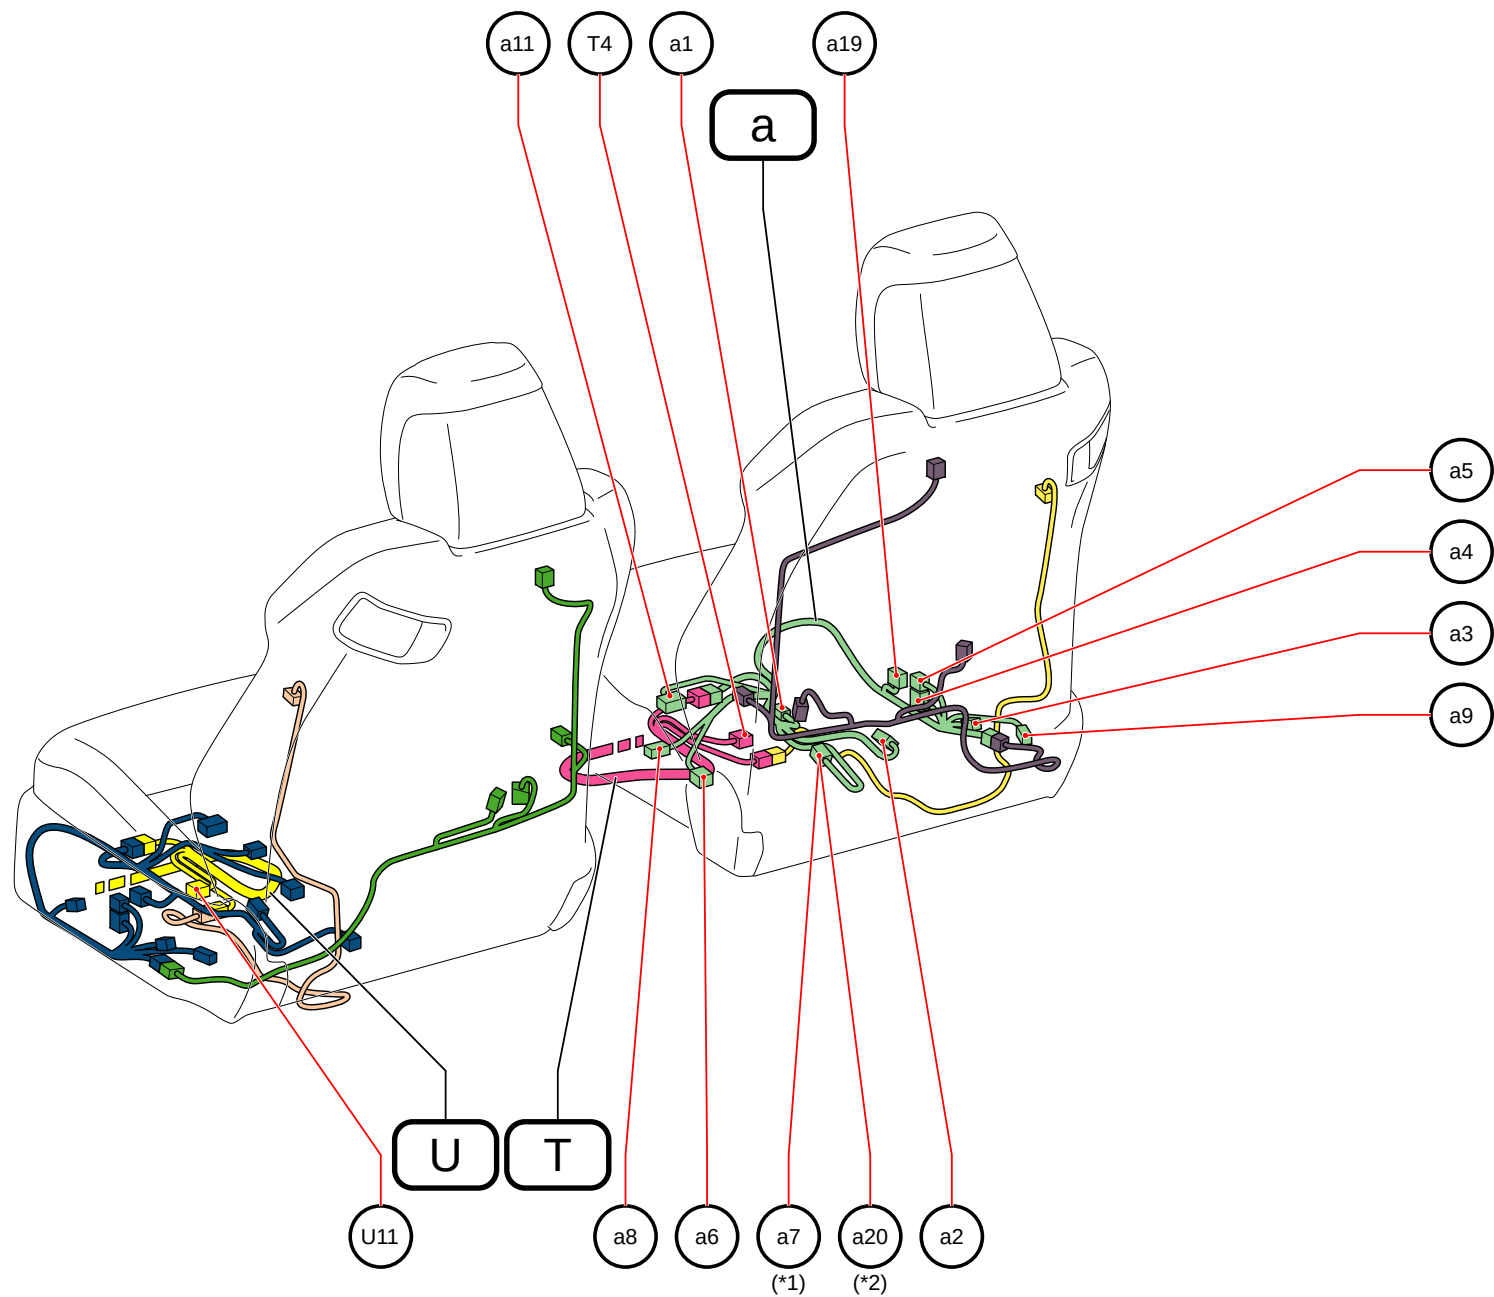

T4	Front Seat Inner Belt Assembly RH
U11	Front Seat Inner Belt Assembly LH
a1	Power Seat Slide Motor RH (Front Seat Adjuster Assembly RH)
a2	Power Seat Tilt Motor RH (Front Seat Adjuster Assembly RH)
a3	Power Seat Lift Motor RH (Front Seat Adjuster Assembly RH)
a4	Position Control ECU and Switch Assembly RH
a5	Position Control ECU and Switch Assembly RH
a6	Seat Heater Assembly RH (Front Seat Cushion with Cover Pad RH)
a7	Seat Cushion Climate Control Blower Assembly RH
a8	Front Seat Inner Belt Assembly RH
a9	Front Limit Switch RH (Front Seat Back Edge Protector)
a11	No. 12 Junction Connector
a19	Front Lumbar Power Seat Switch
a20	Seat Cushion Climate Control Blower Assembly RH

Position of Parts in Seat (RHD)

