



Position of Parts in Engine Compartment (LHD)
















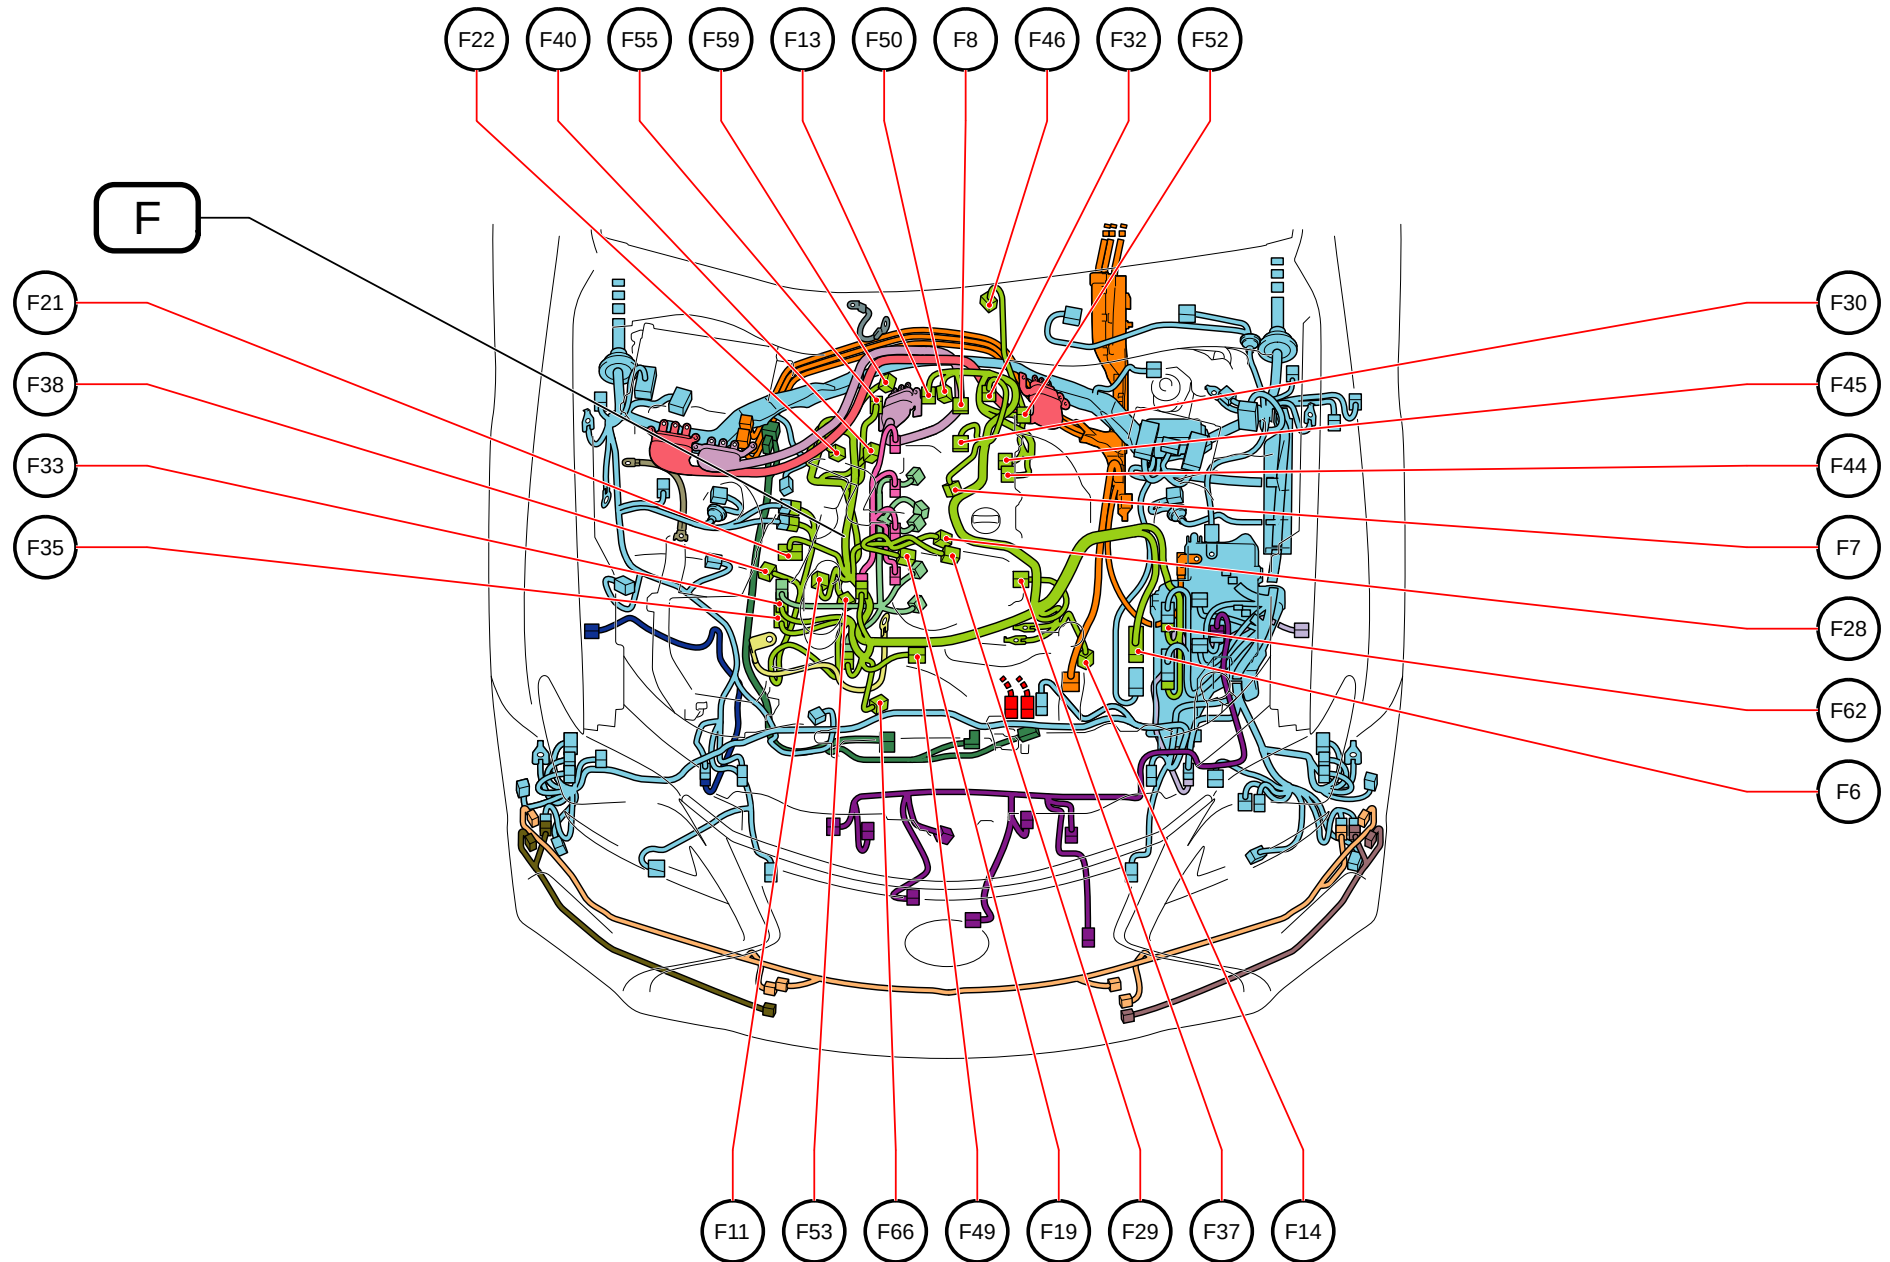


F6	ECM
F7	Ignition Coil Assembly No. 2
F8	Ignition Coil Assembly No. 4
F11	E. F. I. Vacuum Sensor Assembly
F13	VVT Sensor (Bank 1 Intake Side)
F14	Compressor with Motor Assembly
F19	Cam Timing Oil Control Valve Assembly LH (Bank 1 Intake Side)
F21	Throttle Body with Motor Assembly
F22	Purge VSV
F28	Cam Timing Oil Control Valve Assembly RH (Bank 1 Exhaust Side)
F29	Ignition Coil Assembly No. 1
F30	Ignition Coil Assembly No. 3
F32	VVT Sensor (Bank 1 Exhaust Side)
F33	Injector Driver
F35	Injector Driver
F37	Engine Oil Pressure Switch Assembly
F38	Intake Mass Air Flow Meter Sub-Assembly
F40	Fuel Pressure Sensor
F44	Hybrid Vehicle Transmission Assembly
F45	Hybrid Vehicle Transmission Assembly
F46	Oxygen Sensor (Bank 1 Sensor 2)
F49	E.F.I. Engine Coolant Temperature Sensor
F50	Fuel Pump with Seal Sub-Assembly
F52	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
F53	Engine Oil Level Sensor
F55	Shift Lever Position Sensor
F59	EGR Valve Assembly
F62	No. 4 Junction Connector
F66	Crank Position Sensor

Position of Parts in Engine Compartment (LHD)

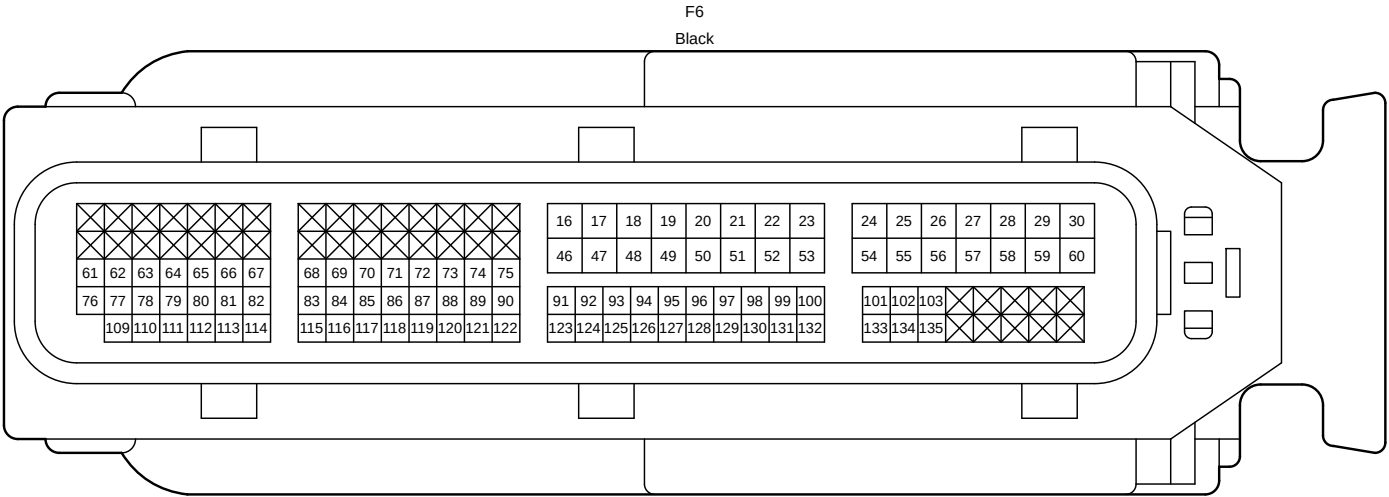

90980-12974

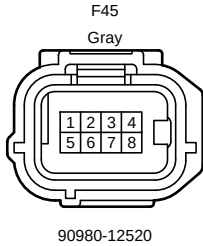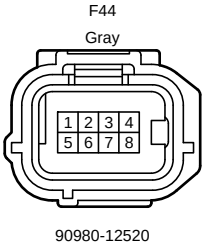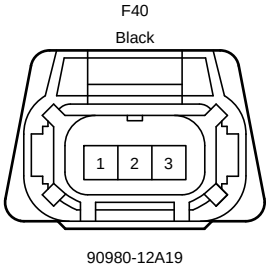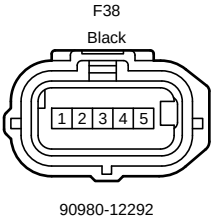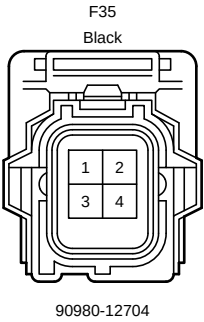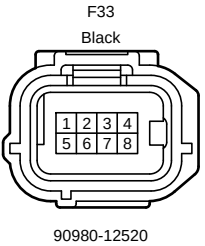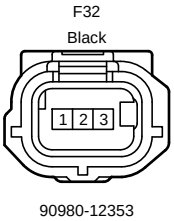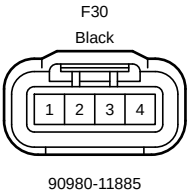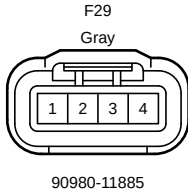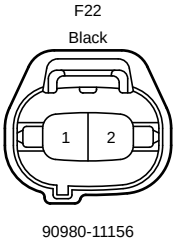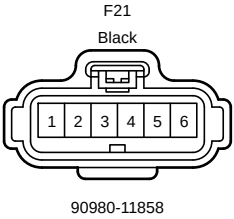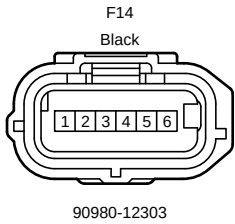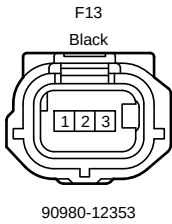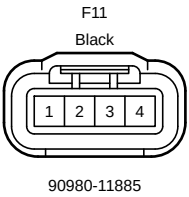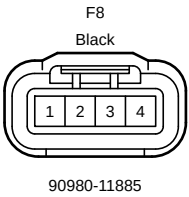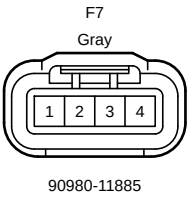

Position of Parts in Engine Compartment (LHD)

