


Position of Parts in Engine Compartment (RHD)

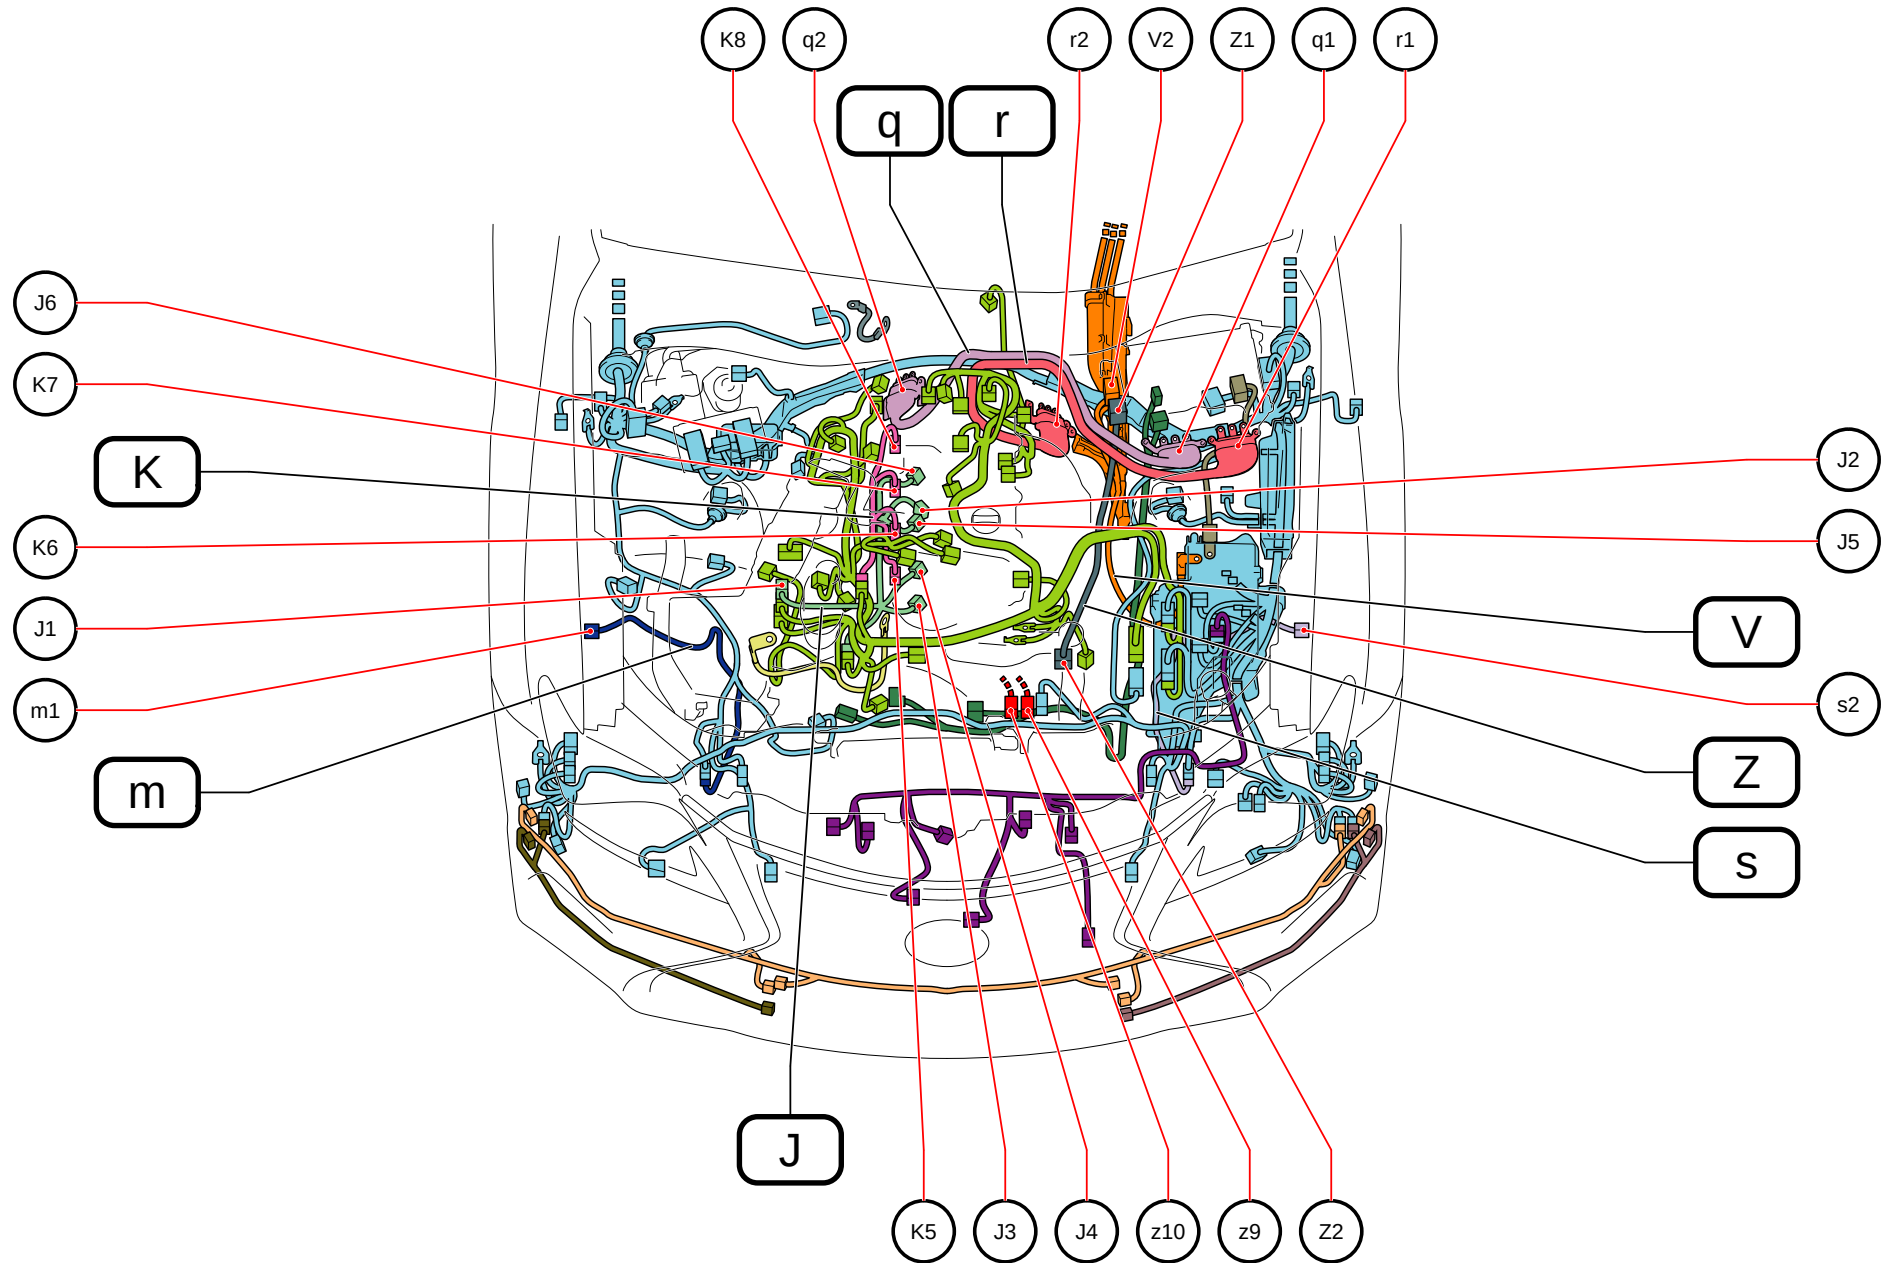

J1	Injector Driver
J2	Knock Control Sensor
J3	Fuel Injector Assembly No. 1 (for Direct Injection)
J4	Fuel Injector Assembly No. 2 (for Direct Injection)
J5	Fuel Injector Assembly No. 3 (for Direct Injection)
J6	Fuel Injector Assembly No. 4 (for Direct Injection)
K5	Fuel Injector Assembly No. 1 (for Port Injection)
K6	Fuel Injector Assembly No. 2 (for Port Injection)
K7	Fuel Injector Assembly No. 3 (for Port Injection)
K8	Fuel Injector Assembly No. 4 (for Port Injection)
V2	Inverter with Converter Assembly
Z1	Inverter with Converter Assembly
Z2	Compressor with Motor Assembly
m1	Front Speed Sensor RH
q1	Inverter with Converter Assembly
q2	Hybrid Vehicle Transmission Assembly
r1	Inverter with Converter Assembly
r2	Hybrid Vehicle Transmission Assembly
s2	Front Speed Sensor LH
z9	Cooling Fan ECU , No. 2 Cooling Fan Motor
z10	Cooling Fan ECU , Cooling Fan Motor

Position of Parts in Engine Compartment (RHD)

