 
 


Position of Parts in Instrument Panel (LHD)

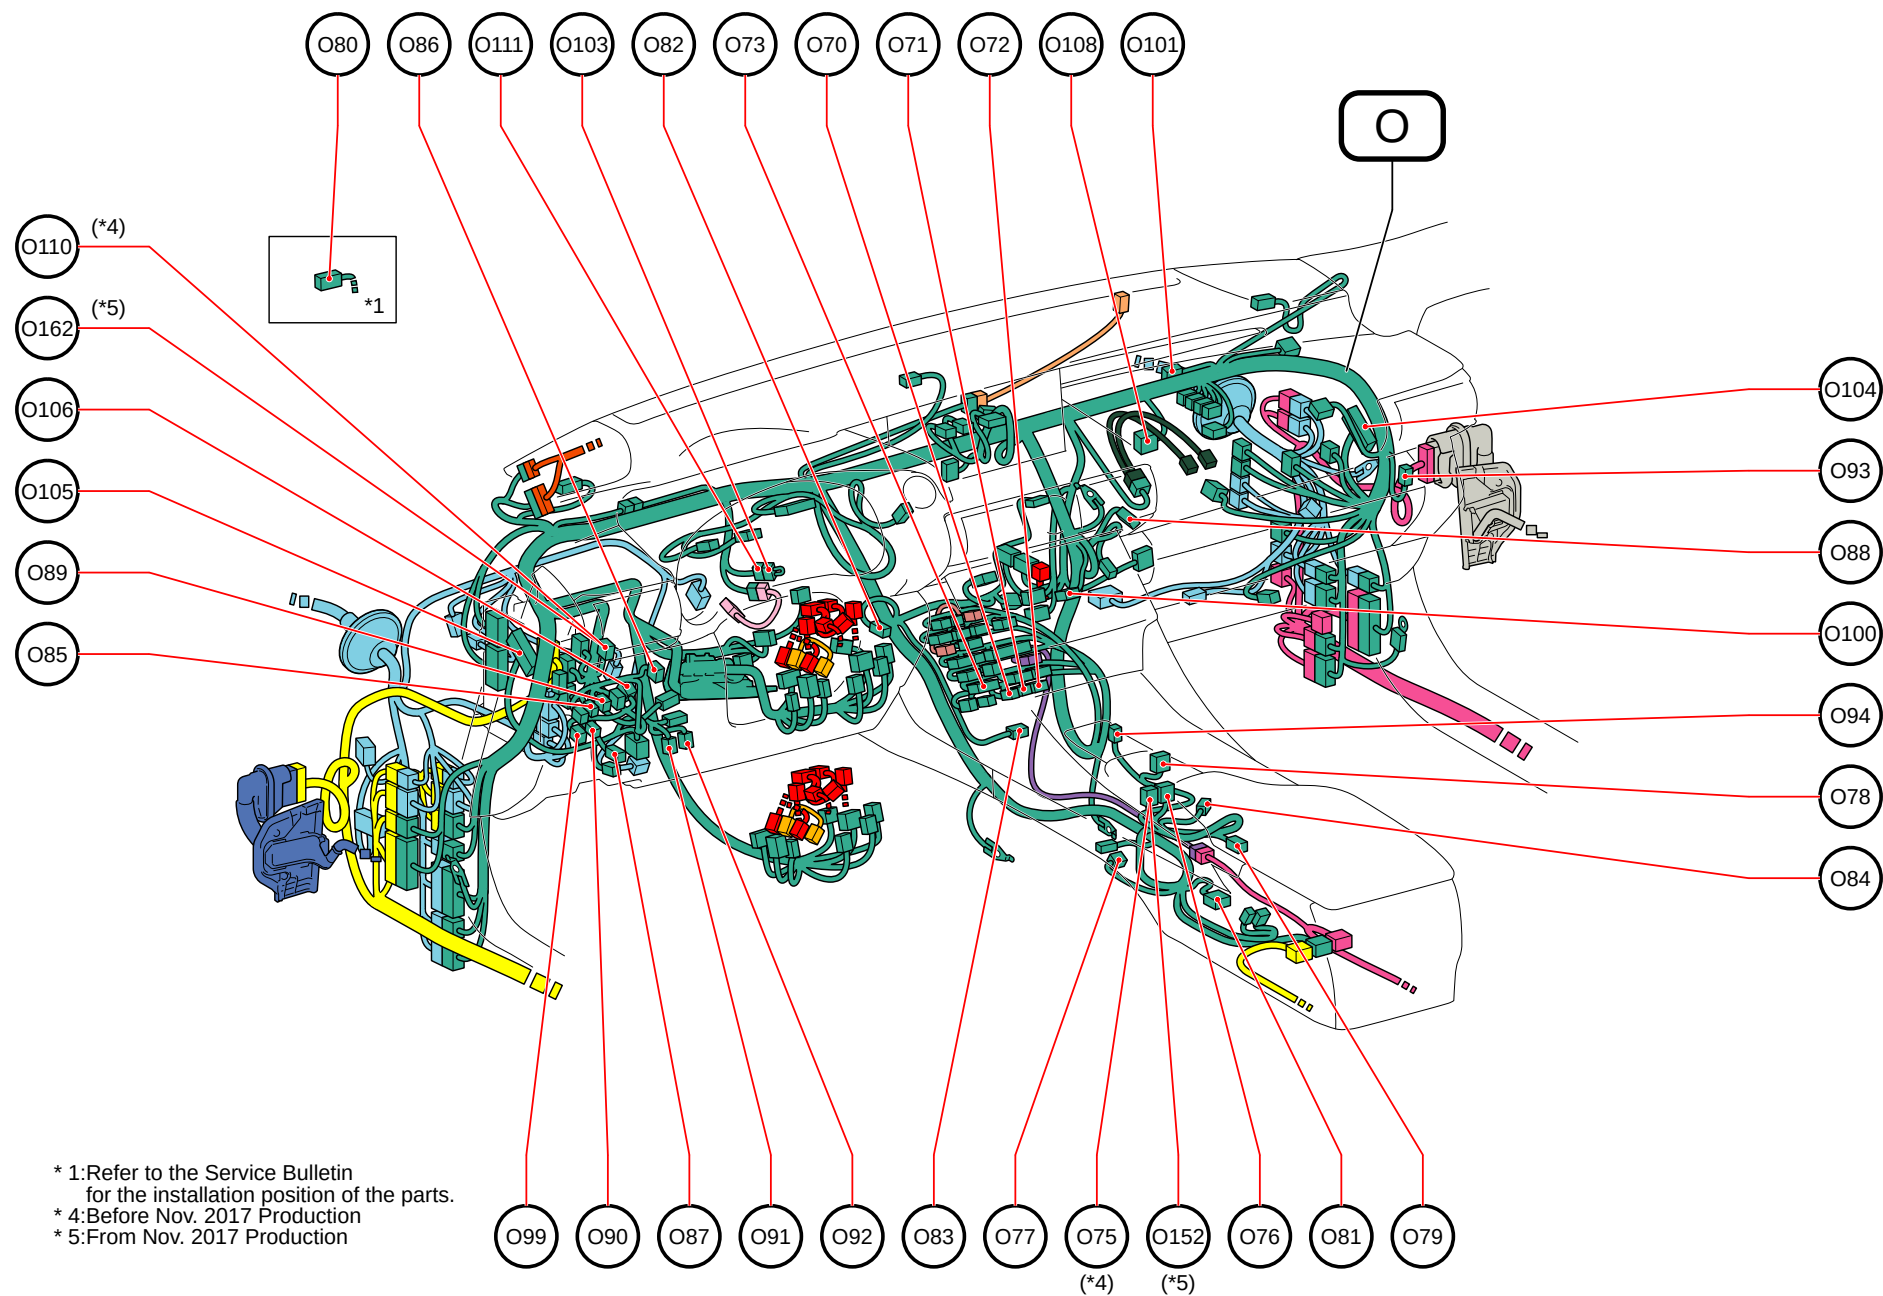


O70	Radio Receiver Assembly
O71	Radio Receiver Assembly
O72	Radio Receiver Assembly
O73	Radio Receiver Assembly
O75	Remote Operation Controller Assembly
O76	Remote Operation Controller Assembly
O77	Transmission Control Switch (Transmission Floor Shift Assembly)
O78	Combination Switch Assembly
O79	No. 1 Power Outlet Socket Assembly
O80	ID Code Box
O81	Yaw Rate Sensor
O82	Cooler (Room Temperature Sensor) Thermistor
O83	Front No. 1 Indoor Electrical Key Antenna Assembly
O84	Shift Position Indicator
O85	Auto High Beam Switch
O86	Trip Switch
O87	Luggage Door Opening Switch Assembly
O88	Luggage Door Opening Cancel Switch Assembly
O89	Front Wiper Deicer Switch
O90	Back Sonar or Clearance Sonar Switch Assembly
O91	Tire Pressure Warning Reset Switch (Tire Pressure Warning Switch)
O92	Pre-Crash System Cancel Switch Assembly
O93	Airbag Cut Off Switch Cylinder Sub-Assembly
O94	Refreshing Seat Switch
O99	Blind Spot Monitor Main Switch (Warning Canceling Switch Assembly)
O100	No. 6 Junction Connector
O101	No. 1 CAN Junction Terminal
O103	Short Connector
O104	No. 1 CAN Junction Connector
O105	No. 2 CAN Junction Connector
O106	No. 5 CAN Junction Connector
O108	No. 7 CAN Junction Connector
O110	No. 8 CAN Junction Connector
O111	Short Connector
O152	Remote Operation Controller Assembly
O162	No. 13 CAN Junction Connector


Position of Parts in Instrument Panel (LHD)

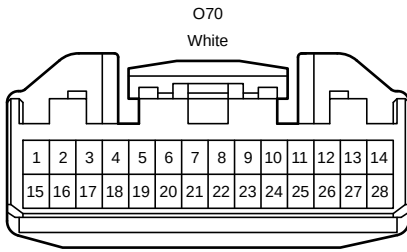

 
90980-12555

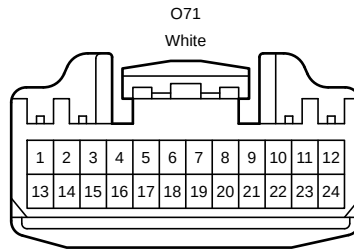


90980-12905

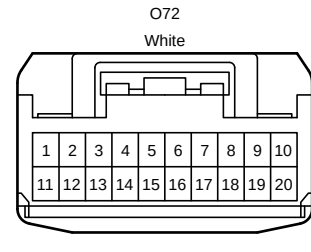 


90980-12460

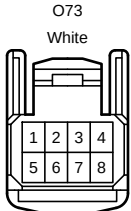 


90980-12551

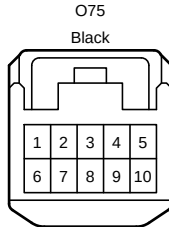 


90980-12368

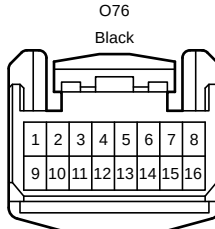 

90980-12553

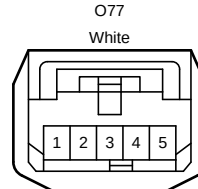 


90980-12954

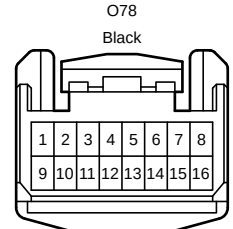 


90980-12553



 
90980-11606

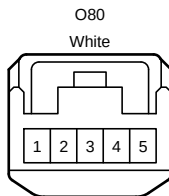


90980-12366

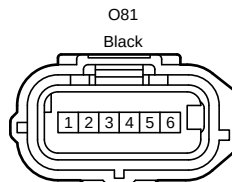 


90980-12303

 


90980-11918

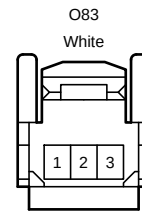 


90980-12795

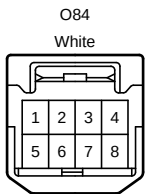 


90980-12910

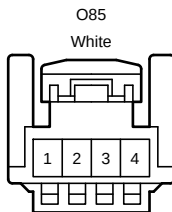 


90980-12876

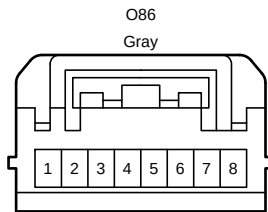 


90980-12550

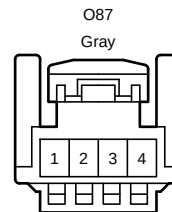 


90980-12876

 


90980-10825

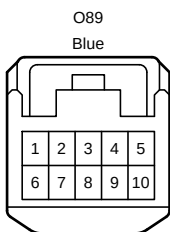 


90980-12368

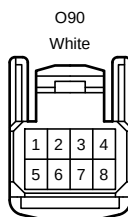 


90980-12551

 


90980-10906

 

90980-10860






 


90980-12063

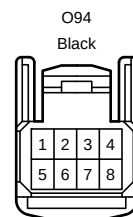 


90980-12551

      Position of Parts in Instrument Panel (LHD)

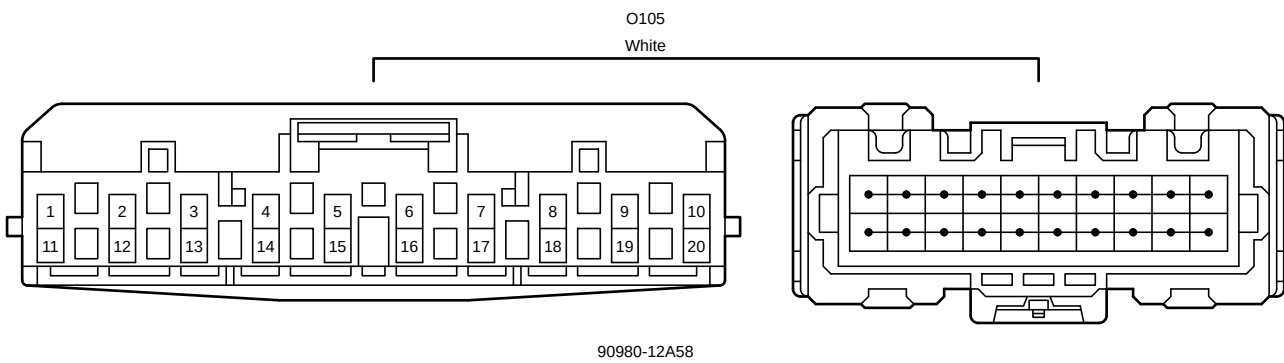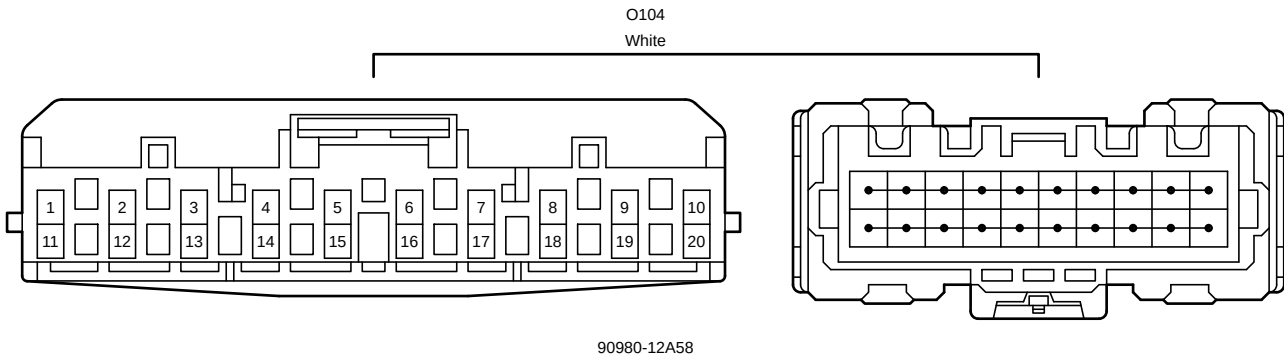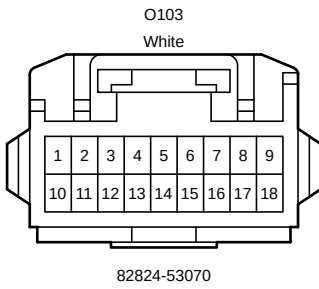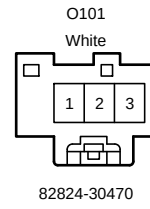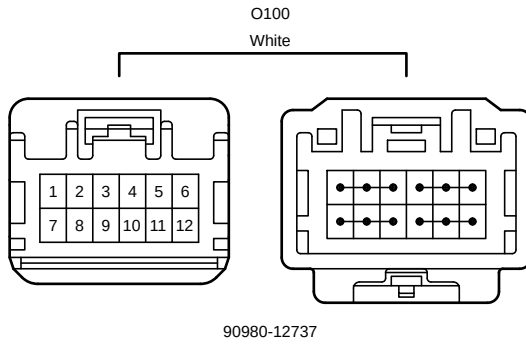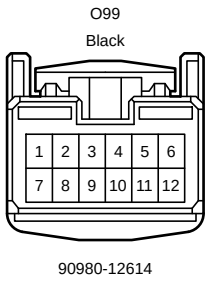


Position of Parts in Instrument Panel (LHD)

 O106
Black

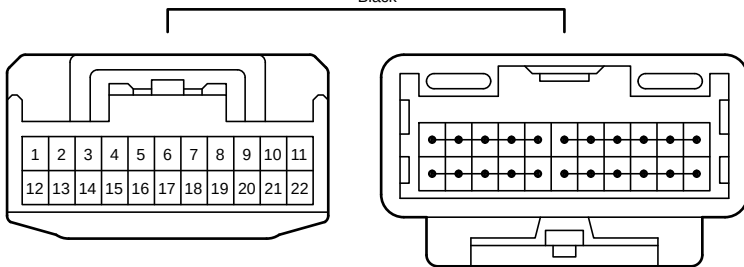


90980-12372

 O108
Black

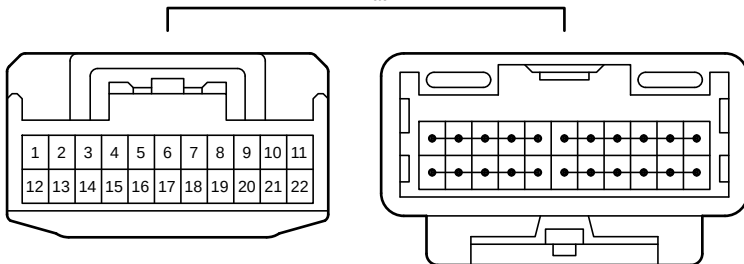


90980-12372

 O110
Black

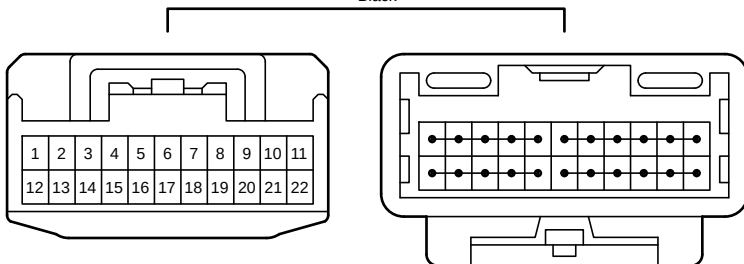


90980-12372

 O111
White

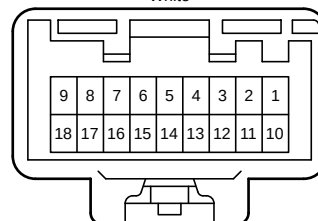


82824-53060

 O152
White

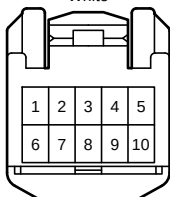

90980-12361

 O162
Black

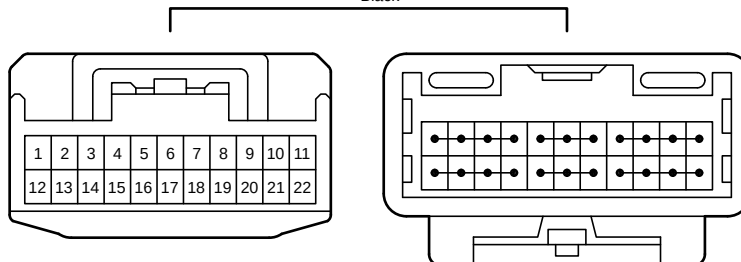

90980-12372