


Position of Parts in Engine Compartment <LHD 2GR-FE>

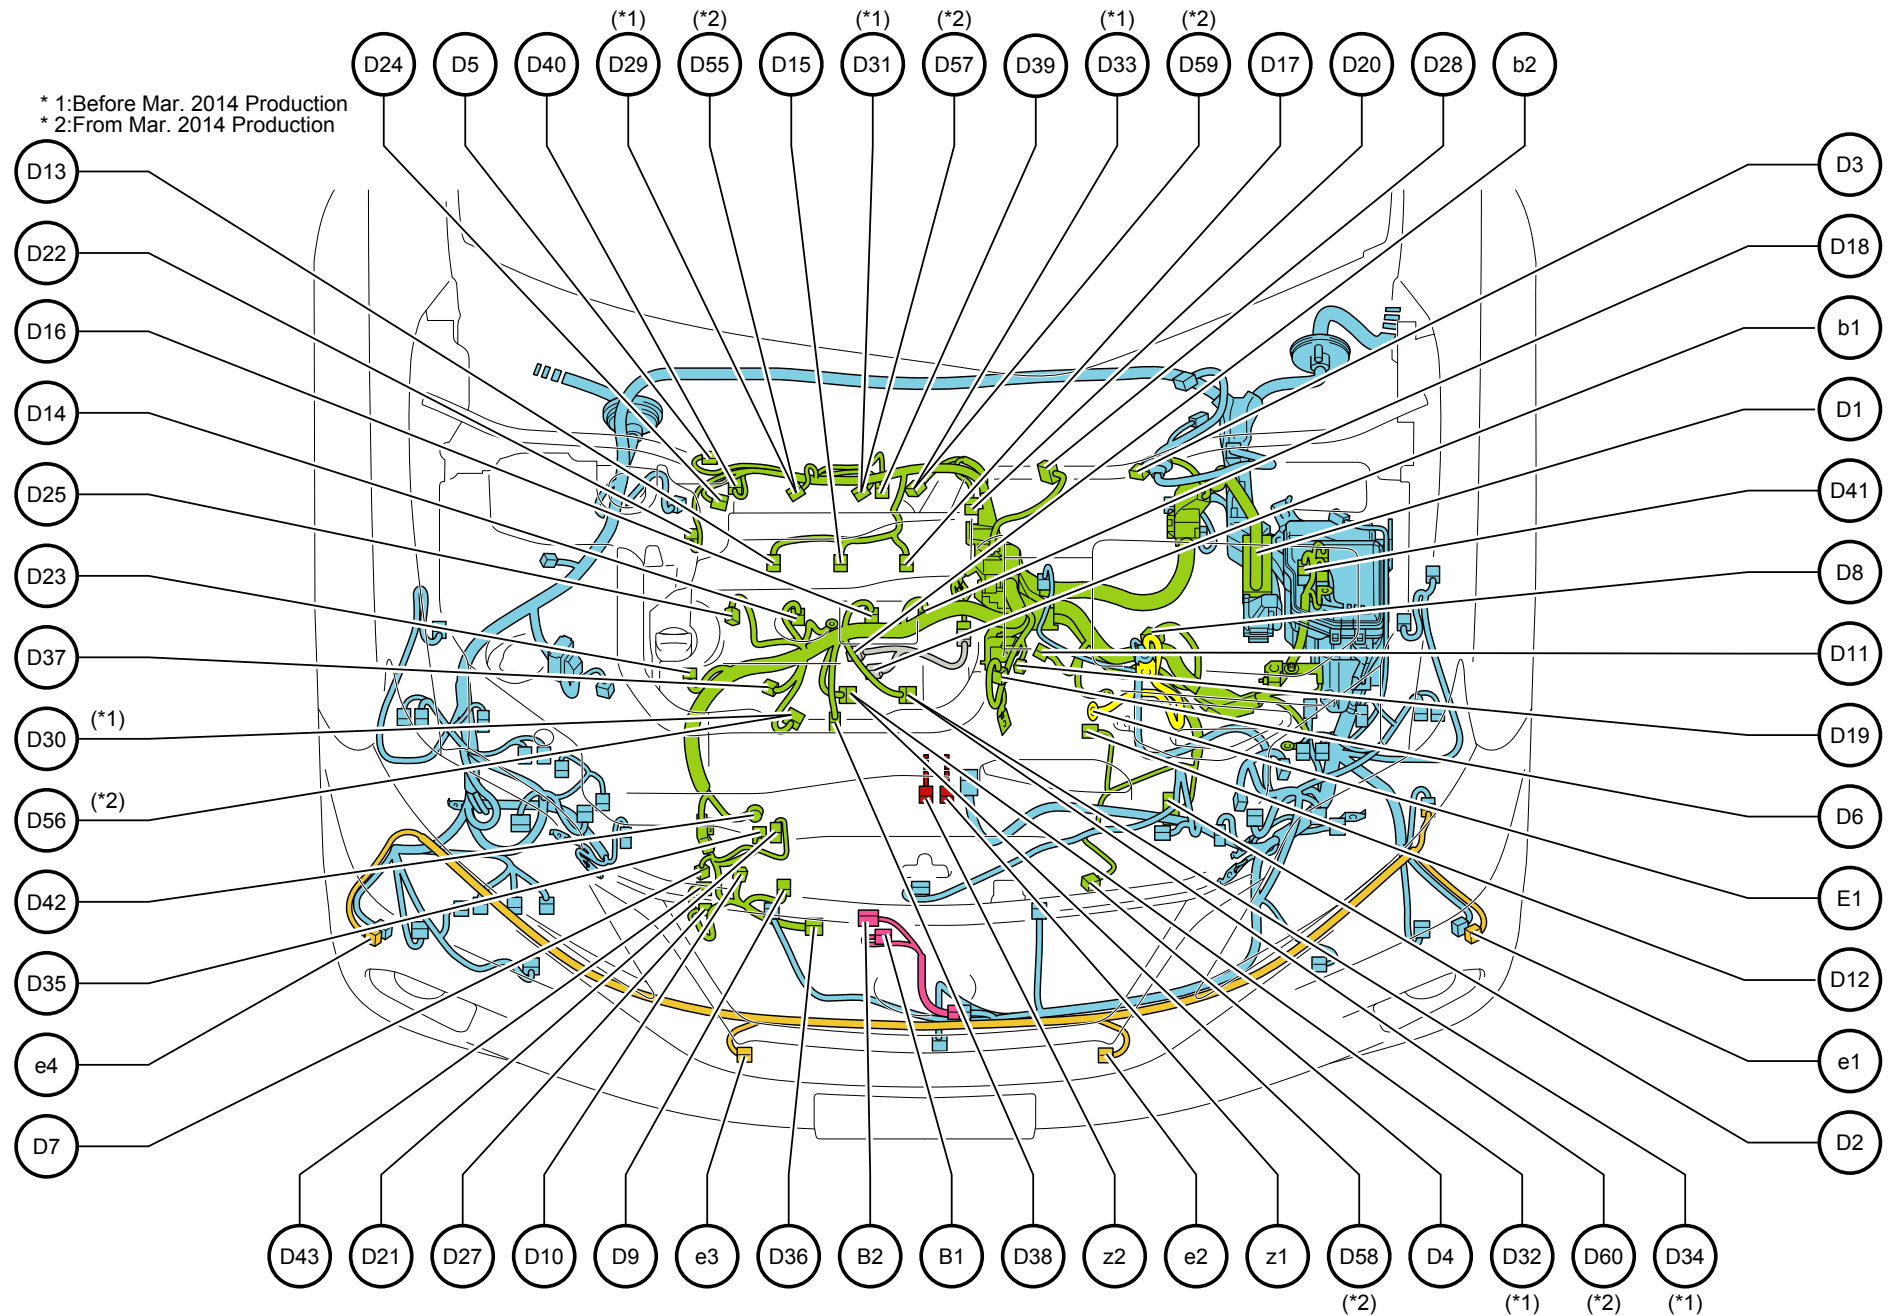

- B 1 Millimeter Wave Radar Sensor Assembly
- B 2 Smog Ventilation Sensor

- D 1 ECM
- D 2 Transmission Control ECU Assembly
- D 3 Intake Mass Air Flow Meter Sub-Assembly
- D 4 VSV (ACM)
- D 5 VSV (ACIS)
- D 6 Purge VSV
- D 7 With Magnet Clutch Compressor Assembly
- D 8 Park/Neutral Position Switch Assembly
- D 9 With Magnet Clutch Compressor Assembly
- D 10 With Magnet Clutch Compressor Assembly
- D 11 E.F.I. Engine Coolant Temperature Sensor
- D 12 Starter Assembly
- D 13 Fuel Injector Assembly (No. 1)
- D 14 Fuel Injector Assembly (No. 2)
- D 15 Fuel Injector Assembly (No. 3)
- D 16 Fuel Injector Assembly (No. 4)
- D 17 Fuel Injector Assembly (No. 5)
- D 18 Fuel Injector Assembly (No. 6)
- D 19 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- D 20 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- D 21 Crank Position Sensor
- D 22 VVT Sensor (Bank 1 Intake Side)
- D 23 VVT Sensor (Bank 2 Intake Side)
- D 24 Cam Timing Oil Control Valve Assembly (Bank 1 Intake Side)
- D 25 Cam Timing Oil Control Valve Assembly (Bank 2 Intake Side)
- D 27 Engine Oil Pressure Switch Assembly
- D 28 Throttle with Motor Body Assembly
- D 29 Ignition Coil Assembly (No. 1)
- D 30 Ignition Coil Assembly (No. 2)
- D 31 Ignition Coil Assembly (No. 3)
- D 32 Ignition Coil Assembly (No. 4)
- D 33 Ignition Coil Assembly (No. 5)
- D 34 Ignition Coil Assembly (No. 6)
- D 35 Generator Assembly
- D 36 Oxygen Sensor (Bank 2 Sensor 2)
- D 37 Cam Timing Oil Control Valve Assembly (Bank 2 Exhaust Side)
- D 38 VVT Sensor (Bank 2 Exhaust Side)
- D 39 VVT Sensor (Bank 1 Exhaust Side)
- D 40 Cam Timing Oil Control Valve Assembly (Bank 1 Exhaust Side)
- D 41 Junction Connector
- D 42 Generator Assembly
- D 43 Engine Oil Level Sensor
- D 55 Ignition Coil Assembly (No. 1)
- D 56 Ignition Coil Assembly (No. 2)
- D 57 Ignition Coil Assembly (No. 3)
- D 58 Ignition Coil Assembly (No. 4)
- D 59 Ignition Coil Assembly (No. 5)
- D 60 Ignition Coil Assembly (No. 6)

- E 1 Starter Assembly

- b 1 Knock Control Sensor (Bank 2)
- b 2 Knock Control Sensor (Bank 1)

- e 1 No. 1 Ultrasonic Sensor (Front Left)
- e 2 No. 1 Ultrasonic Sensor (Front Left Center)

- e 3 No. 1 Ultrasonic Sensor (Front Right Center)
- e 4 No. 1 Ultrasonic Sensor (Front Right)

- z 1 Cooling Fan ECU , Cooling Fan Motor
- z 2 Cooling Fan ECU , No. 2 Cooling Fan Motor

Position of Parts in Engine Compartment <LHD 2GR-FE>


B 1
Black




B 2
Gray



D 1
Black

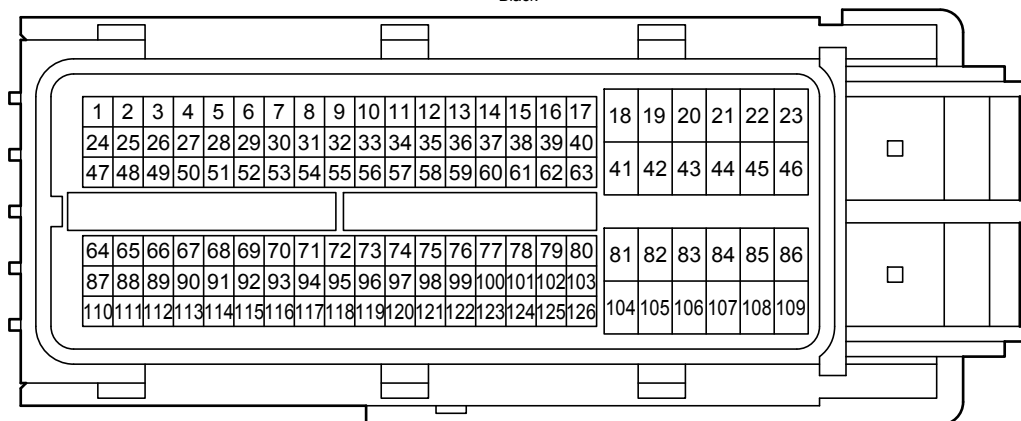


D 2
Gray

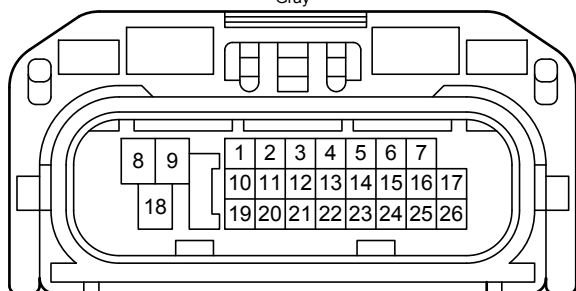

D 3
Black




D 4
Black

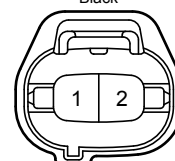


D 5
Gray




D 6
Black

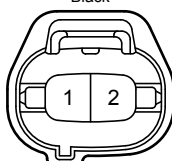


D 7
Gray

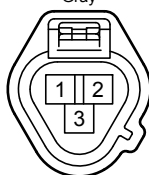


D 8
Gray

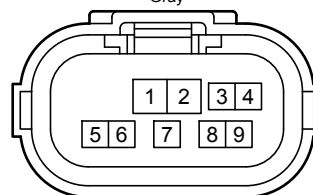

D 9
Black

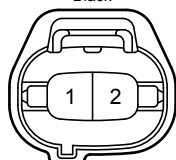

D 10
Black

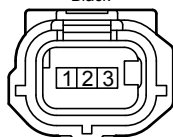


D 11
Gray




D 12
Black



 
D 13
Gray




D 14
Gray

 


D 15
Gray

 


D 16
Gray

 


D 17
Gray

 


D 18
Gray

 


Position of Parts in Engine Compartment <LHD 2GR-FE>

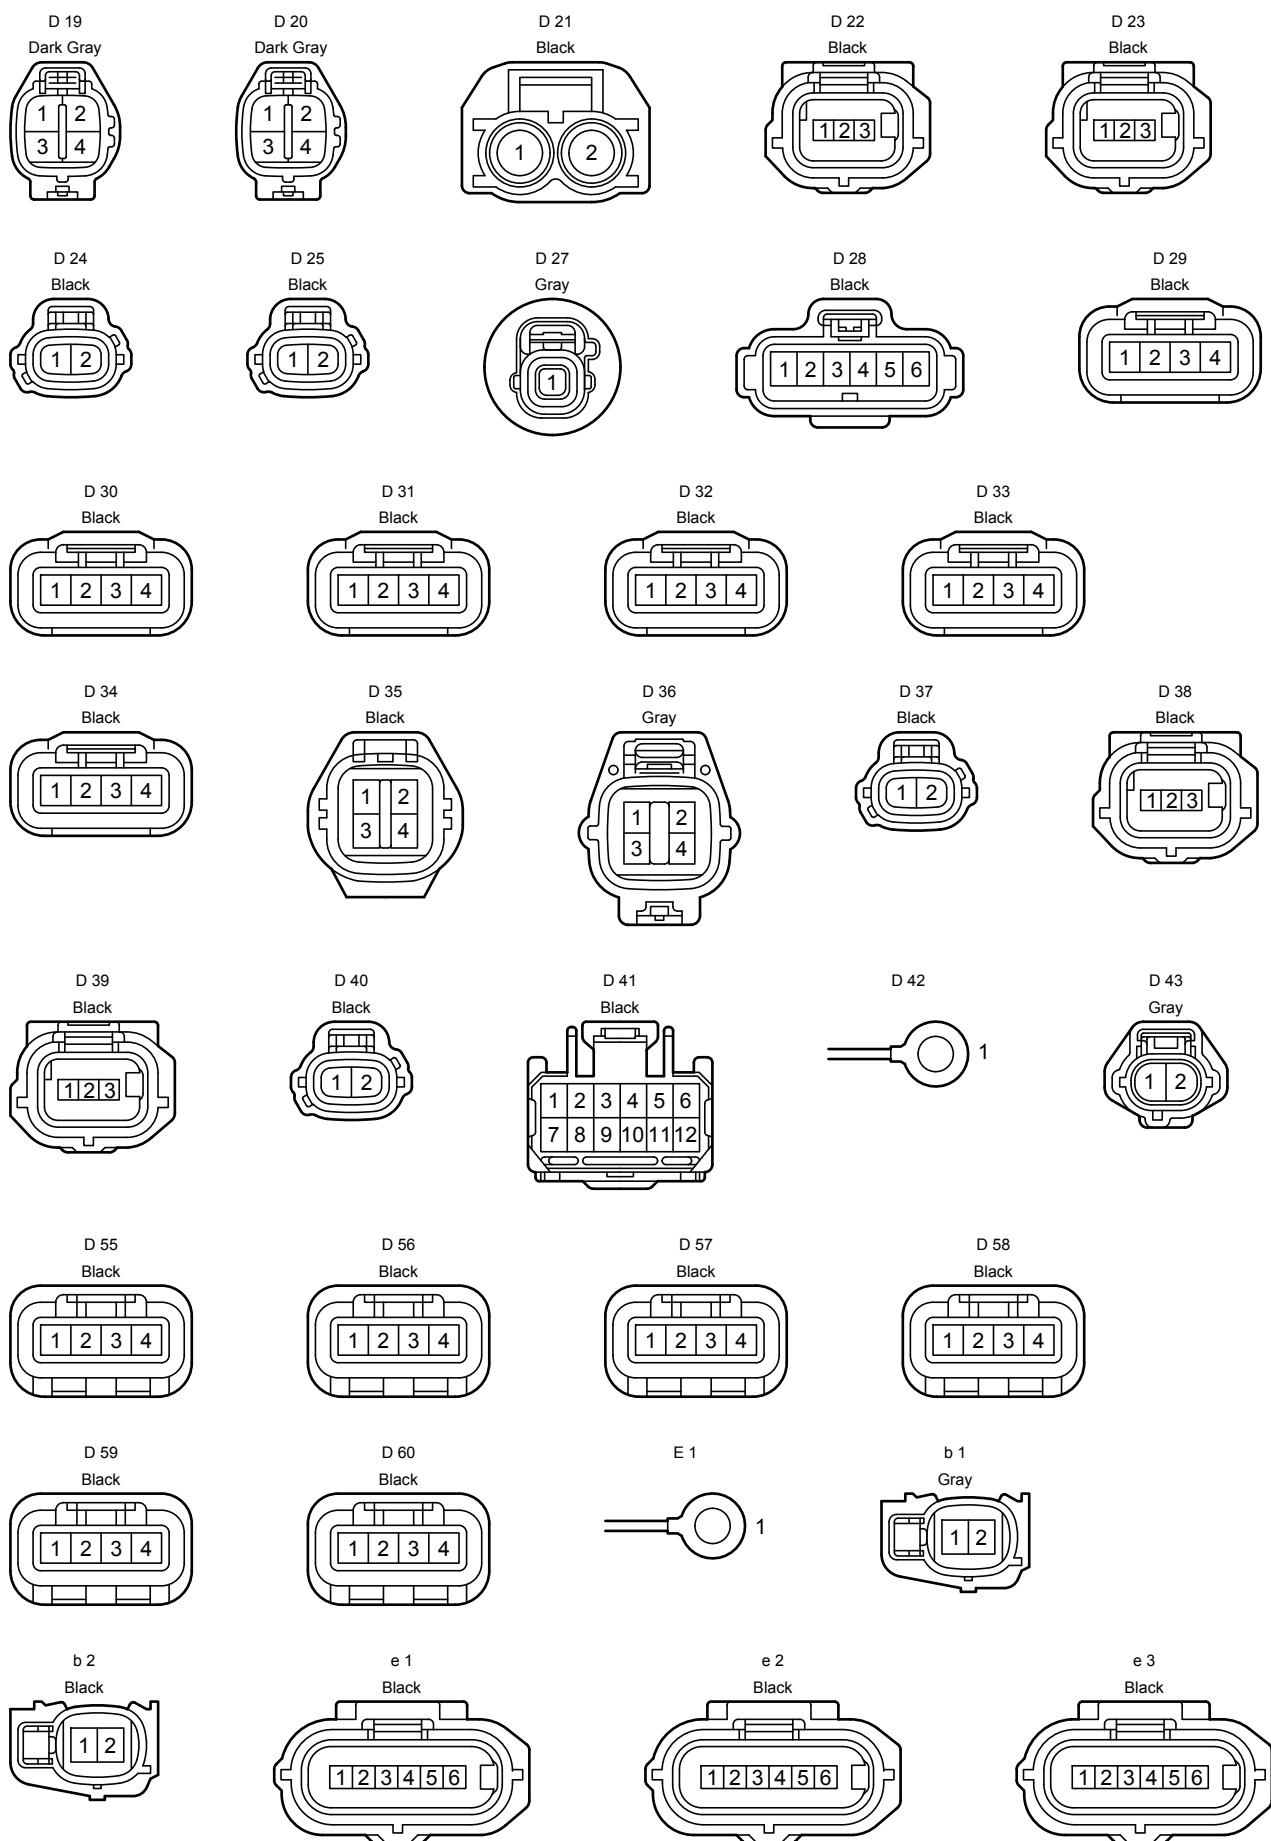

e 4
Black

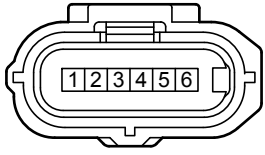

z 1
Gray

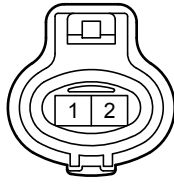

z 2
Gray

