

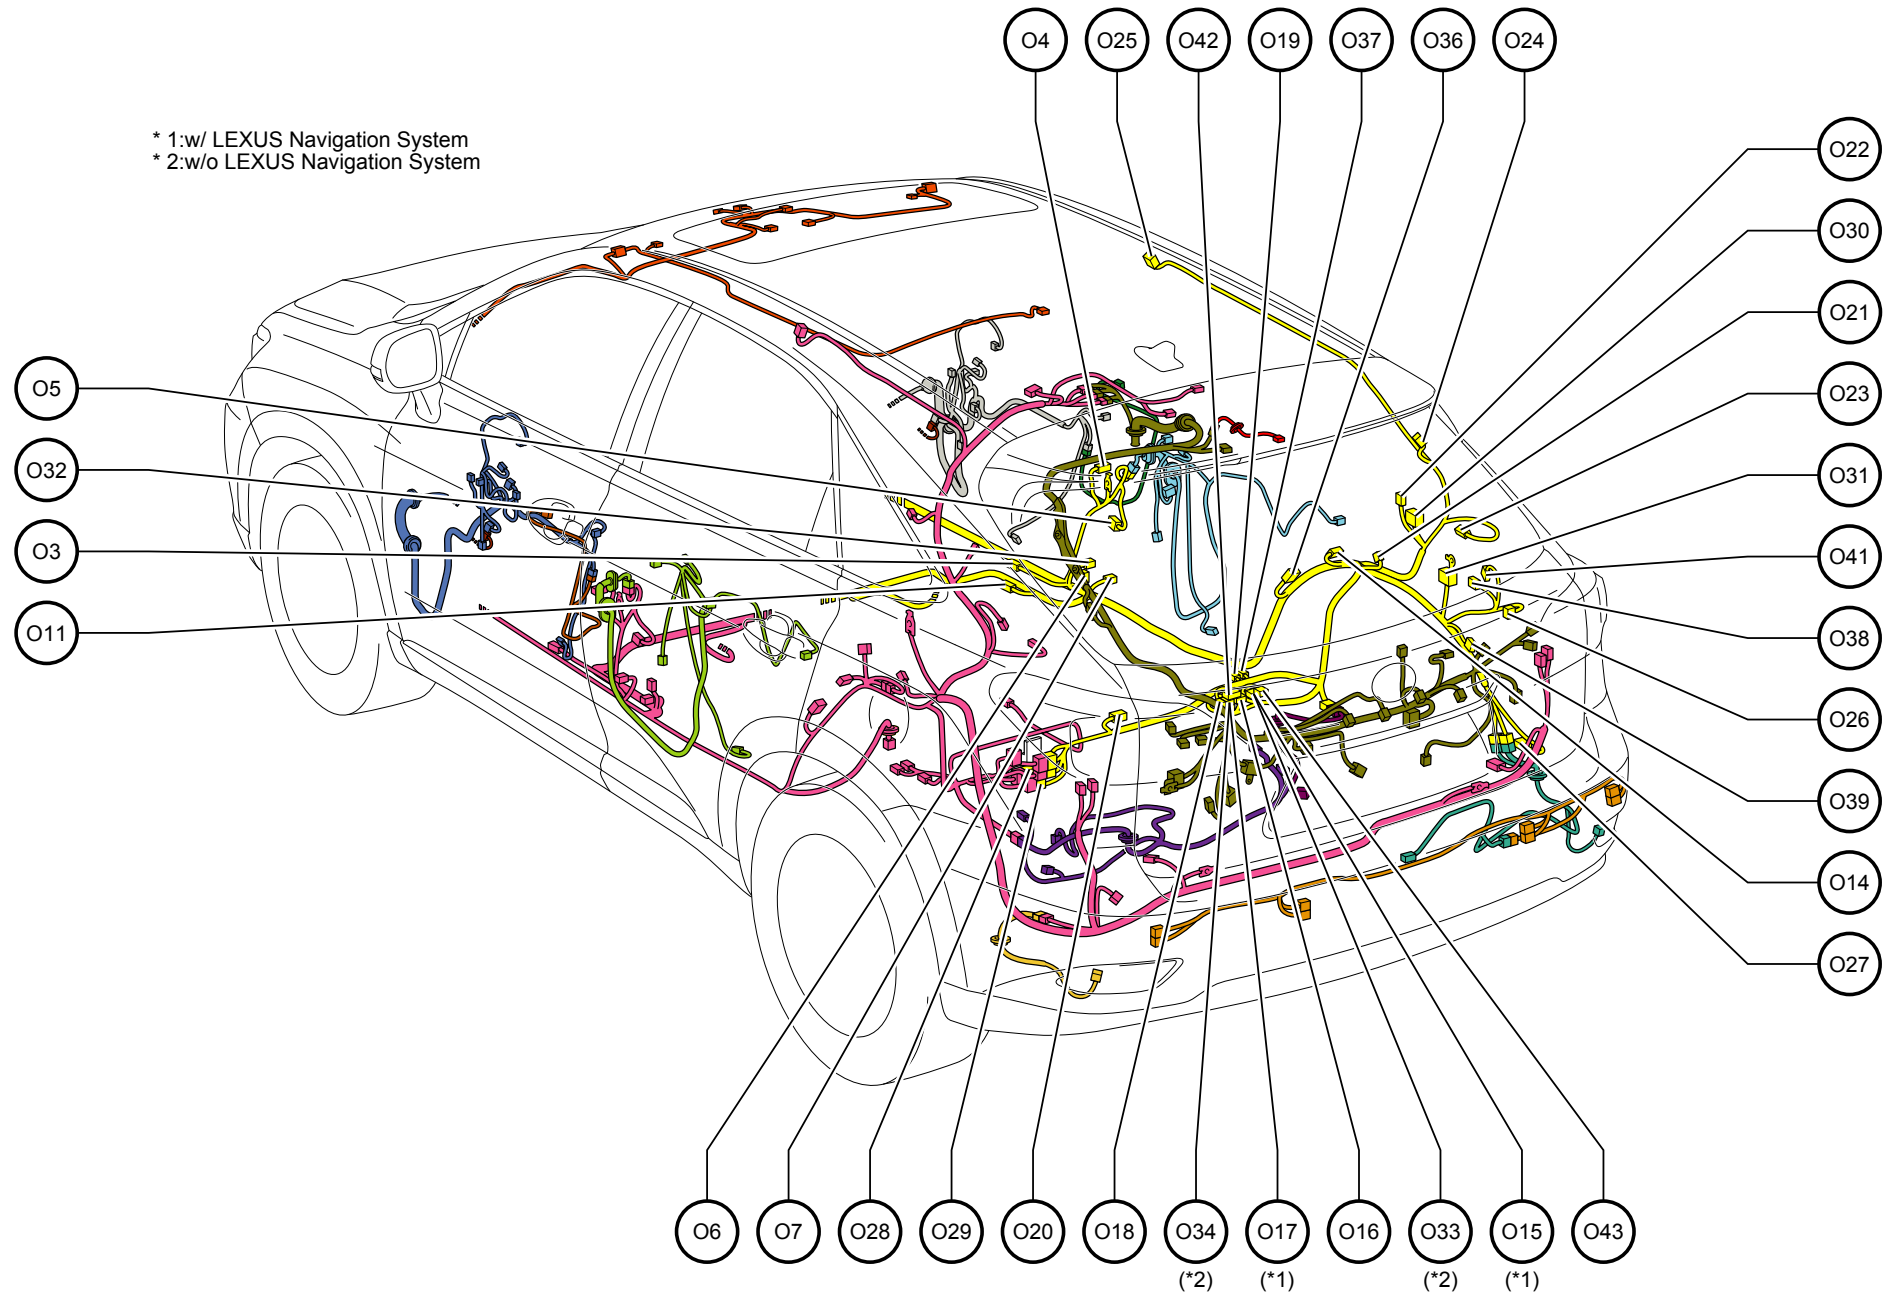
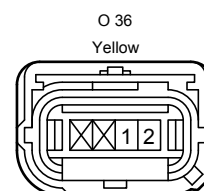
 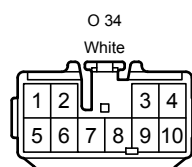
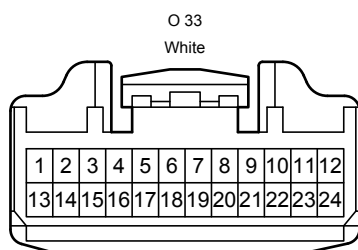

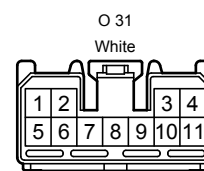
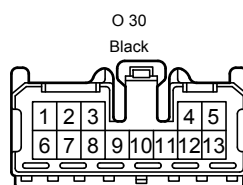
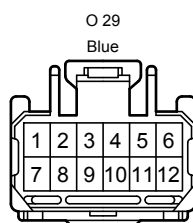
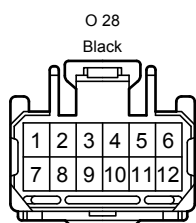
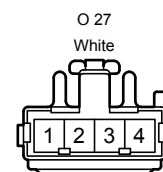
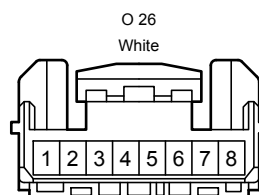
 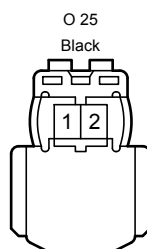
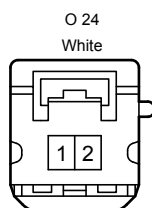
 
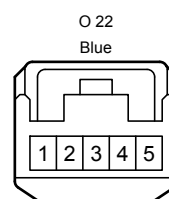

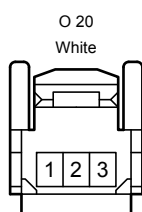
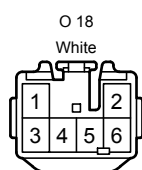
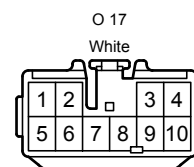
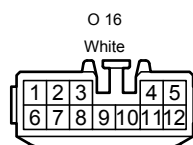
 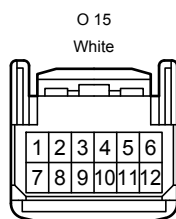
 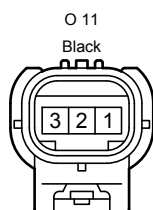




Position of Parts in Body <RHD>

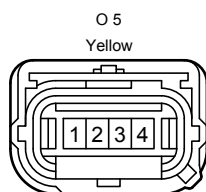

- O 3 No. 1 Interior Illumination Light Assembly RH
- O 4 Front Door Courtesy Light Switch Assembly RH
- O 5 Side Airbag Sensor Assembly RH
- O 6 Front Seat Outer Belt Assembly RH
- O 7 Front Seat Outer Belt Assembly RH
- O 11 Pneumatic with Tube Tank Assembly
- O 14 Rear Door Courtesy Light Switch Assembly RH
- O 15 Stereo Component Amplifier Assembly
- O 16 Stereo Component Amplifier Assembly
- O 17 Stereo Component Amplifier Assembly
- O 18 Stereo Component Amplifier Assembly
- O 19 Rear Side Airbag Squib Circuit RH
- O 20 Indoor Luggage Compartment Electrical Key Oscillator
- O 21 Rear No. 1 Seat Belt Assembly Outer RH
- O 22 Door Control Receiver
- O 23 No. 2 Room Light Assembly RH
- O 24 Quarter Side Speaker Assembly RH
- O 25 Curtain Shield Airbag Assembly RH
- O 26 No. 2 Suspension Control Switch
- O 27 Height Control Valve Harness Assembly
- O 28 Junction Connector
- O 29 Junction Connector
- O 30 Junction Connector
- O 31 Junction Connector
- O 32 Front Seat Outer Belt Assembly RH
- O 33 Stereo Component Amplifier Assembly
- O 34 Stereo Component Amplifier Assembly
- O 36 Rear Airbag Sensor RH
- O 37 Rear Seat 3 Point Type Belt Assembly RH
- O 38 Theft Warning Siren Assembly
- O 39 Option Connector (Glass Breakage Sensor ECU Assembly)
- O 41 Theft Warning Siren Assembly
- O 42 Stereo Component Amplifier Assembly
- O 43 Stereo Component Amplifier Assembly

Position of Parts in Body <RHD>

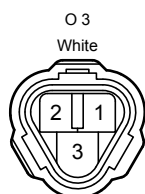

Position of Parts in Body <RHD>

