 
 
 


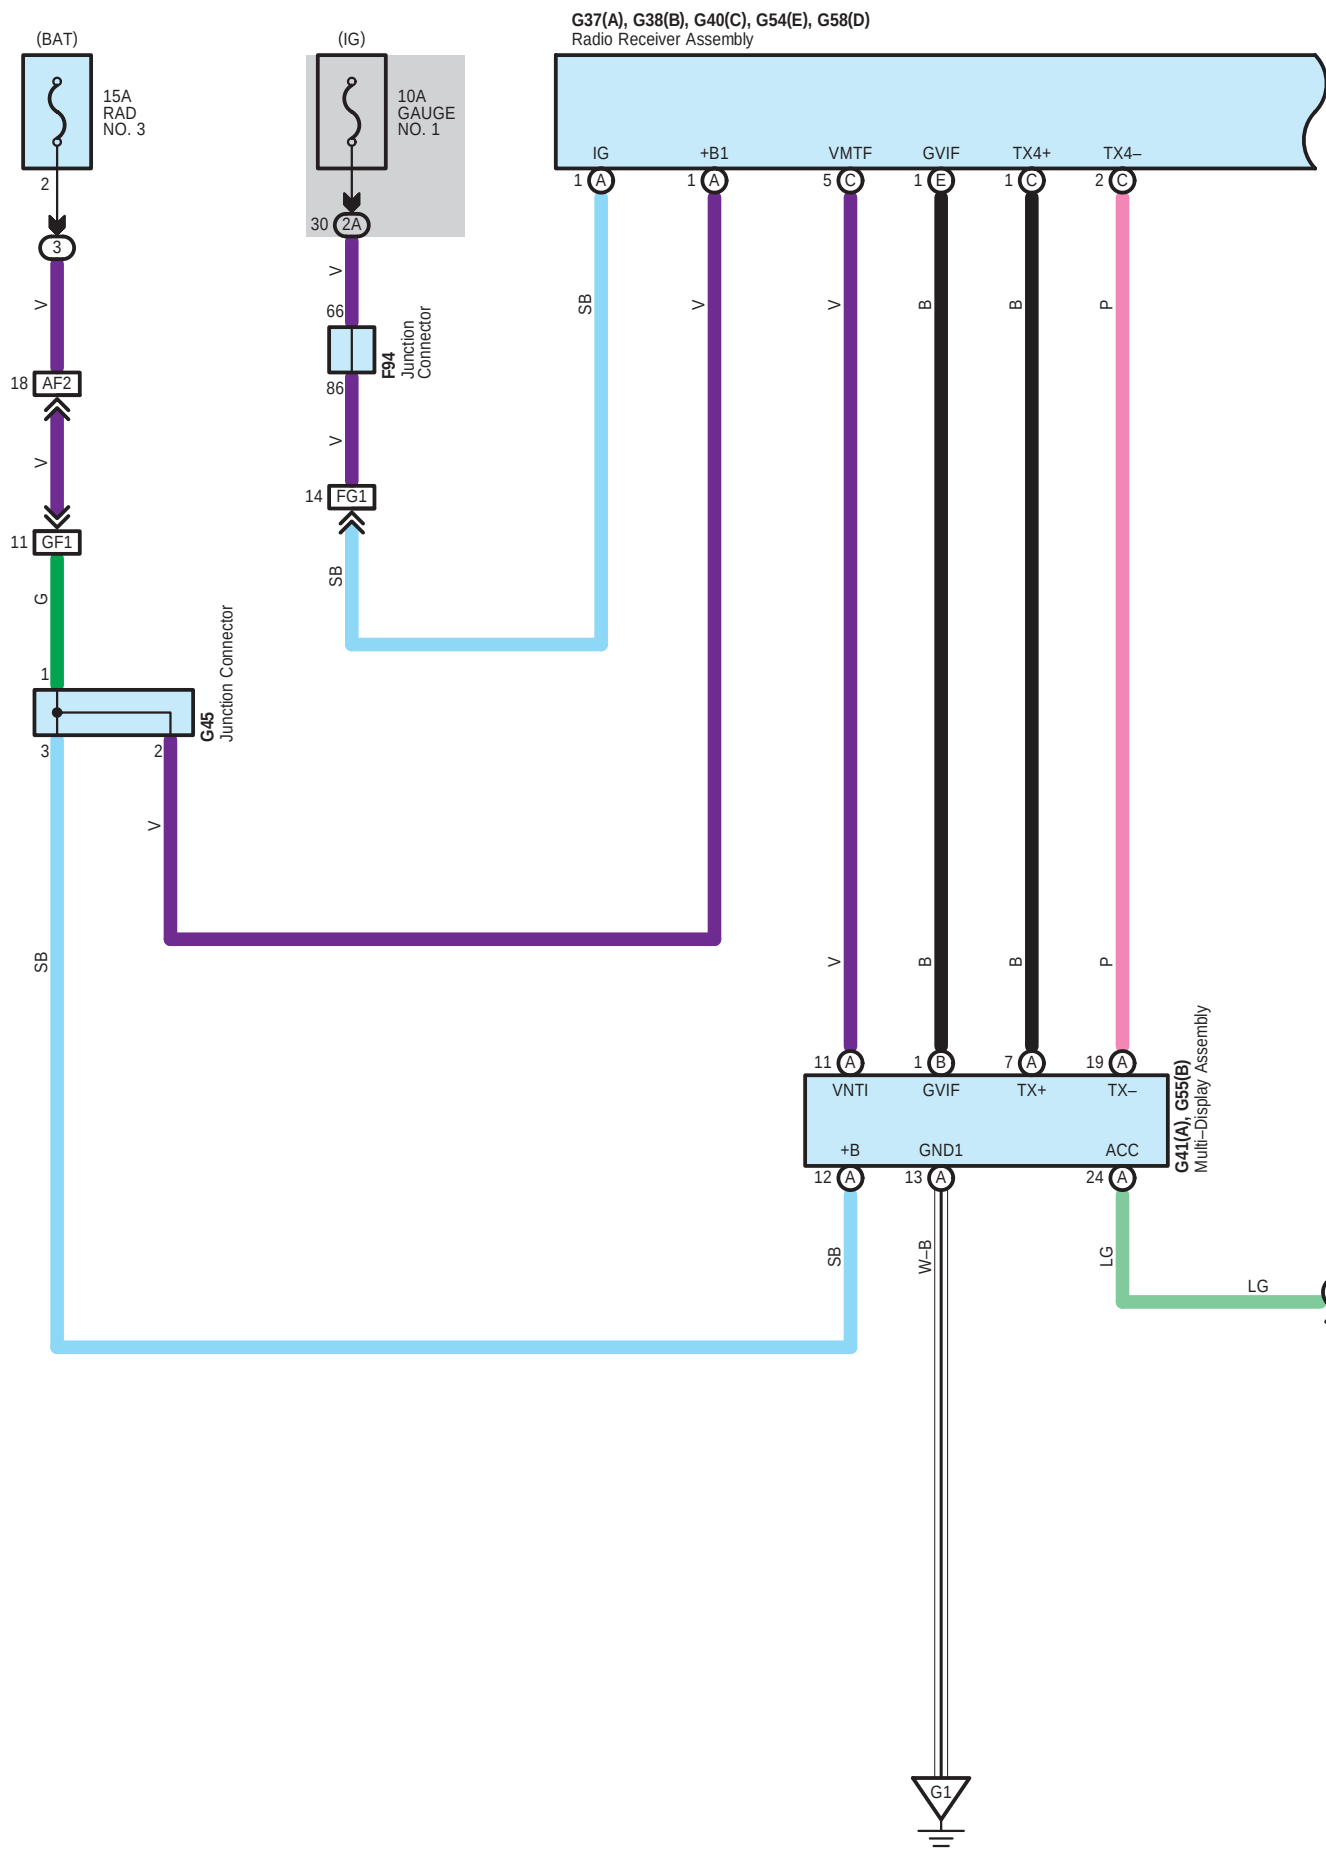

G37(A), G38(B), G40(C), G54(E), G58(D)
Radio Receiver Assembly

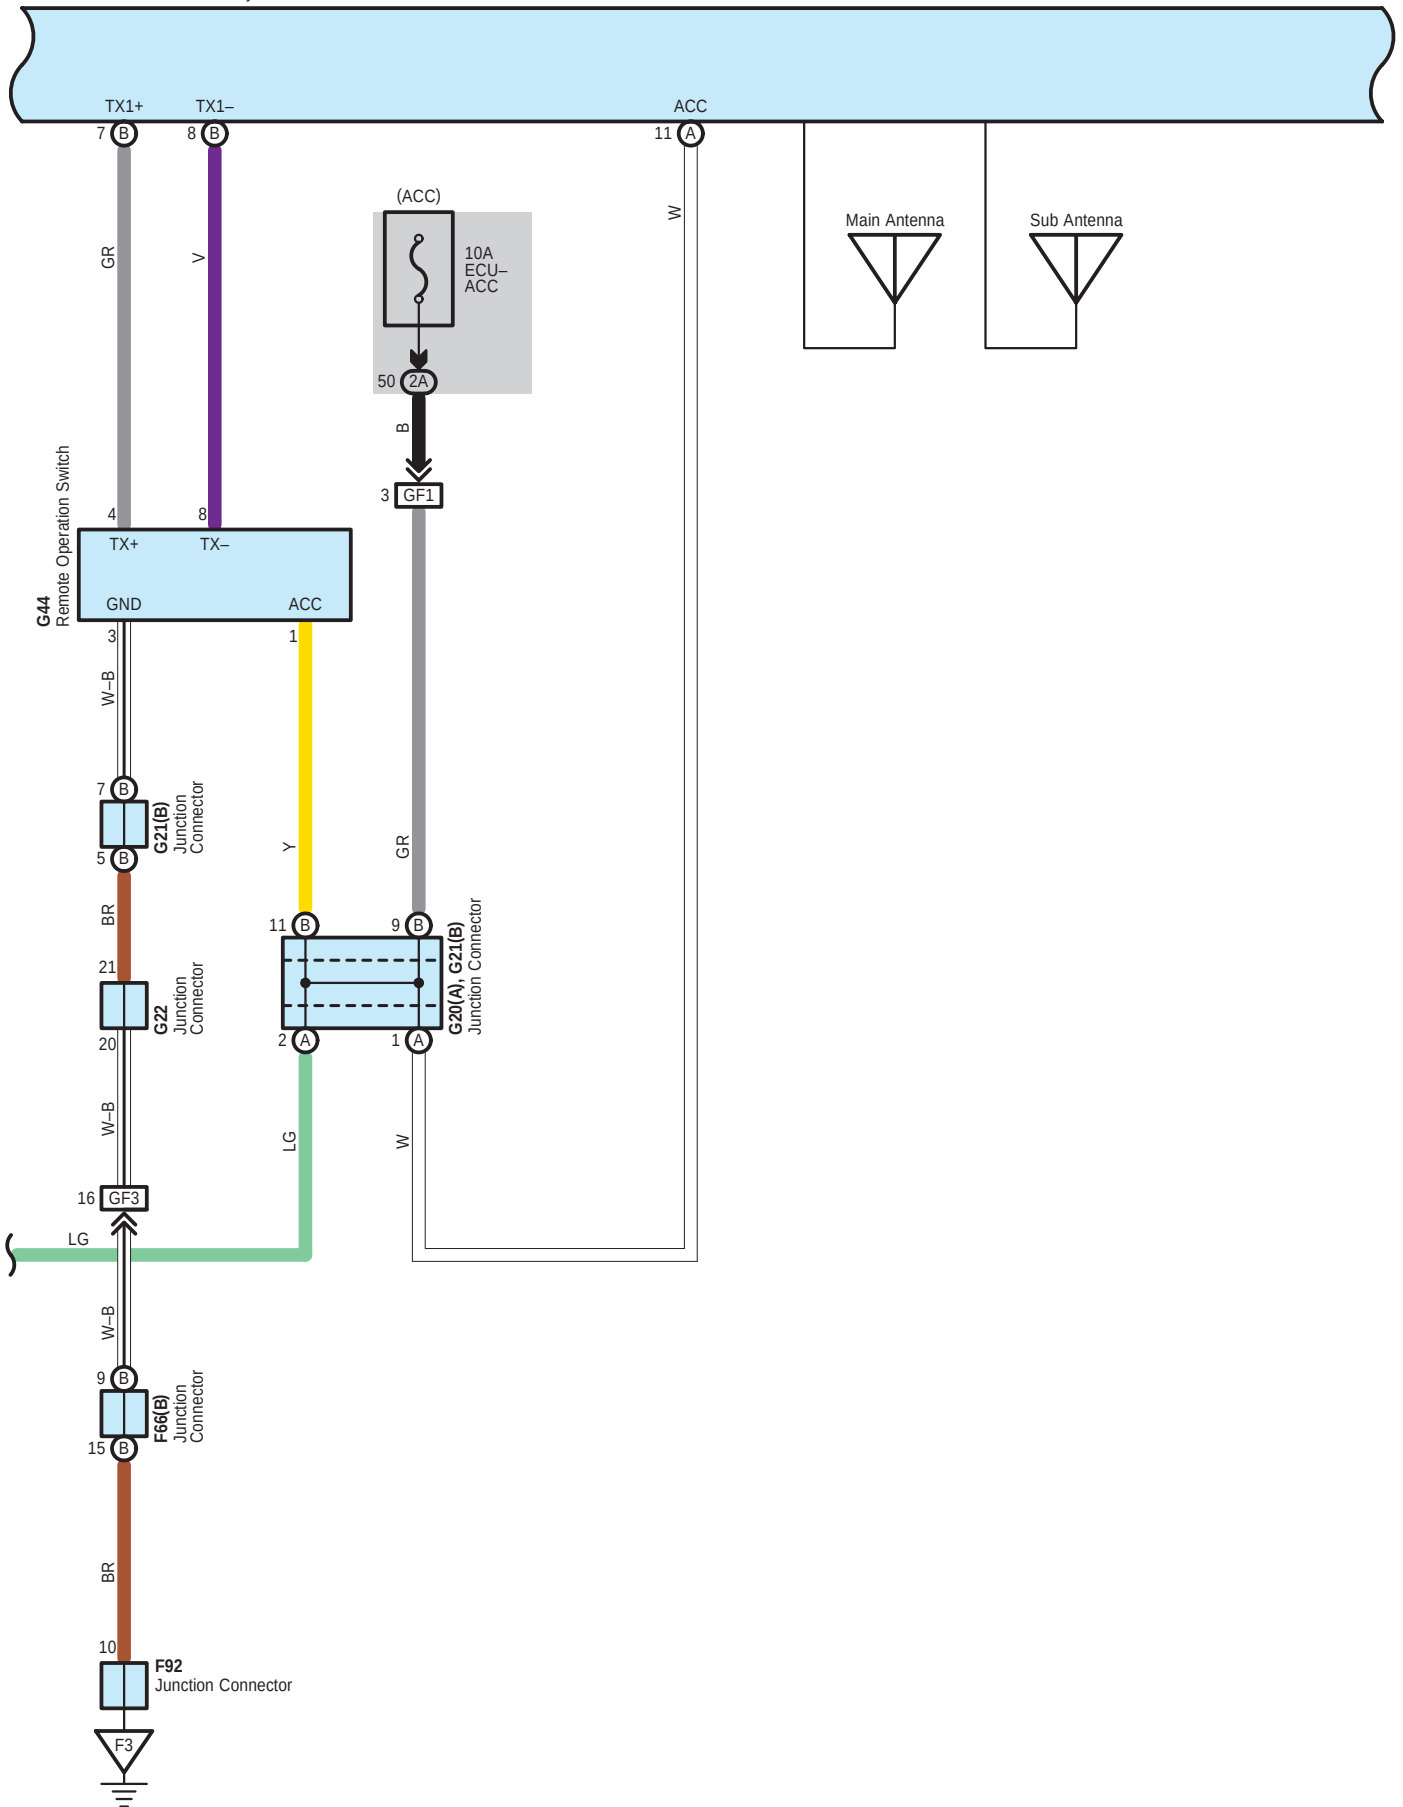

 
G37(A), G38(B), G40(C), G54(E), G58(D)
Radio Receiver Assembly

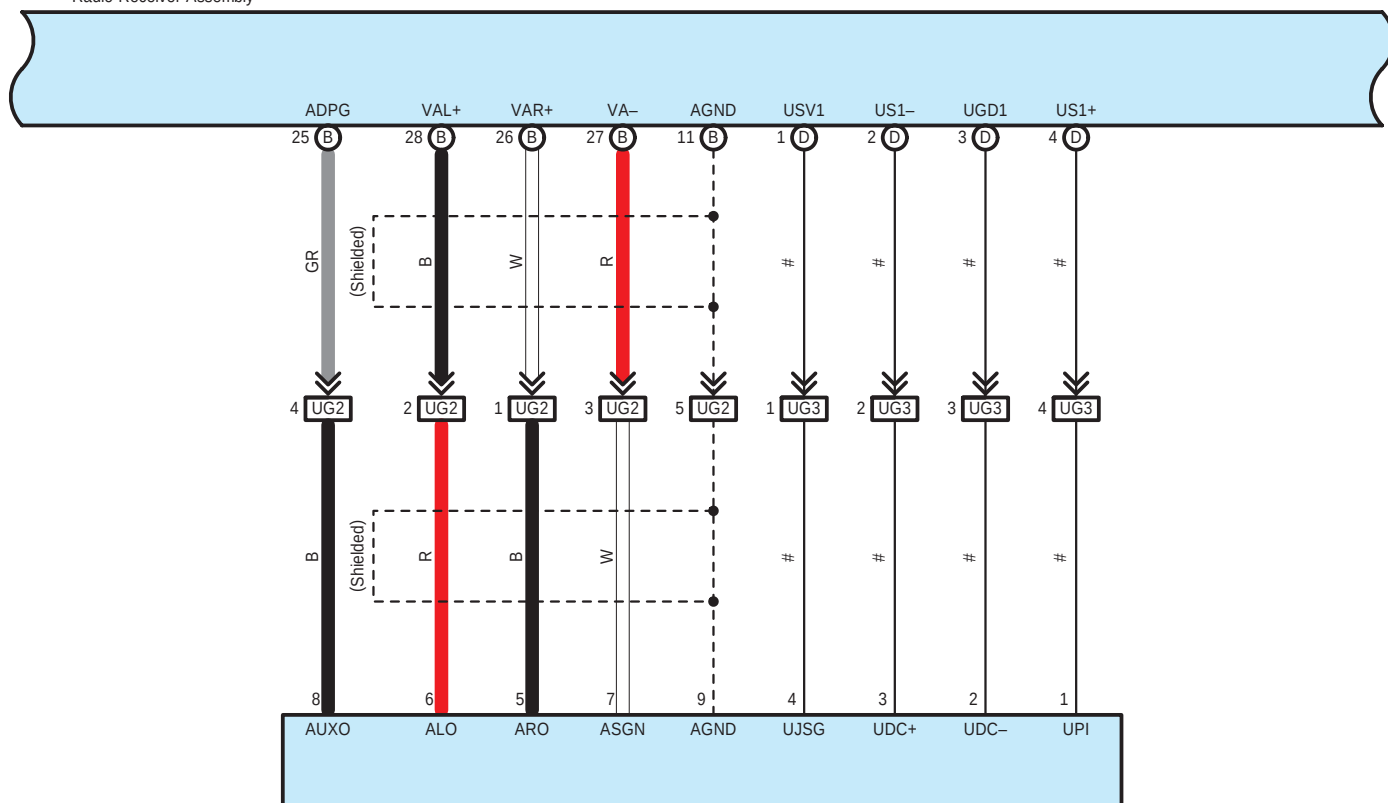


U14
No. 1 Stereo Jack Adapter Assembly

: There is no wire color information.


G37(A), G38(B), G40(C), G54(E), G58(D)
Radio Receiver Assembly

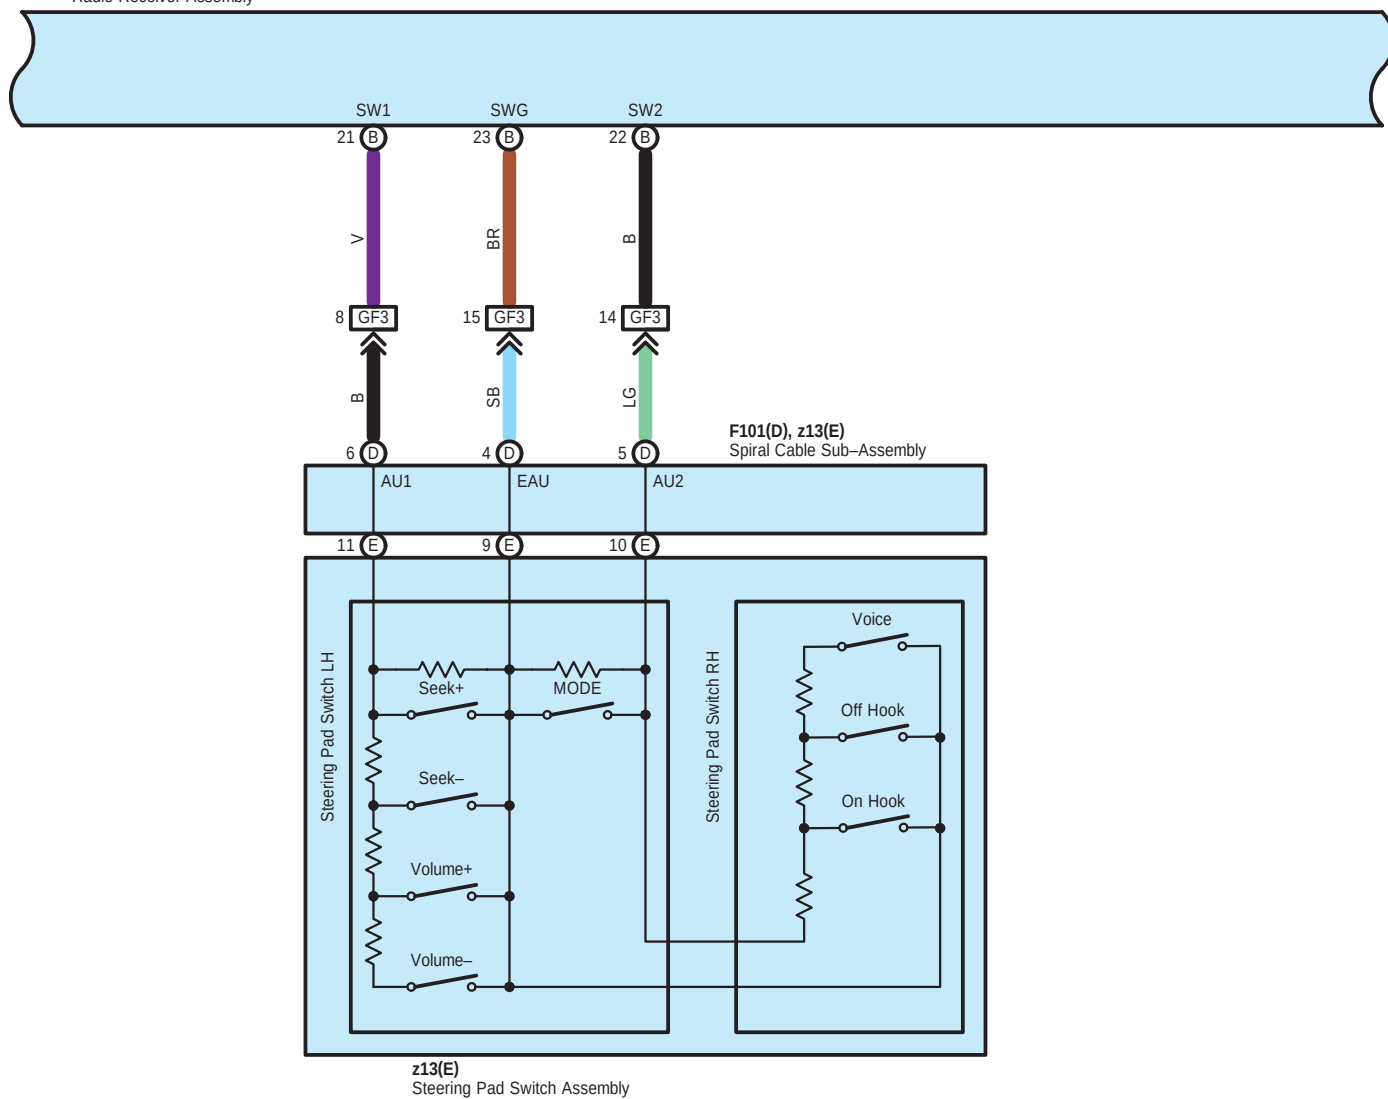

 
G37(A), G38(B), G40(C), G54(E), G58(D)
Radio Receiver Assembly

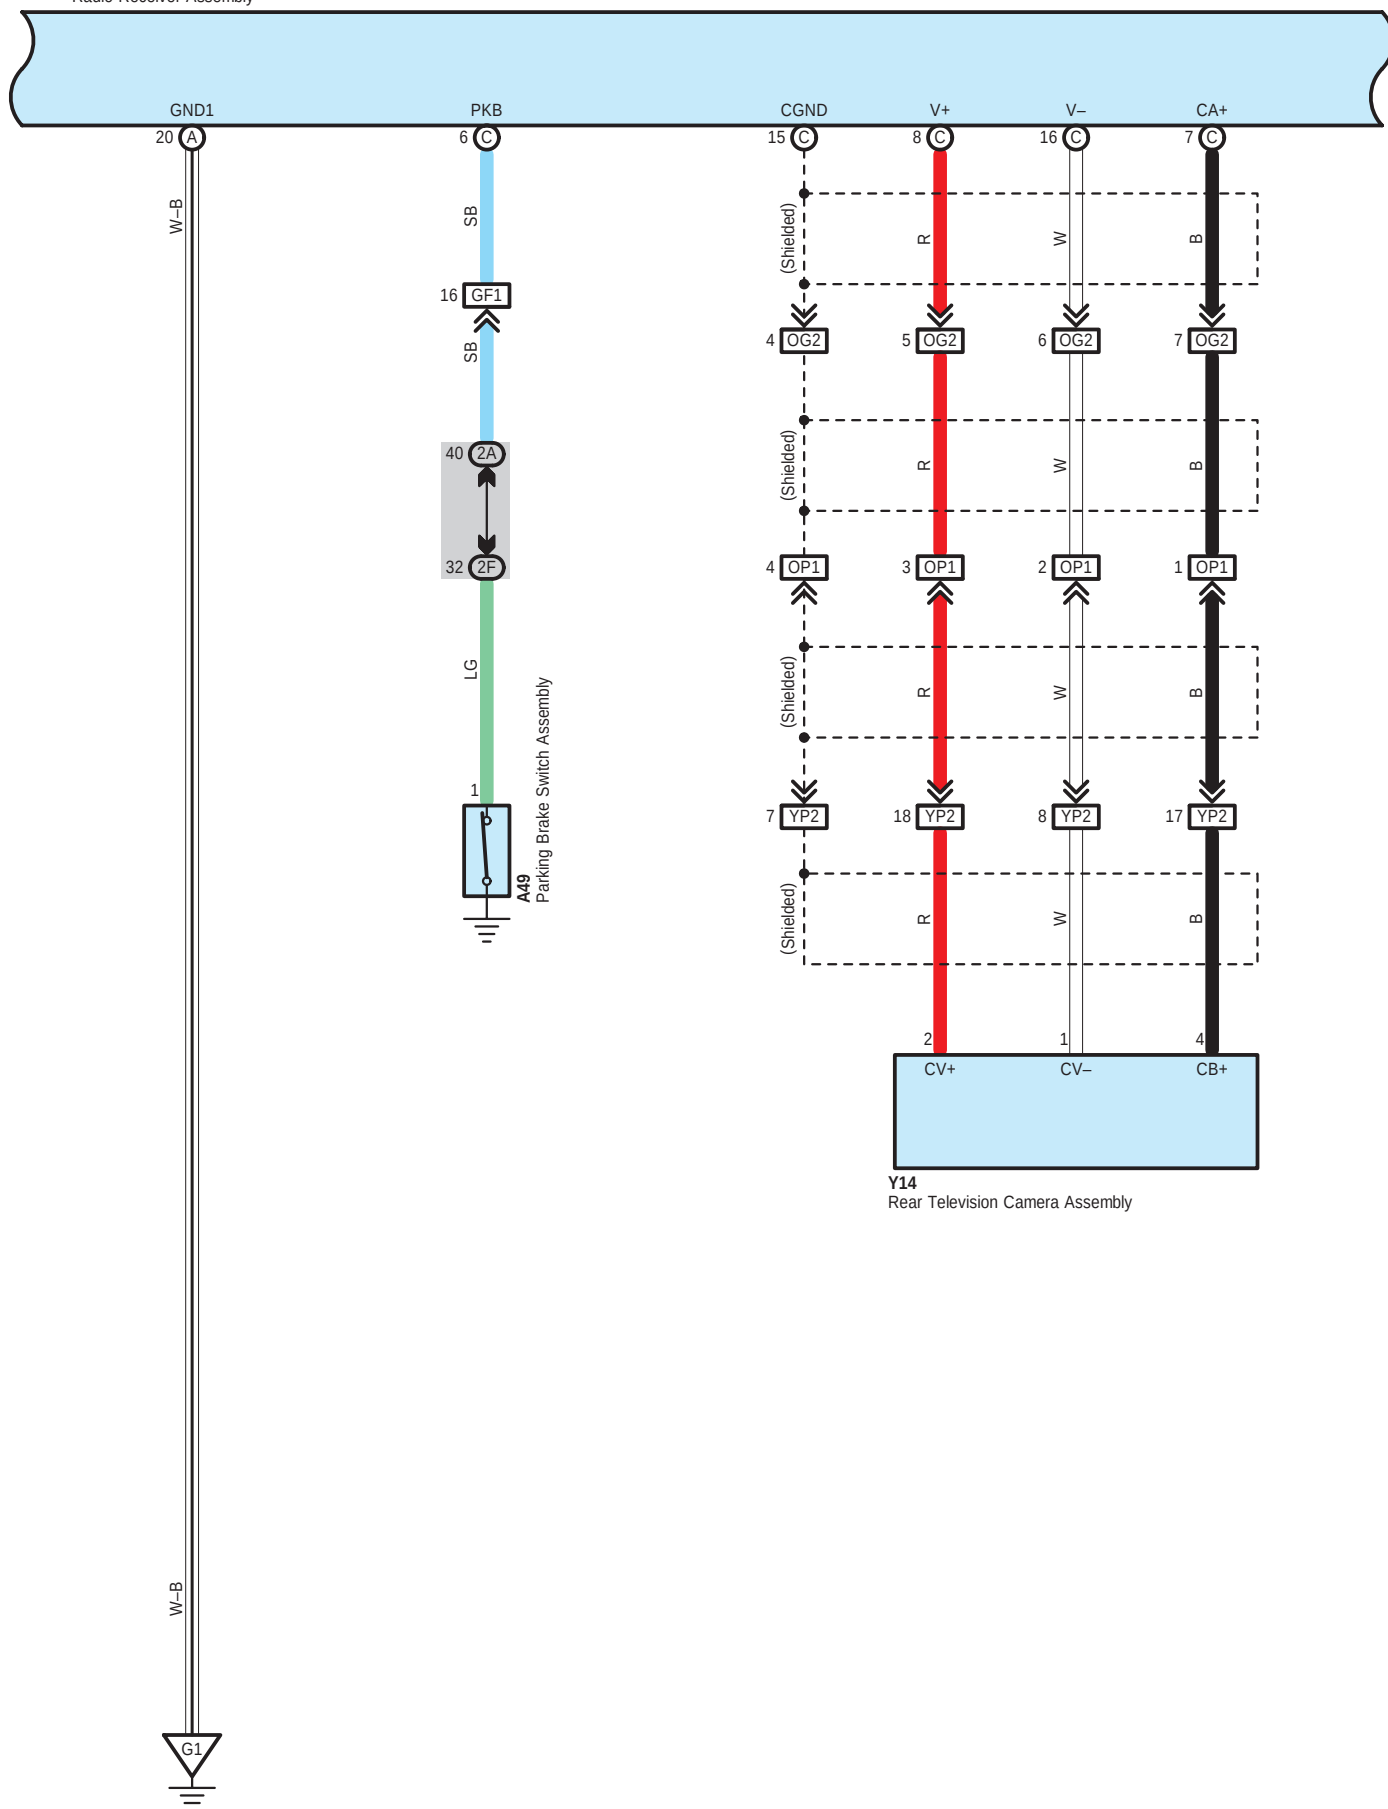

 
G37(A), G38(B), G40(C), G54(E), G58(D)
Radio Receiver Assembly

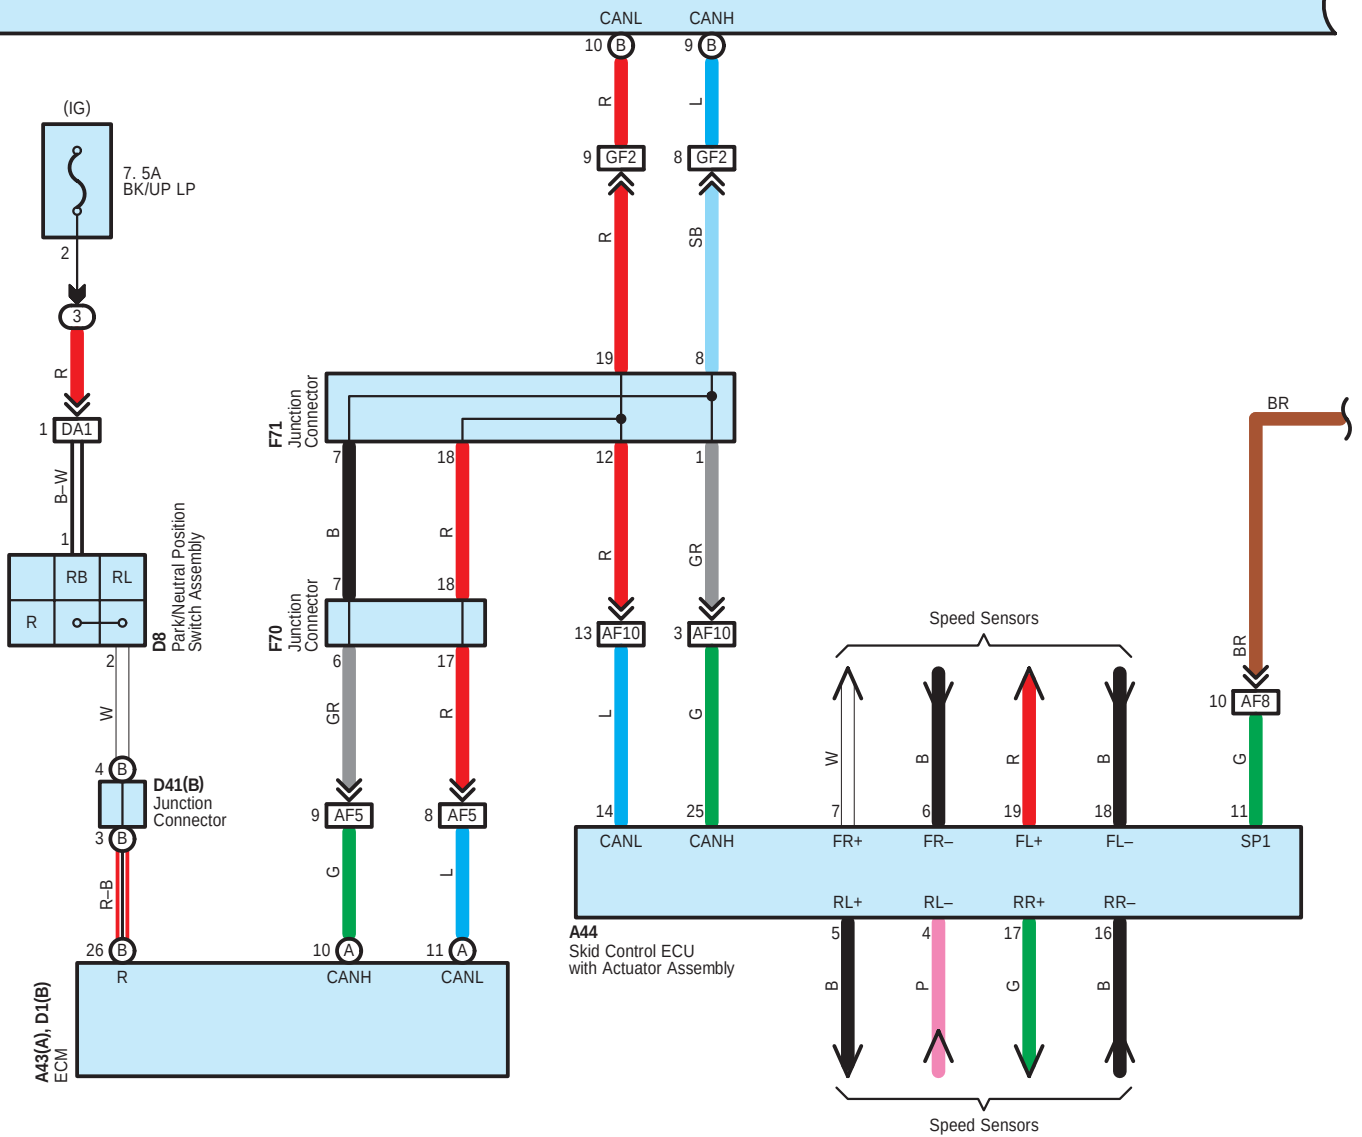

 
G37(A), G38(B), G40(C), G54(E), G58(D)
Radio Receiver Assembly

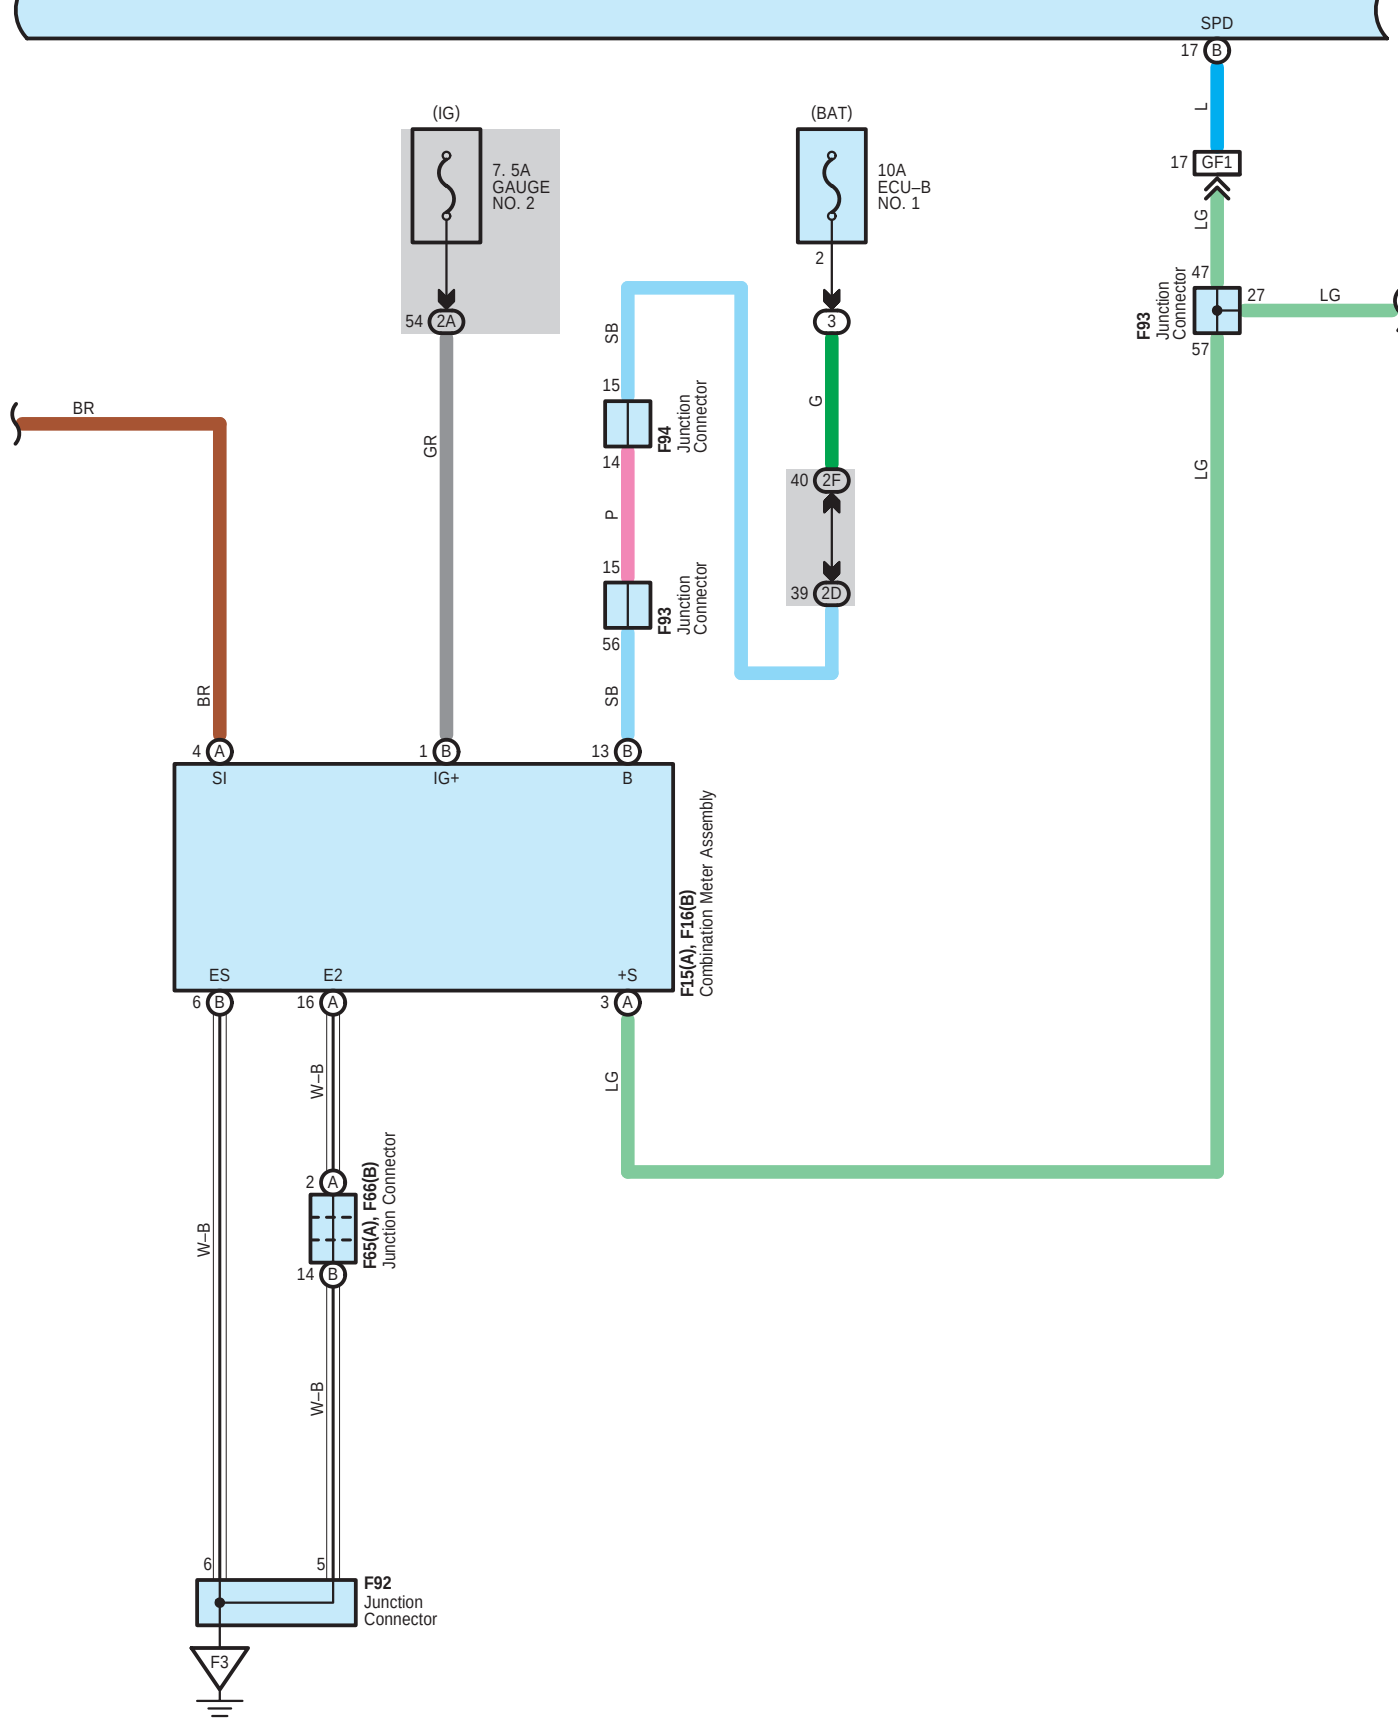

 
G37(A), G38(B), G40(C), G54(E), G58(D)
Radio Receiver Assembly

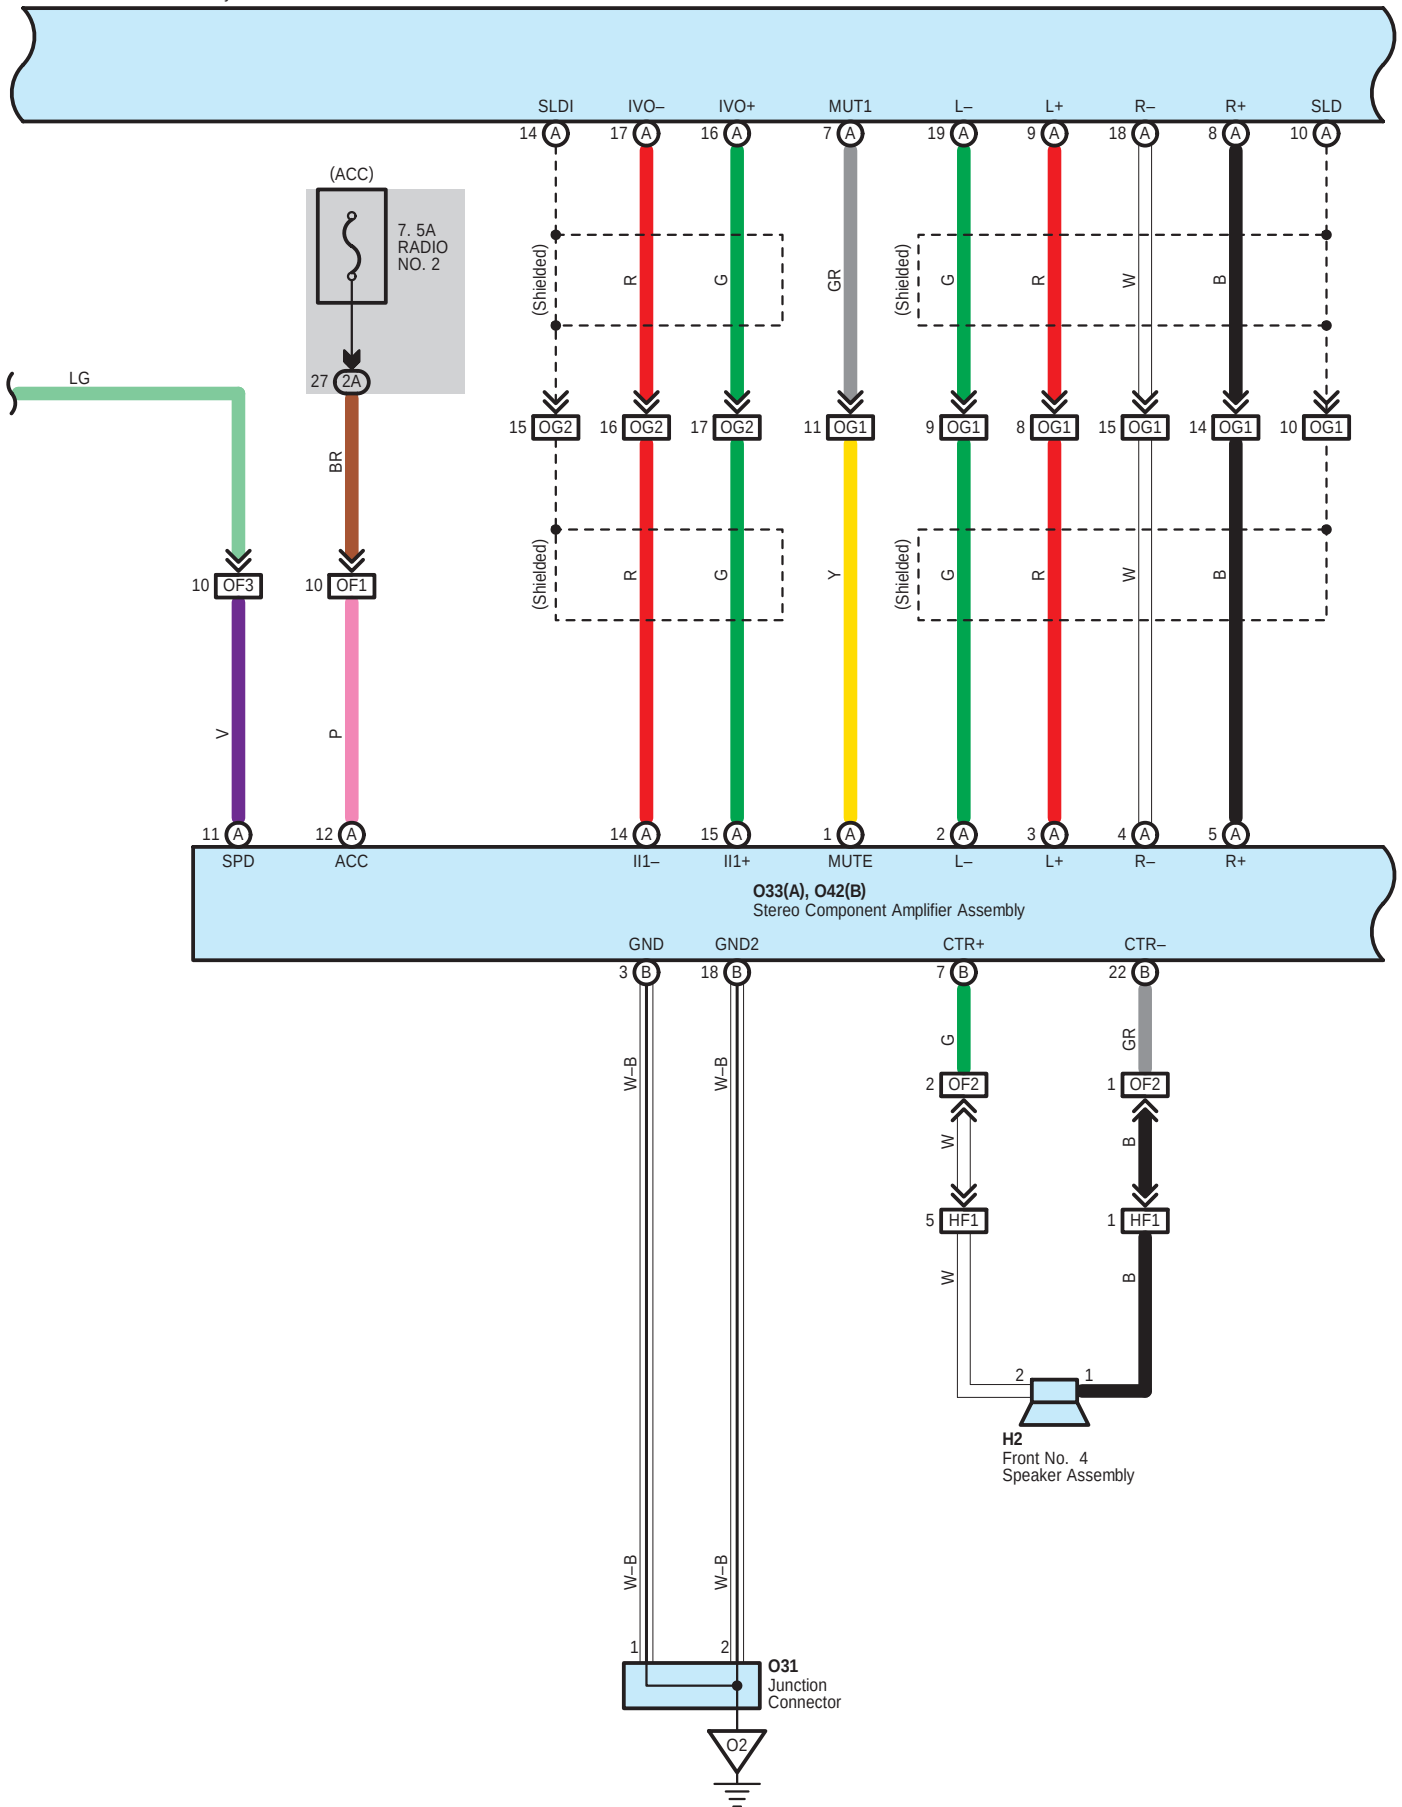

 
G37(A), G38(B), G40(C), G54(E), G58(D)
Radio Receiver Assembly

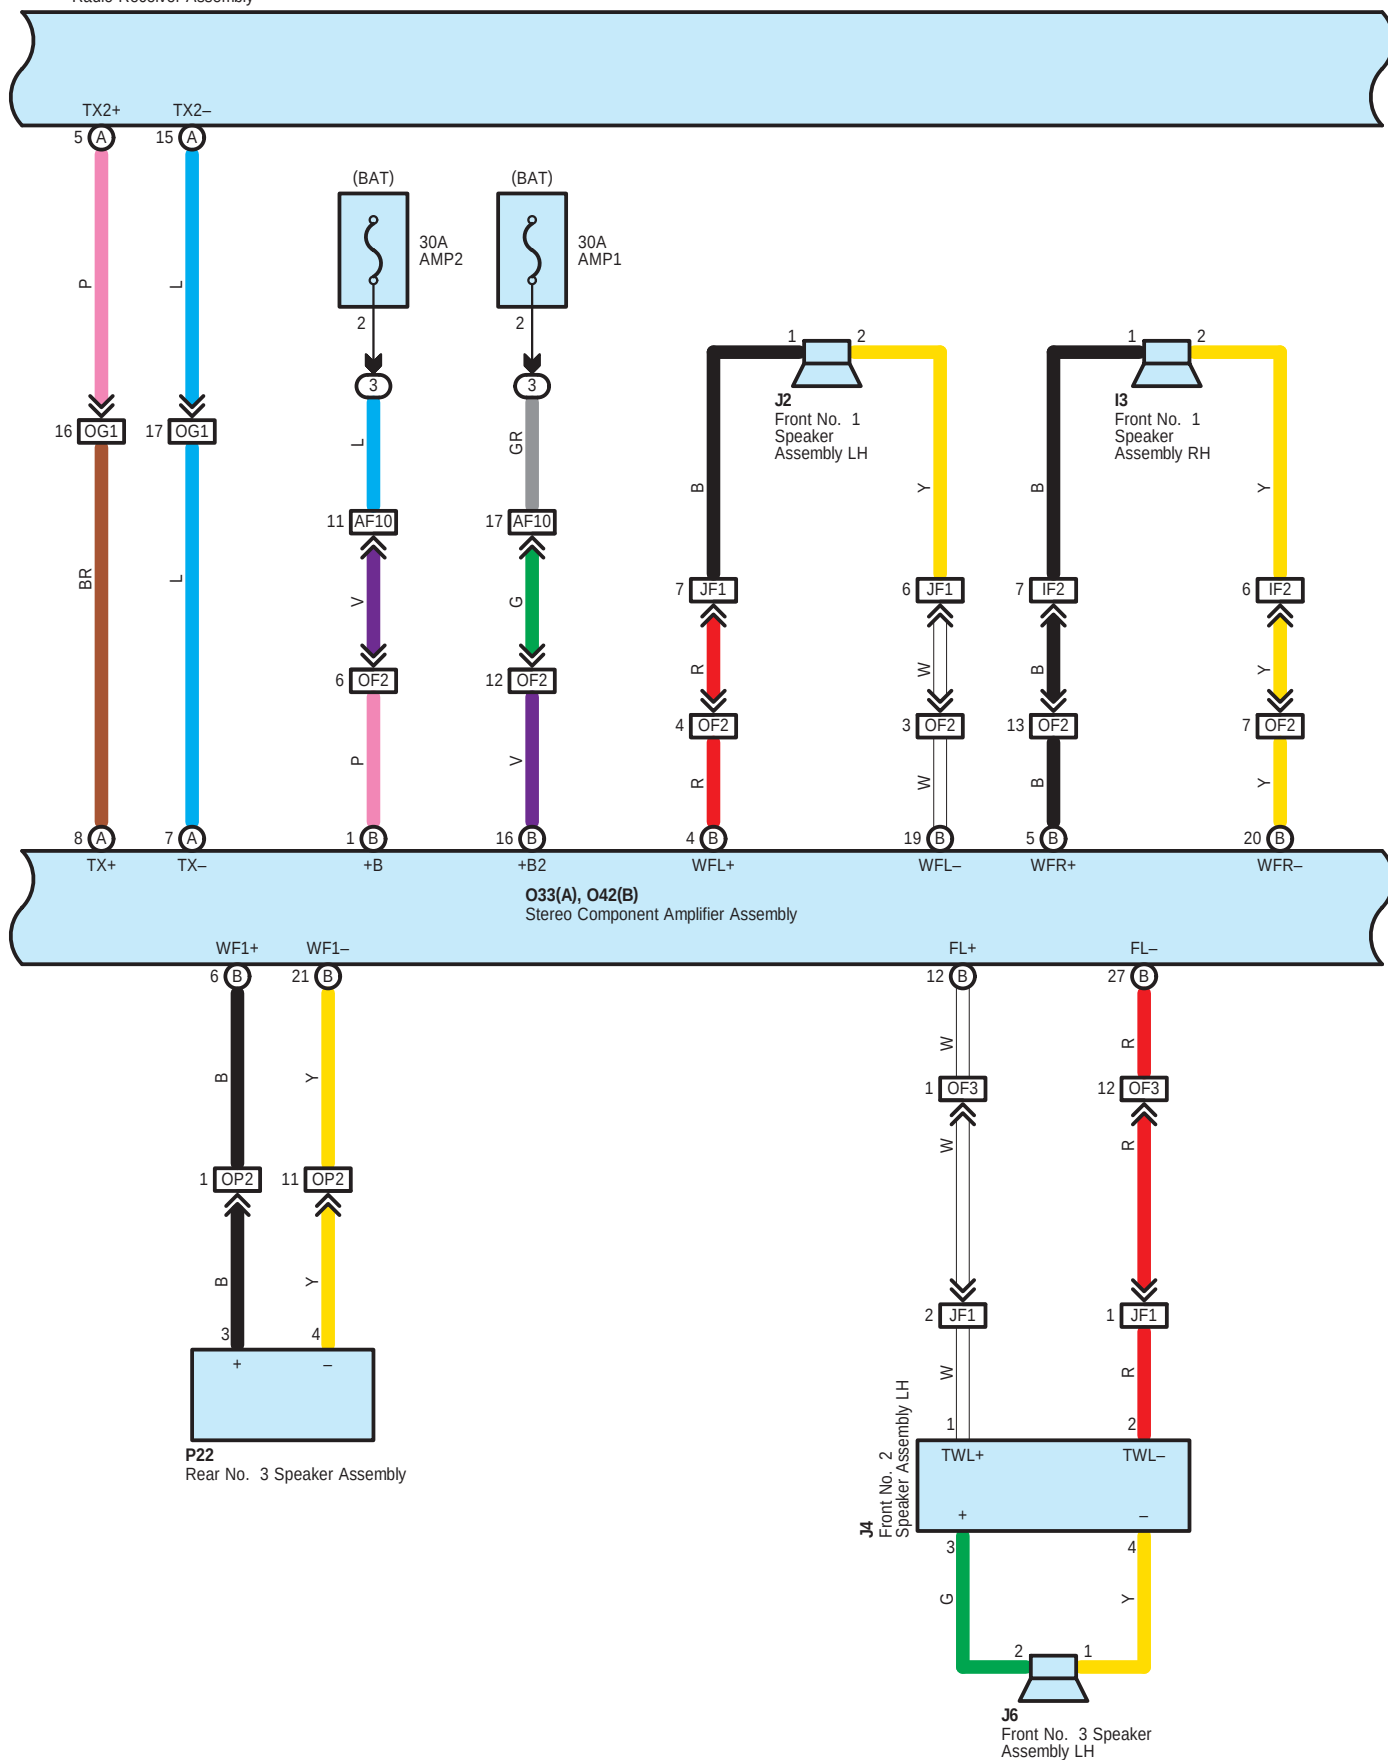

 
G37(A), G38(B), G40(C), G54(E), G58(D)
Radio Receiver Assembly

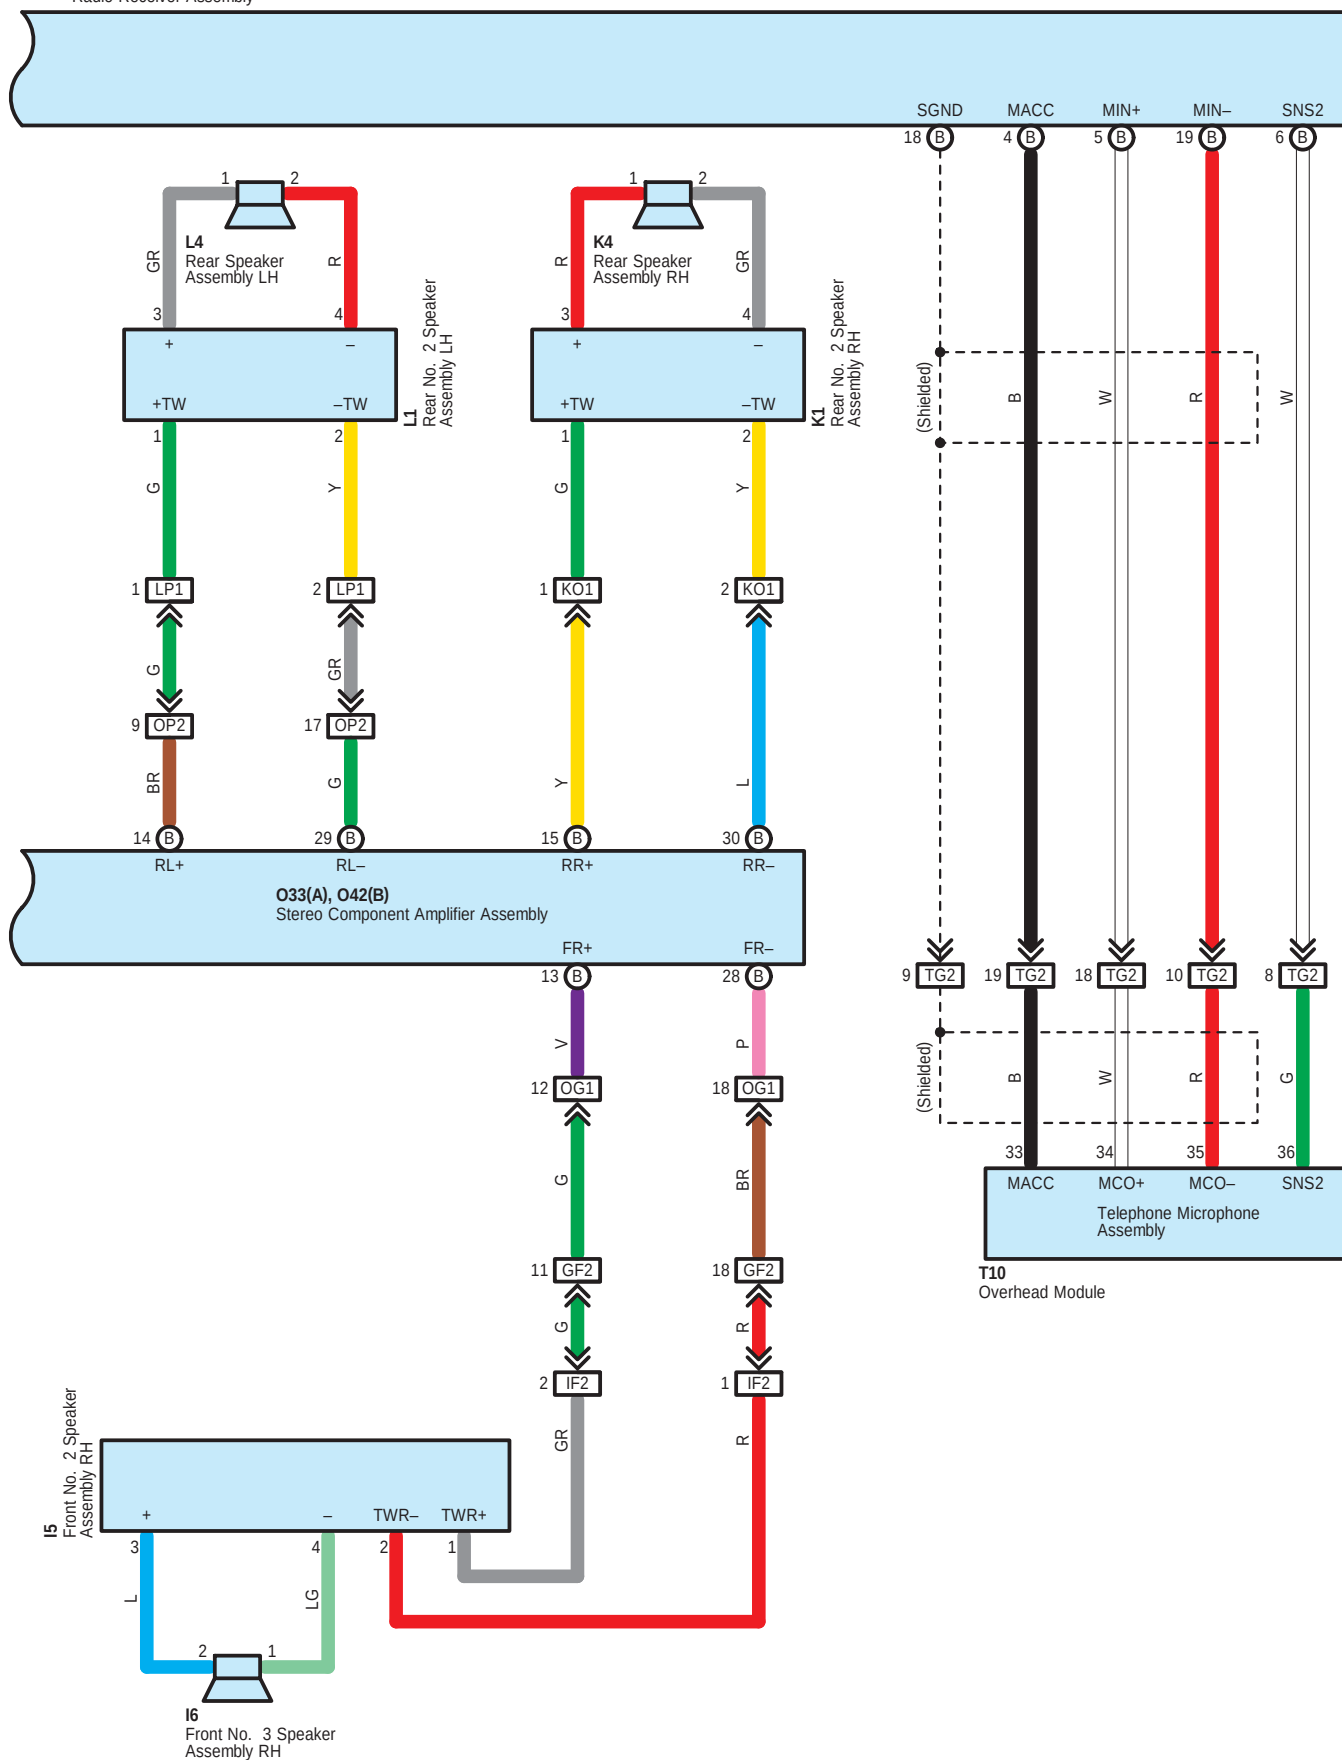

A 43
Black

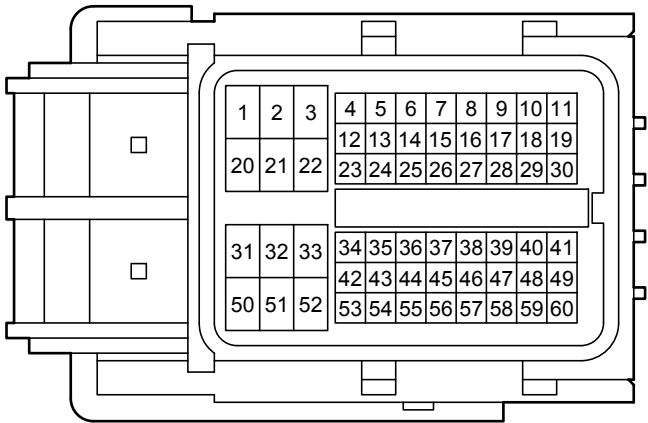 


A 44
Black

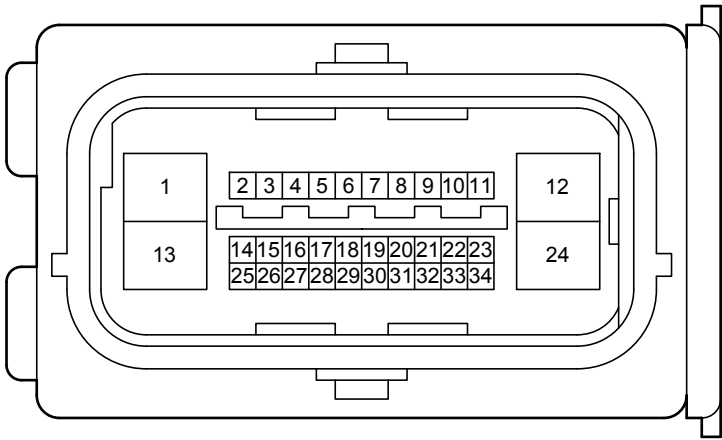 


A 49
Black



 
D 1
Black

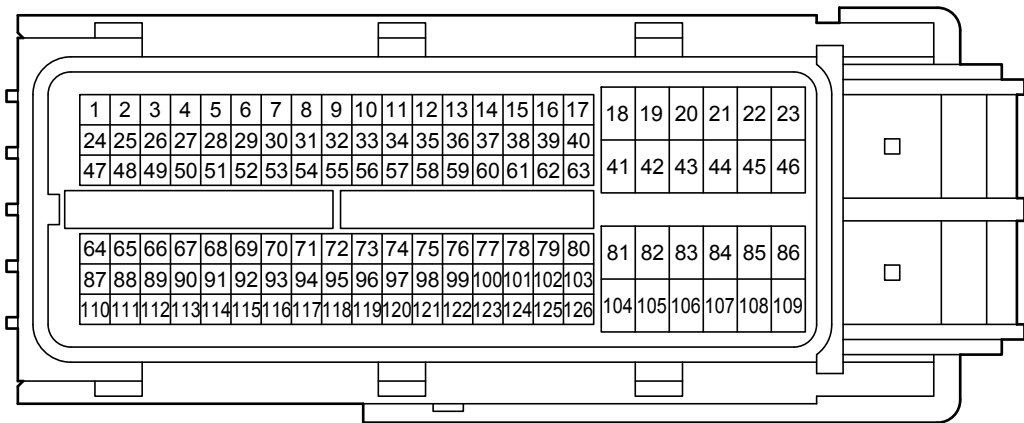


D 8
Gray

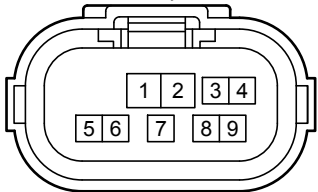 


D 41
Black

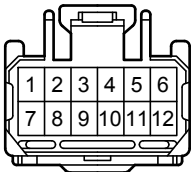 


F 15
Black

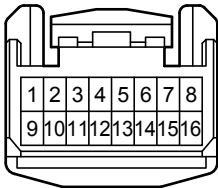 


F 16
Black

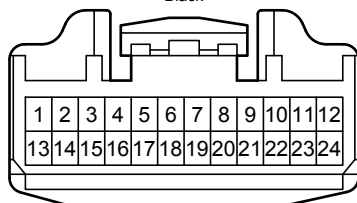 


F 65
White

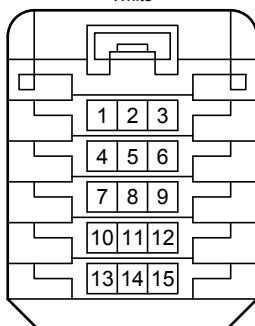 


F 66
White

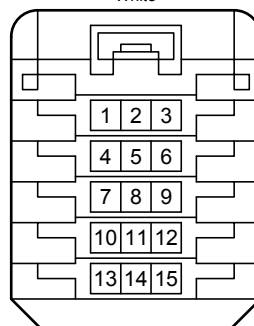 


F 70
Blue

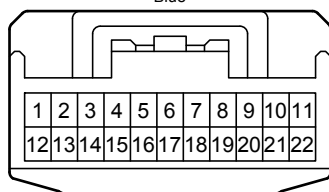 


F 71
Blue

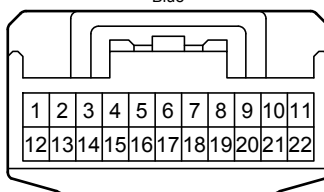 


F 92
White

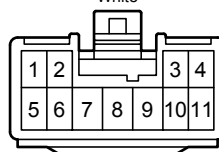 


F 93
White

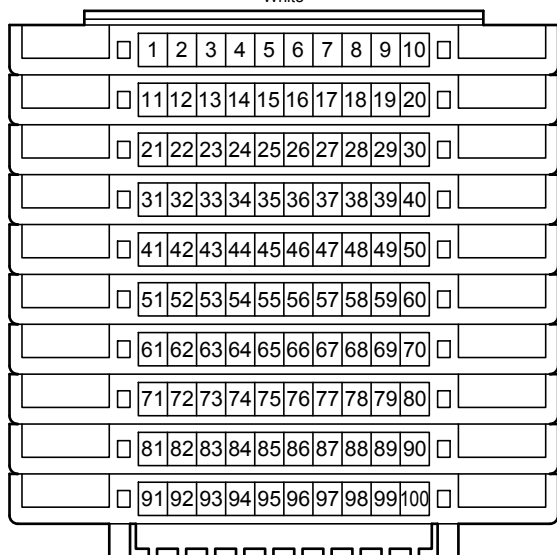 


F 94
White

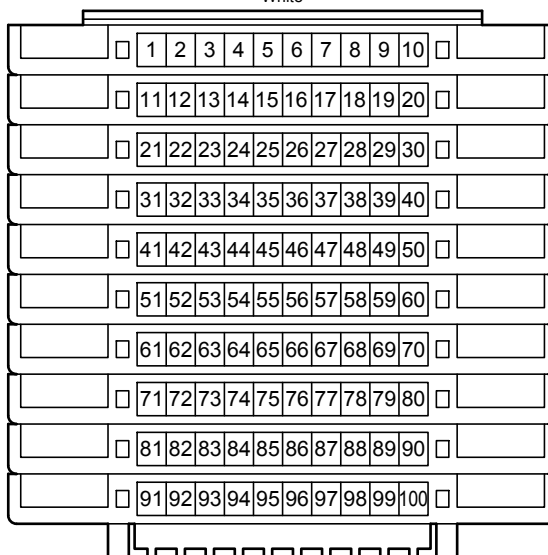 


F101
Black









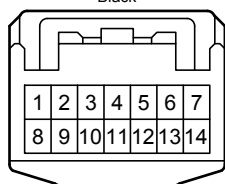 


G 20
White

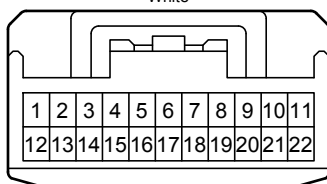 


G 21
White

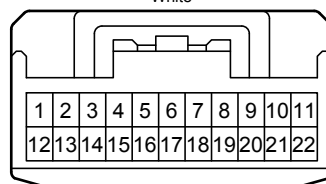 


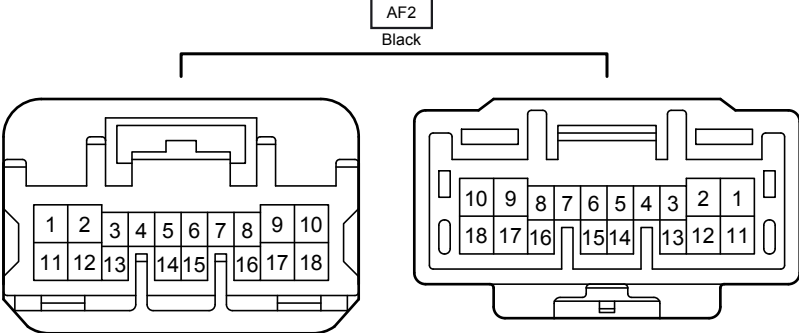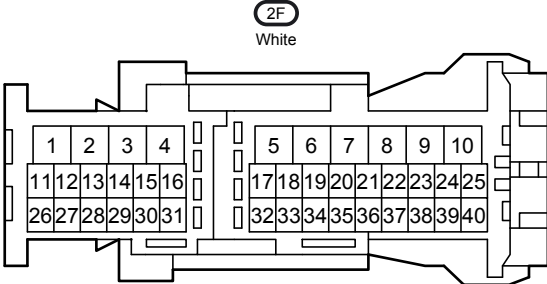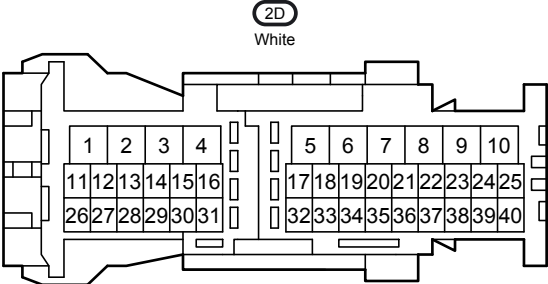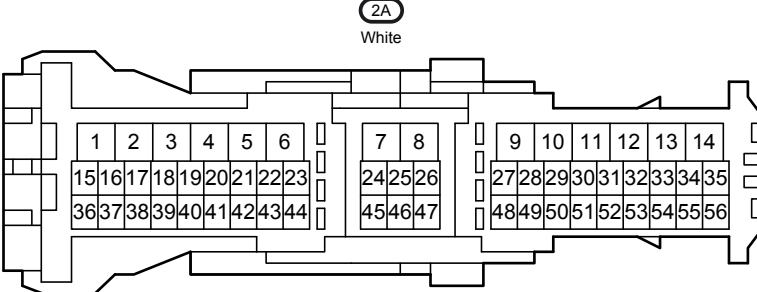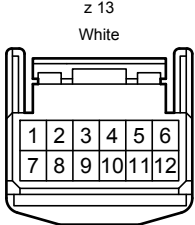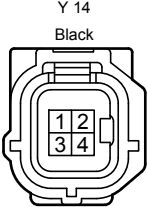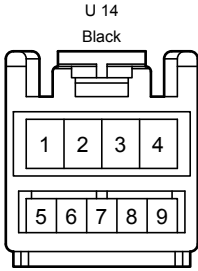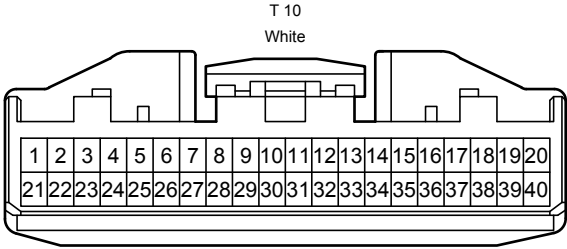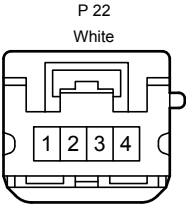         


AF5
Blue

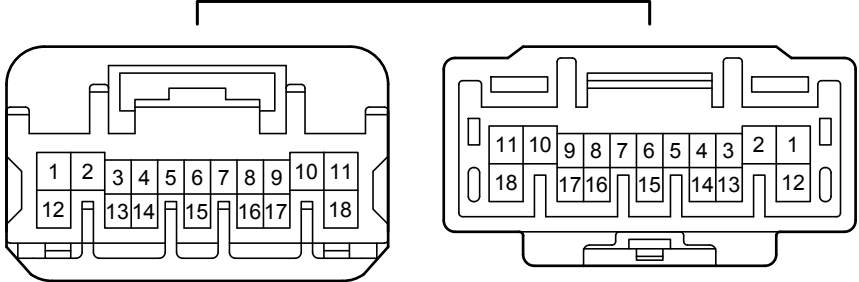 


AF8
Blue

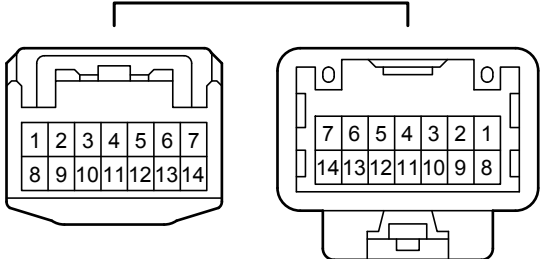 


AF10
Black

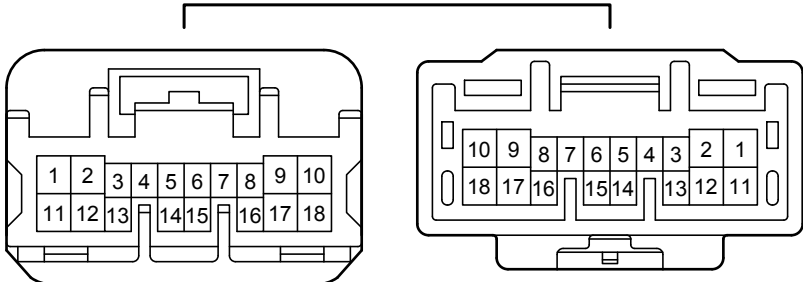 


DA1
White

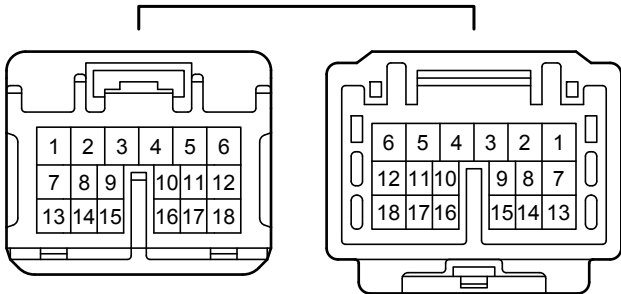 


FG1
Blue

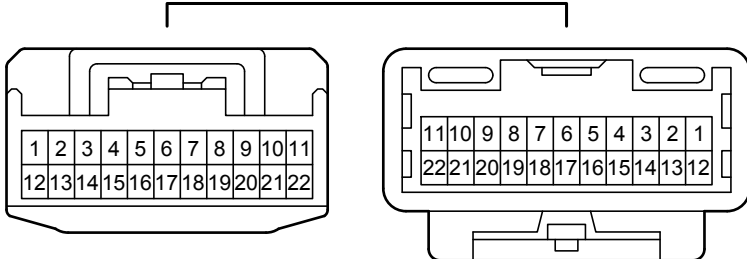 


GF1
Gray

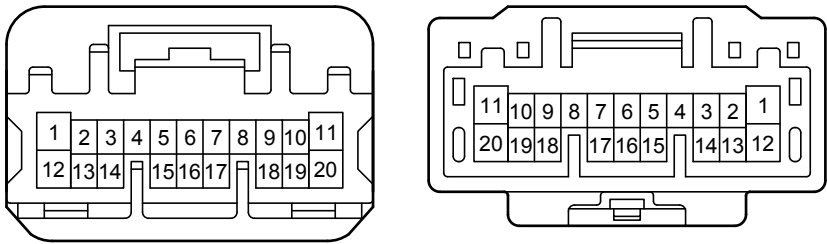 


GF2
Blue

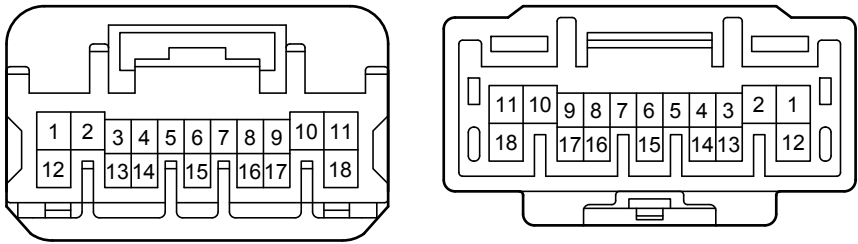 


GF3
Black

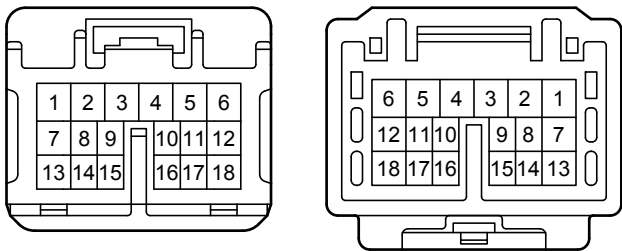 


HF1
White

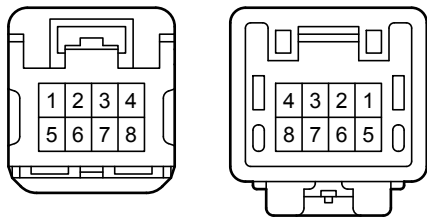 


IF2
White

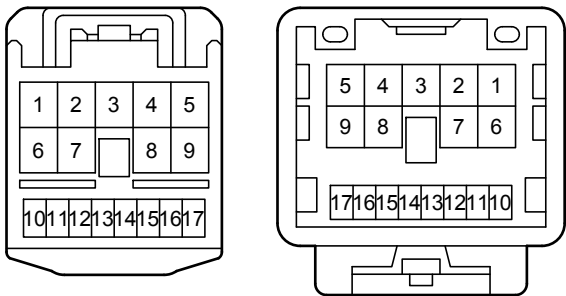 


JF1
White

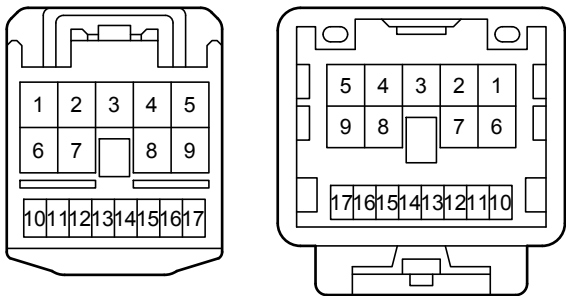 


KO1
White

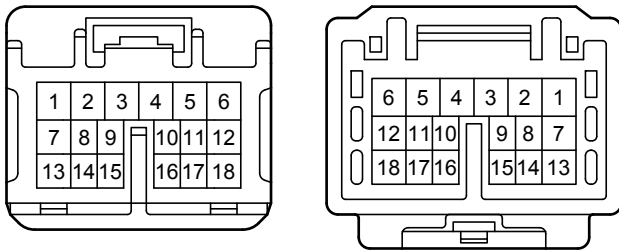 

LP1
White

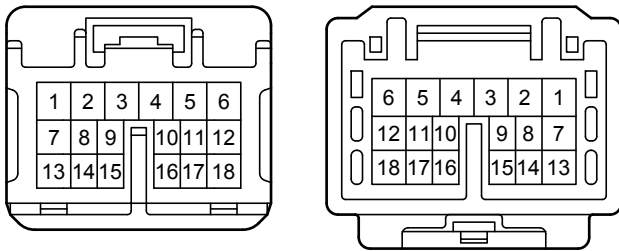 

OF1
White

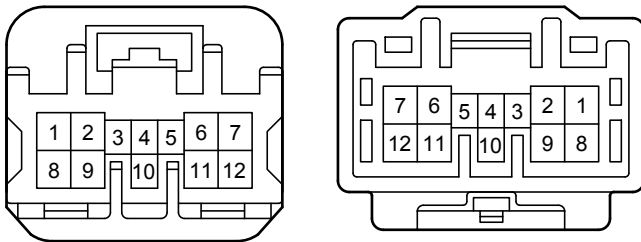 

OF2
Black

